Baja Designs 447059 Installation Instructions

447059

Part number: 447059

trailfortress.com/baja-designs-led-rock-light-kit-447059

Scan for fitment, price and install help

Rock Light Wiring Harness Instructions



185 Bosstick Boulevard • San Marcos • CA • 92069

Phone 760-560-2252 x3 • Fax 760-560-0383

info@bajadesigns.com • www.bajadesigns.com

trailfortress.com/baja-designs-led-rock-light-kit-447059

LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.
These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

Exclusions:
Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.
Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.
Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.
Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

Indemnification:
Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies

trailfortress.com/baja-designs-led-rock-light-kit-447059

Rock Light Harness Instructions

Tools Required

- 3mm Allen wrench
- ¾” Drill or step drill bit
- 10mm or ½” Socket Wrench (*battery terminal hardware varies)
- Pliers

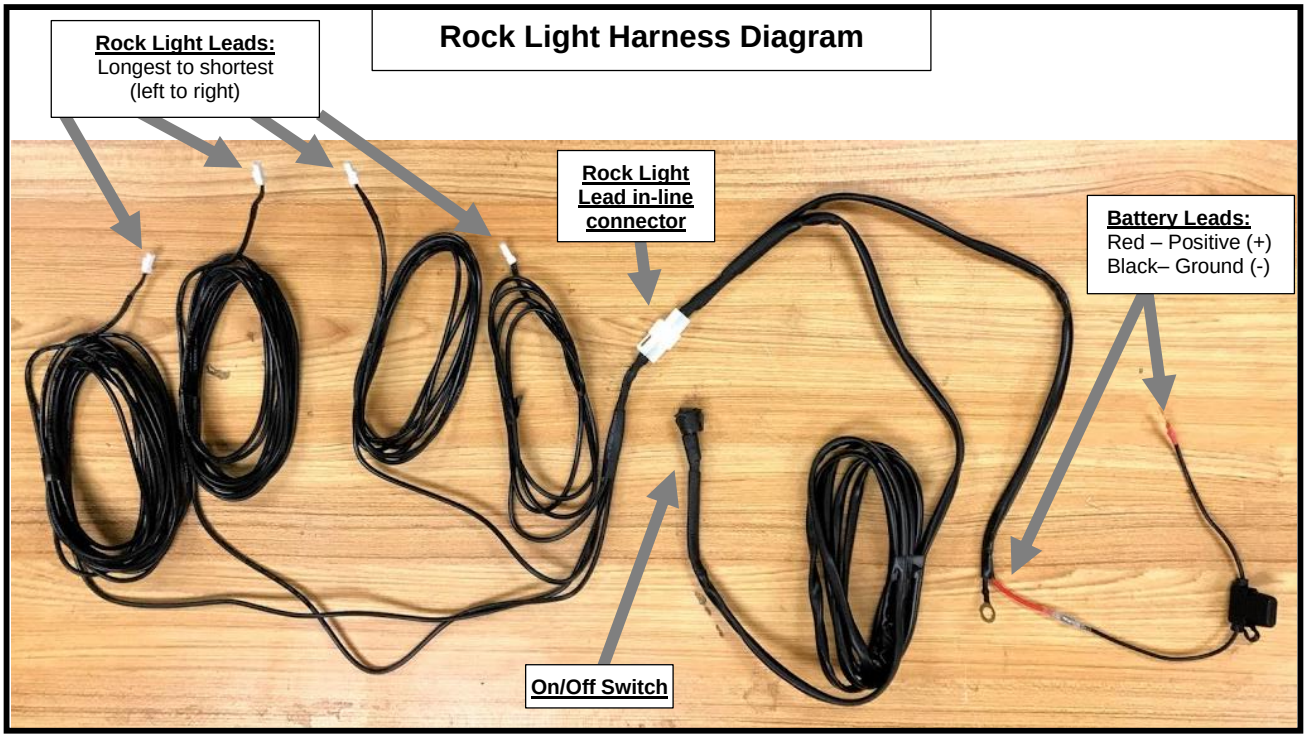

1. To begin, make sure the vehicle is in park and open the hood.

2. Determine an appropriate switch mounting location in the cab and use the ¾” stepped drill to make a mounting hole.

3. Take a quick photo of the On/Off switch wiring terminal orientation. Using pliers, remove the switch terminals. Route the switch harness leads through the firewall and through the switch mounting location, reattach the switch terminals, and mount the switch.

4. Remove the ground (+, black) battery lead hardware and then the positive battery lead (+, red) hardware on the vehicle. Place the battery leads of the rock light harness over the respective (+) and (-) battery terminal studs and replace the nuts.

5. Unplug rock light lead in-line connector and route the four extension wires with the white connectors along fender, firewall and/or frame rail to each corner of the truck. The longest length is intended to go to the rear of vehicle on the opposite side of the battery’s mounting location.

6. Mount the rock lights in their preferred location on vehicle such as in wheel wells, under chassis, on rock rails, etc. and reconnect rock lights to their connectors. **Metal surfaces only.**

Note: For ease of installation cutout the provided template and center punch the mounting hole locations before drilling. The mounting holes are 2-1/32” apart (2.03”) center to center.

7. Zip tie all loose wire and be sure to keep the wiring away from hot, moving or rotating components.

Rock and Dome light drill template
(Cutout with scissors for mockup, then use 11/64” drill bit)

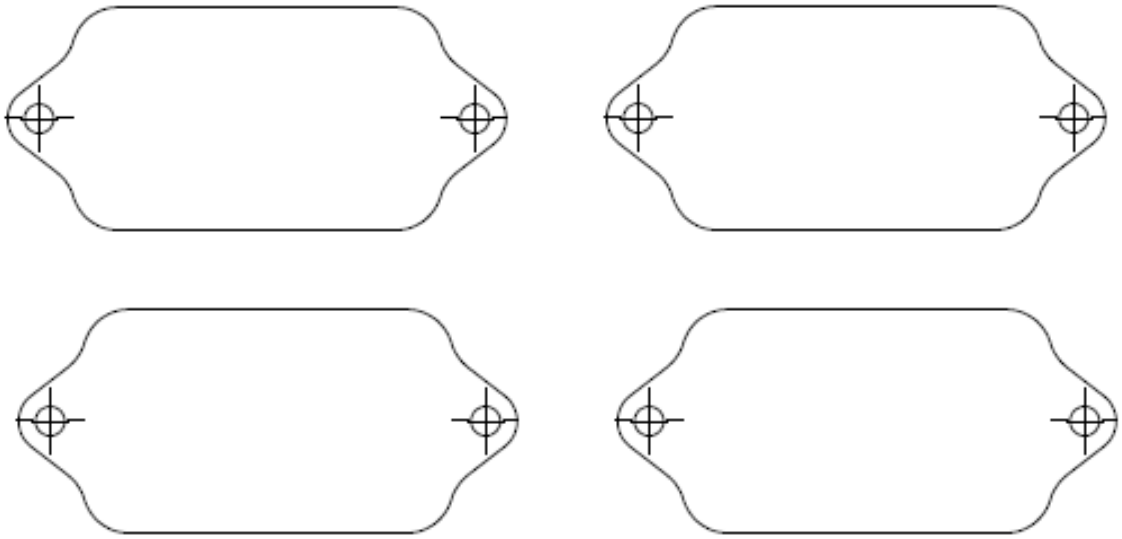

Re-torque all the fasteners after 100 miles.

Your install is now complete! Thank you for choosing Baja Designs.

trailfortress.com/baja-designs-led-rock-light-kit-447059