# Baja Designs 630816 Installation Instructions

Squadron Sport Fog Pocket Kit for Ford Trucks

Part number: 630816


trailfortress.com/baja-designs-ford-squadron-sport-fog-pocket-light-kit-630816


Scan for fitment, price and install help

63-0816

# 2017 Ford Super Duty Fog Pocket Kit

| ITEM NO. | PART | QTY. |
|---|---|---|
| 1 | 63-0814 Ford Super Duty Fog Pocket PS Mount (17+) | 1 |
| 2 | 63-0815 Ford Super Duty Fog Pocket DS Mount (17+) | 1 |
| 3 | Squadron | 2 |
| 4 | 20-1278 1-4-20 Extruded U Nut 1.25inch long | 4 |
| 5 | 20-1026 6mm oversized washer | 4 |
| 6 | 20-1287 1-4-20 0.875inch bolt | 4 |
| 7 | 60-0039 H10 to 2 pin weatherpak | 2 |

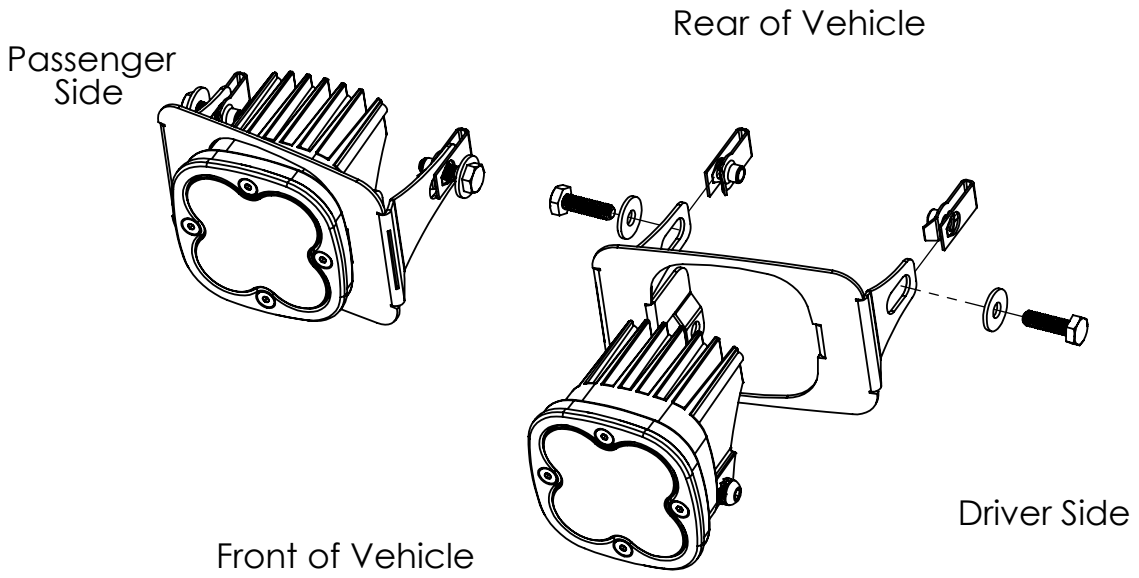

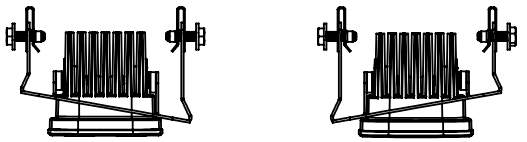
Top View

Instructions:

1. Unplug the stock fog lights on the back of the light.
2. Depending on the model truck you have you may need to remove the bumper support bracket by removing the 4 bolts holding it to the bumper. This will allow you to access both sides of the fog pocket.
3. Carefully remove the stock light by prying on the two tabs on both sides of the light using a flat blade screw driver while pushing it from the rear. Do not pry too hard or the tab on the housing will snap off. Once one side is loose the light should be fairly easy to remove from the housing surrounding the light.
4. Install the hardware supplied in the orientation shown above.
5. Slide the light and bracket into the fog pocket area and use the 1/4-20 bolt and 6mm washer to fasten the light into the same spot as the stock fog light. Note: To reach the outside hole for the fog light it may be easier to remove the braces and shrouds behind the fog light area although it can be done without doing so.
6. Once the lights are securely fastened in place, use the plug and play wiring adapter to connect your lights to the stock wiring harness.