TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

DV8 Offroad ABBR-02 Installation Instructions

Third Brake Light Extension Bracket for Ford Bronco

Part number: ABBR-02

trailfortress.com/dv8-offroad-2021-22-ford-bronco-3rd-brake-light-extension-bracket-abbr02

Scan for fitment, price and install help

6400 SYCAMORE CANYON BLVD.
RIVERSIDE, CALIFORNIA 92507
855-680-9595
WWW.DV8OFFROAD.COM

PRODUCT
INSTALLATION MANUAL

Third Brake Light Extension Bracket

2021+ Bronco

ABBR-02Z



TOOLS REQUIRED

- T30 Torx Bit
- #3 Allen Head
- 10mm Wrench

SKILL LEVEL

- Novice/Intermediate
- 1 Person

Little skill level required.

TIME REQUIRED

- Approximately .5 Hours

Time to install this should take about .5 hours

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

• *Always wear eye protection when operating power tools*

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover


trailfortress.com/dv8-offroad-2021-22-ford-bronco-3rd-brake-light-extension-bracket-abbr02

STEP 1

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. **You will need to remove your spare tire for this installation.**

Hardware Included:

(4) M6x25mm Allen head Bolts
(4) M6 Nuts
(4) M6 Flat Washers

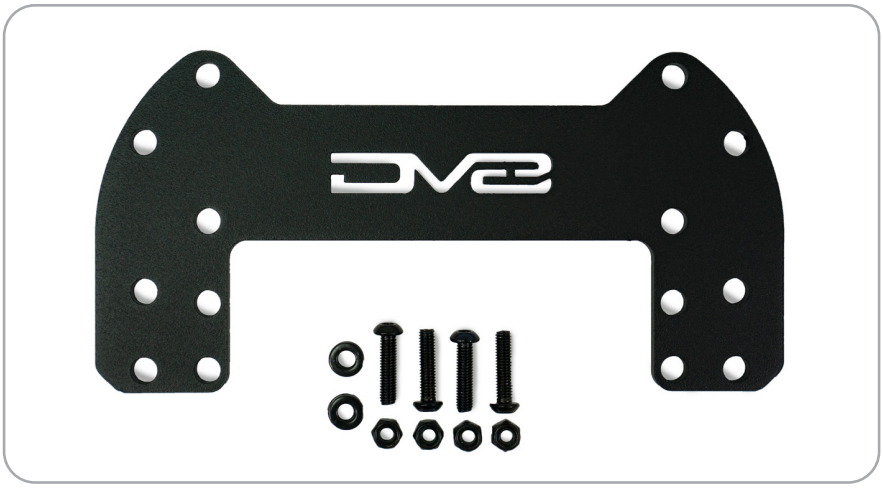

STEP 2

Using a T30 Torx bit, begin by removing the lower four screws holding the third brake light to carrier.





STEP 3

Lift away third brake light and set off to the side.



STEP 4

Place your new relocation bracket on the front of the carrier and align the holes. Using the provided M6 hardware, loosely secure bracket to carrier.

NOTE: The lower holes on the bracket will align differently if you have the Sasquatch package or not.






STEP 5

Reusing the factory screws and the T30 torx bit, place the third brake light on the backside of the bracket and secure.



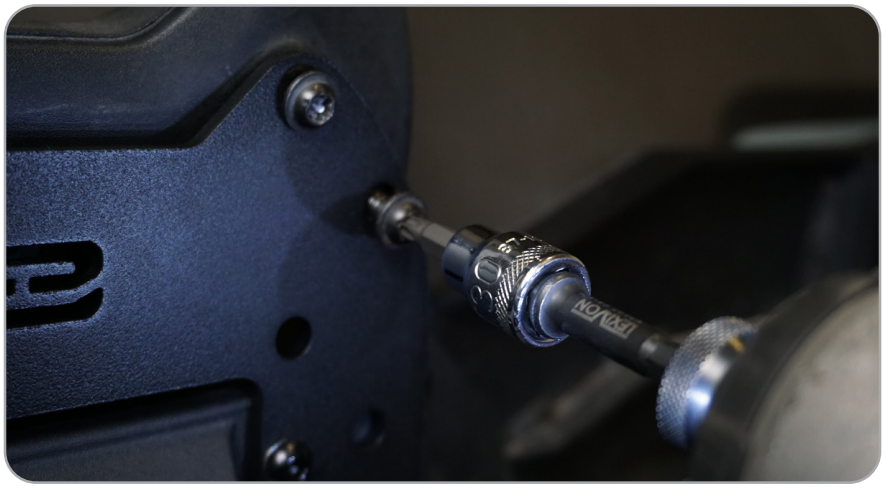

STEP 6

Secure the lower hardware with a #3 allen head and 10mm wrench.



STEP 7

Double check all hardware is secure and reinstall spare tire.

