TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

DV8 Offroad FDBR-03 Installation Instructions

Fender Flare Deletes for Ford Bronco (2021-2023)

Part number: FDBR-03

trailfortress.com/dv8-offroad-fender-flare-deletes-for-the-2021-bronco-fdbr03

Scan for fitment, price and install help

6400 SYCAMORE CANYON BLVD.
RIVERSIDE, CALIFORNIA 92507
855-680-9595
WWW.DV8OFFROAD.COM

PRODUCT
INSTALLATION MANUAL

4-Door Fender Deletes

2021+ Bronco
FDBR-03



TOOLS REQUIRED

-#4 Allen Head
-7mm Socket
-10mm Socket/Wrench
-Phillips Screwdriver
-Push Pin Removal Tool

SKILL LEVEL

- Novice/Intermediate
- 1 persons

Little skill level required, you can easily install it by yourself.

TIME REQUIRED

- 2.5 Hour

Time to install this should approximately take 2.5 hours.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

• *Always wear eye protection when operating power tools*

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information


1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

STEP 1

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.

Hardware Included:

(22) M6x30mm Bolts
(22) M6 Lock Nuts
(22) M6 Flat Washer

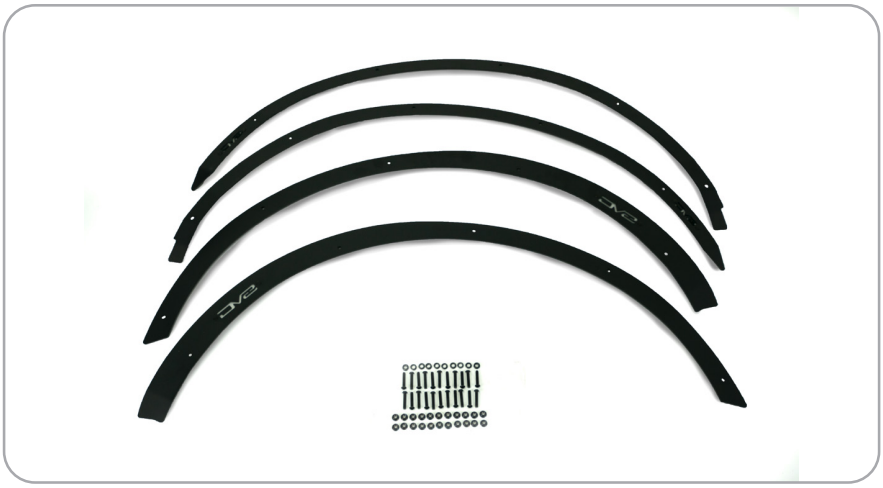

STEP 2

Starting with the front, begin by removing the factory fender. These are easily removed by twisting the small latches until latch becomes loose. Once all are loose, pull fender away from Bronco until hidden clips release.

Note: These should pull away from the Bronco easily. If they are hard, adjust latches.





STEP 3

Once fender is removed, use a phillips screwdriver and remove the plastic push pins along the front and back outer edge of the inner fender.


Note: You do not need to remove the inner fender, you only need to gain access to the fender mounting holes.





STEP 4

In the center edge of the inner fender, remove the four 7mm bolts to release the inner fender. This will allow you to gain access to the back of the bolts for the fender deletes.

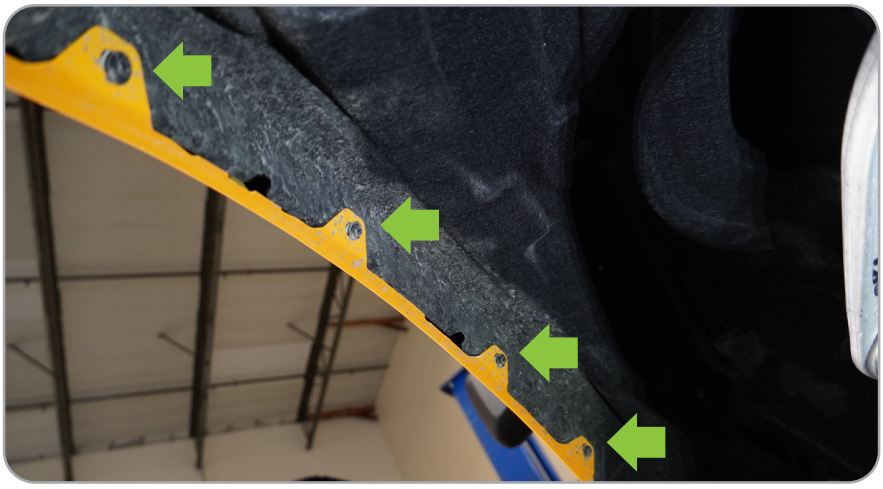




STEP 5

Hold up fender delete and align the holes on the fender. Using the M6 hardware bolt on the deletes loosely to the fender.



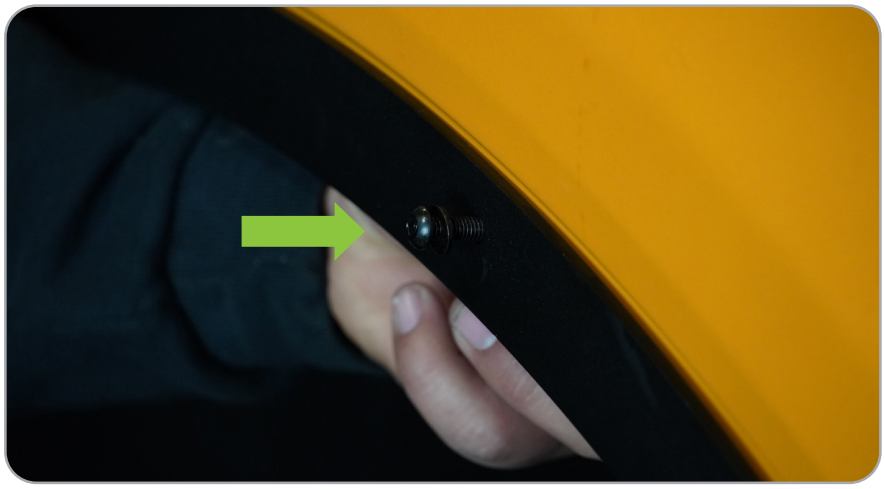

STEP 6

Once all hardware on fender and delete is loosely installed, align delete to match curve of fender and tighten using a #4 allen head and 10mm socket/wrench.



STEP 7

Reinstall push pins and bolts for inner fender using your 7mm socket and phillips screwdriver. Repeat steps 1-6 for opposite front fender.



STEP 8

For the rear fenders, begin by removing the factory fender flares by adjusting the latches like the front fenders.





STEP 9

Using the 10mm socket, remove the two painted bolts on the fender mounting surface. These will not be reused.





STEP 10


Hold up rear fender delete and align holes on fender. Using the same M6 hardware, loosely mount the delete to the fender.





STEP 11

For the rear-most bolt, if you have trouble accessing the backside for the nut, using your phillips screwdriver, remove the plastic push pin to gain access.

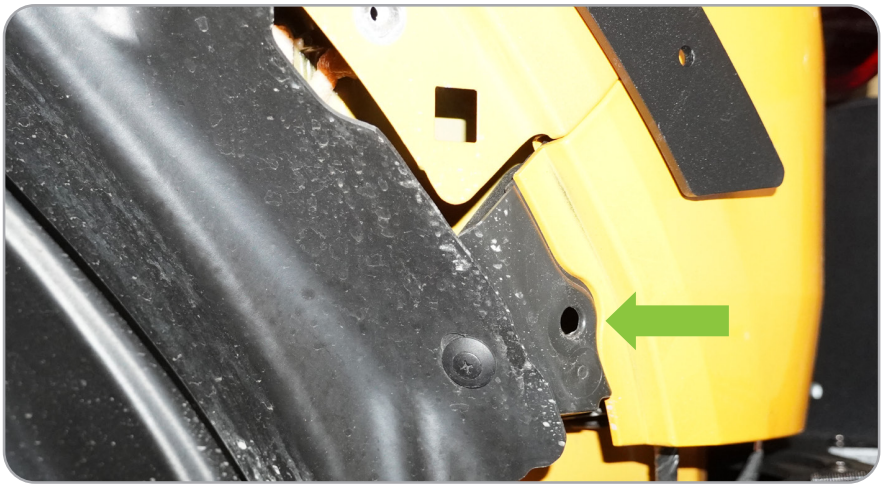

STEP 12

Once all fender hardware is installed, align delete to fender and secure. Repeat steps 7-10 for opposite rear fender. Double check all fender hardware is secure and all inner fender hardware is reinstalled.

