DV8 Offroad LPBR-01 Installation Instructions

LPBR-01

Part number: LPBR-01

trailfortress.com/dv8-offroad-front-license-plate-relocation-bracket-lpbr01

Scan for fitment, price and install help


6400 SYCAMORE CANYON BLVD.
RIVERSIDE, CALIFORNIA 92507
855-680-9595
WWW.DV8OFFROAD.COM

PRODUCT
INSTALLATION MANUAL

Front Bumper Center License Plate Bracket

2021+ Bronco

LPBR-01

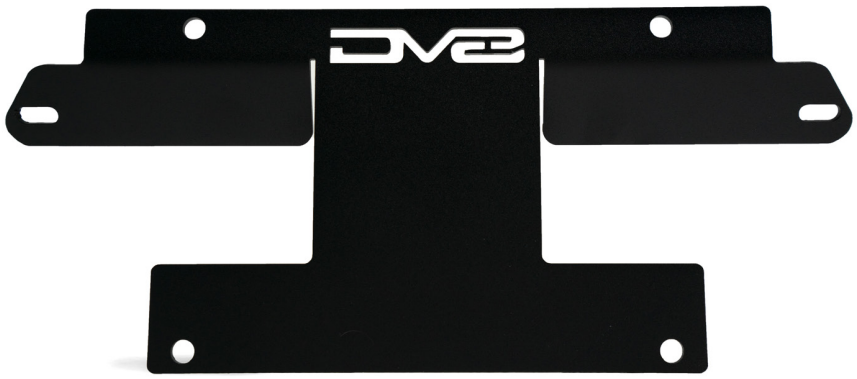

TOOLS REQUIRED

-T40 Torx Bit
-M10 Wrench
-M4 Allen Bit

SKILL LEVEL

- Novice/Intermediate
- 1 Person

Little skill level required, you can easily install it by yourself however, additional help will be useful.

TIME REQUIRED

- .5 Hours

Time to install this should take approximately .5 Hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

• Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information


1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

STEP 1

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.


Hardware Included:


(4) M6x15mm Bolts
(4) M6 Lock Nuts
(8) M6 Flat Washer

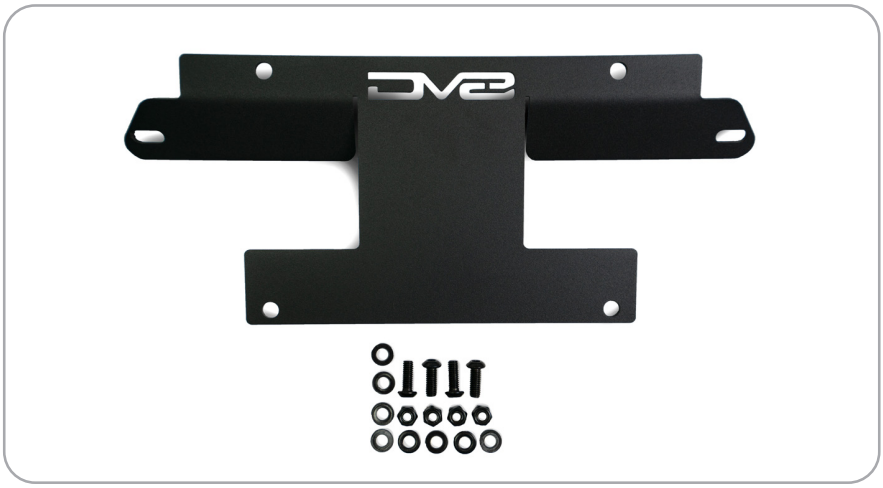

STEP 2

Begin by removing three factory screws from the bumper using a T40.

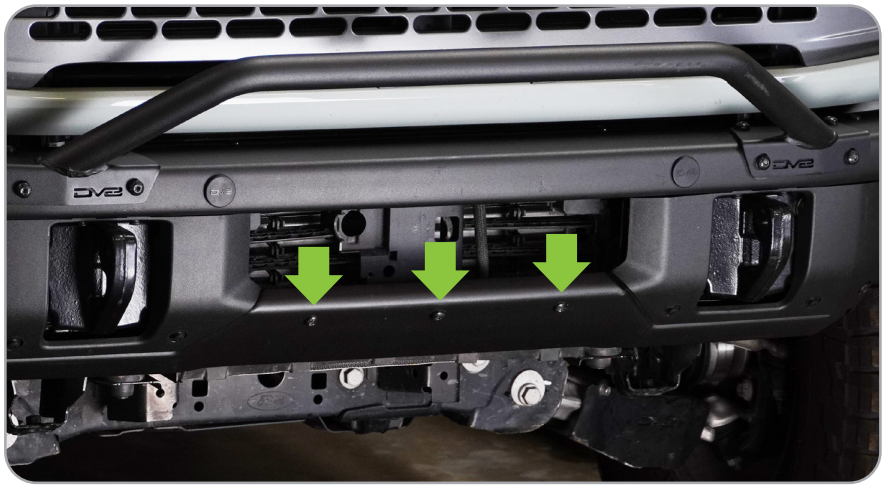


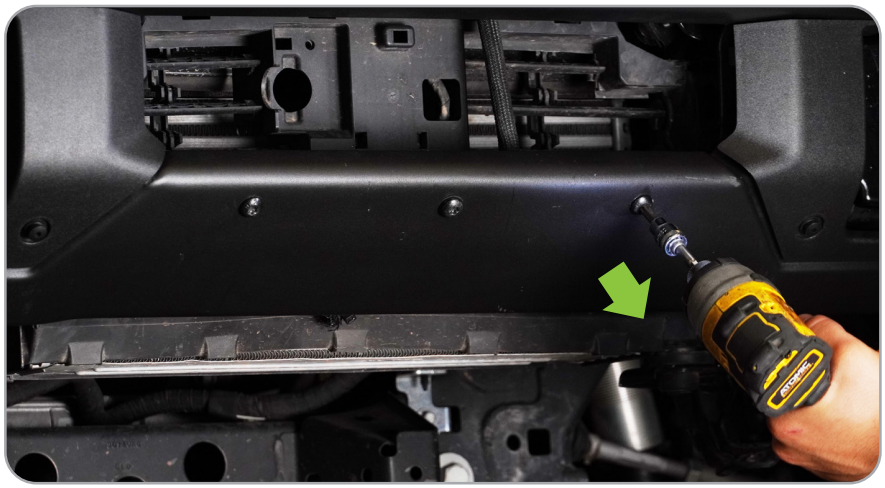

STEP 3

Install bracket with the T40 on the two outside bolt holes.

NOTE: Slide bracket upwards to ensure clearance for license plate hardware. You will not reinstall the center bolt if using this license plate bracket.

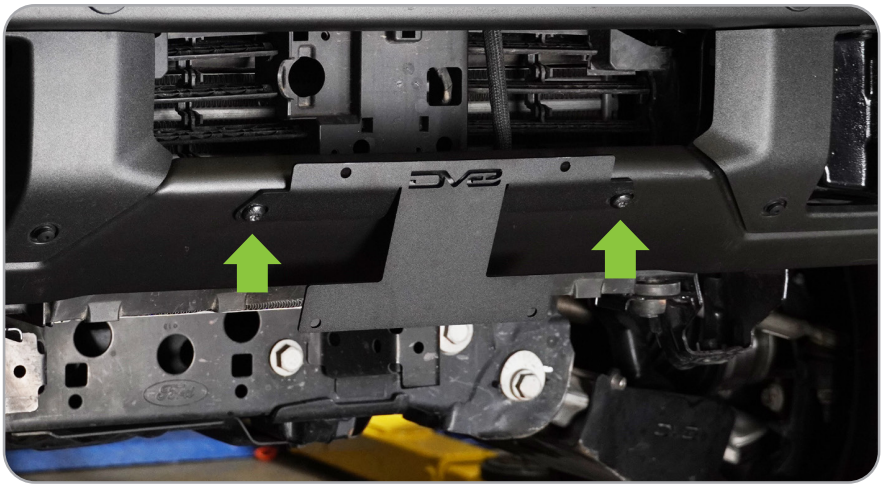

STEP 4

Secure license plate using four provided M6 hardware on both sides of the bracket.





STEP 5

Double check all hardware is secure and if running optional pods, wire lights as desired.

