DV8 Offroad LPBR-02 Installation Instructions

LPBR-02

Part number: LPBR-02

trailfortress.com/dv8-offroad-front-license-plate-relocation-bracket-places-plate-to-the-side-of-the-bumper-lpbr02

Scan for fitment, price and install help

6400 SYCAMORE CANYON BLVD.
RIVERSIDE, CALIFORNIA 92507
855-680-9595
WWW.DV8OFFROAD.COM

PRODUCT
INSTALLATION MANUAL

License Plate Bracket Mount | Side

2021+ FORD BRONCO
LPBR-02



TOOLS REQUIRED

- #4 Allen Head
- 10mm Socket
- T40 Torx Bit

SKILL LEVEL

- Novice
- 1 person

Little skill level required. Install can easily be done by yourself.

TIME REQUIRED

- 0.5 Hours

Time to install this should only take about half an hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

• Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover


trailfortress.com/dv8-offroad-front-license-plate-relocation-bracket-places-plate-to-the-side-of-the-bumper-lpbr02

STEP 1

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.

Hardware Included:


(4) M6x15mm Bolts
(4) M6 Lock Nuts
(8) M6 Flat Washers

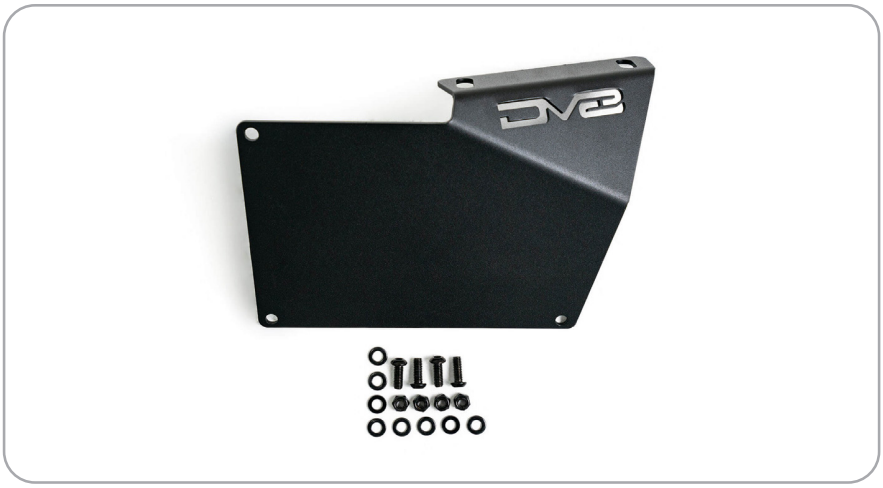

STEP 2

Using T40 torx bit, remove the two bolts on the underside of your factory front bumper.



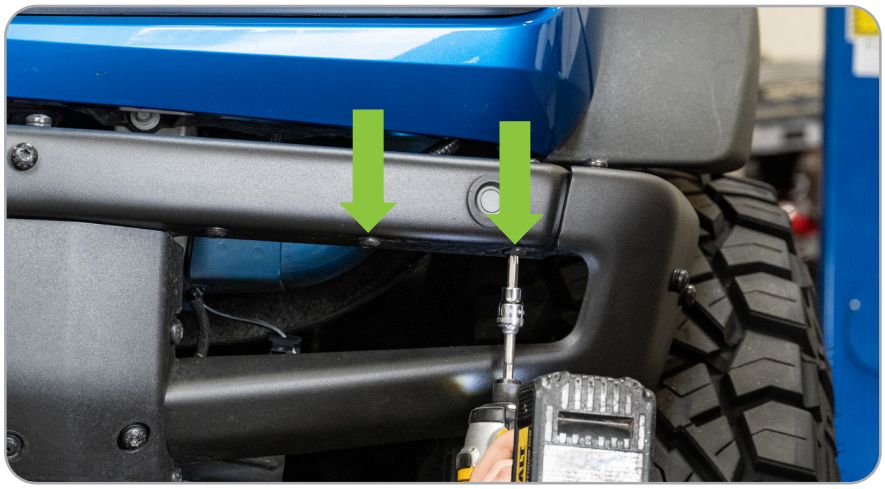

STEP 3

Hold up your new license plate bracket, and using factory hardware that was just removed, loosely install hardware into bumper.






STEP 4

Adjust the license plate bracket until it is aligned with the front bumper and then using your T40 torx bit, secure hardware.



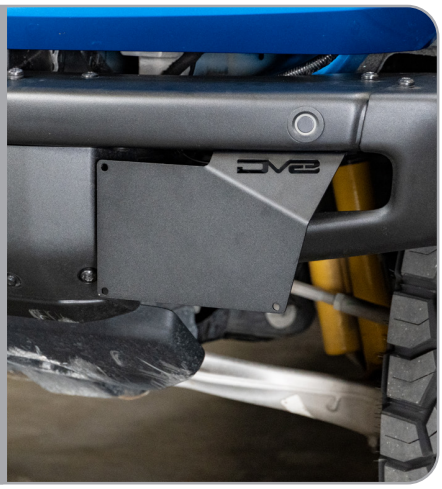

STEP 5

Mount license plate using provided M6 hardware with a #4 allen head and M10 socket.

Note: We included one extra set of hardware as a replacement if needed.





STEP 6

Double check to ensure all hardware is secure.

You are now done with the install of your new DV8 Ford Bronco License Plate Side Mount.

