TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 33-2084 Installation Instructions

Replacement Air Filter for Dodge Ram & Chevrolet Camaro

Part number: 33-2084

trailfortress.com/k-n-replacement-air-filter-33-2084

Scan for fitment, price and install help

INSTALLATION INSTRUCTIONS

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

***FREE K&N DECAL To register your warranty, please see us online at knfilters.com/register. FREE K&N DECAL ***

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modification will be required. However the following procedures MUST be followed to ensure the proper fit and seal of the K&N Filter.

INSTALLATION:

1) Remove the airbox lid.
2) Remove the filter element from the airbox base.
3) Wipe out any dust or dirt from the airbox lid with a damp rag.
4) Using the supplied tube of grease, liberally apply a coat of grease to the sealing edge of the filter. The ribs that run around the perimeter of the filter creates a groove to capture the grease. Additional sealing grease may be purchased in an 6 oz. tube from any K&N retailer.
5) Install the pre-oiled K&N Filtercharger® into the airbox lid. Be certain that the filter is properly seated into lid.
6) While holding the filter into the lid, re-install lid onto the base and close.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

Apply a coat of grease to the space between the ribs that run around the perimeter of the filter.

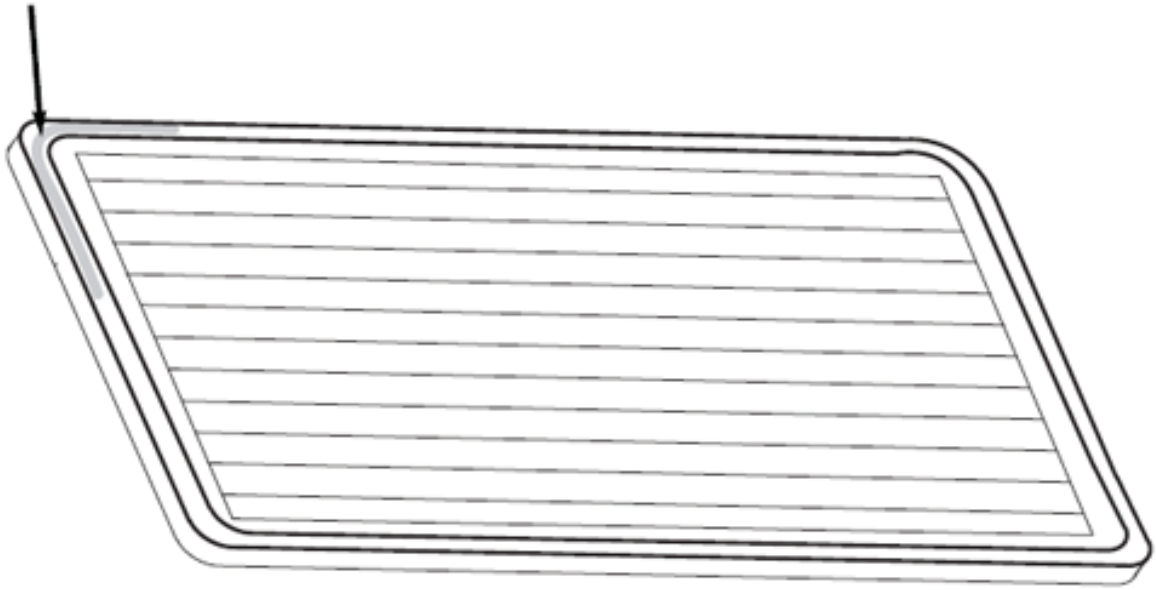

• 1455 CITRUS ST., P.O. BOX 1329, RIVERSIDE, CA., U.S.A. 92502 • TECH SERVICE 800-858-3333 • FAX 951-826-4001
• e-mail: tech@knfilters.com • WWW: http://www.knfilters.com

17868A
08/13/08

trailfortress.com/k-n-replacement-air-filter-33-2084