TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 57-3023-1 Installation Instructions

Cold Air Intake for GM Full-Size Trucks & Escalade

Part number: 57-3023-1

trailfortress.com/k-n-performance-air-intake-system-57-3023-1

Scan for fitment, price and install help

FUEL INJECTION PERFORMANCE KIT
FIPK GENERATION II™

INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE KNFILTERS.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE.

INSTALLATION INSTRUCTIONS

57-3023-1

CHEVROLET / GMC / CADILLAC

Silverado 1500HD / Sierra 1500HD
2001-03 & 2005-06 V8-6.0L
Silverado Classic 1500HD / Sierra Classic 1500HD
2007 V8-6.0L
Silverado 2500 / Sierra 2500
1999-2004 V8-6.0L
1999-2000 V8-5.3L
Silverado SS
2003-2004 V8-6.0L
Suburban / Yukon XL
2000-2004 V8-5.3L, 6.0L
2005-2006 V8-6.0L
Tahoe / Yukon
2000-2004 V8-4.8L, 5.3L
Sierra C3
2001 V8-6.0L
Sierra Denali
2002-2004 V8-6.0L
Yukon Denali, Yukon XL Denali
2001-04 V8-6.0L
Escalade
2002-04 V8-5.3L, 6.0L
Escalade EXT
2003-04 V8-6.0L
Excalade ESV.
2003-04 V8-6.0L

NOTE: This kit was not designed to fit vehicles with a body lift

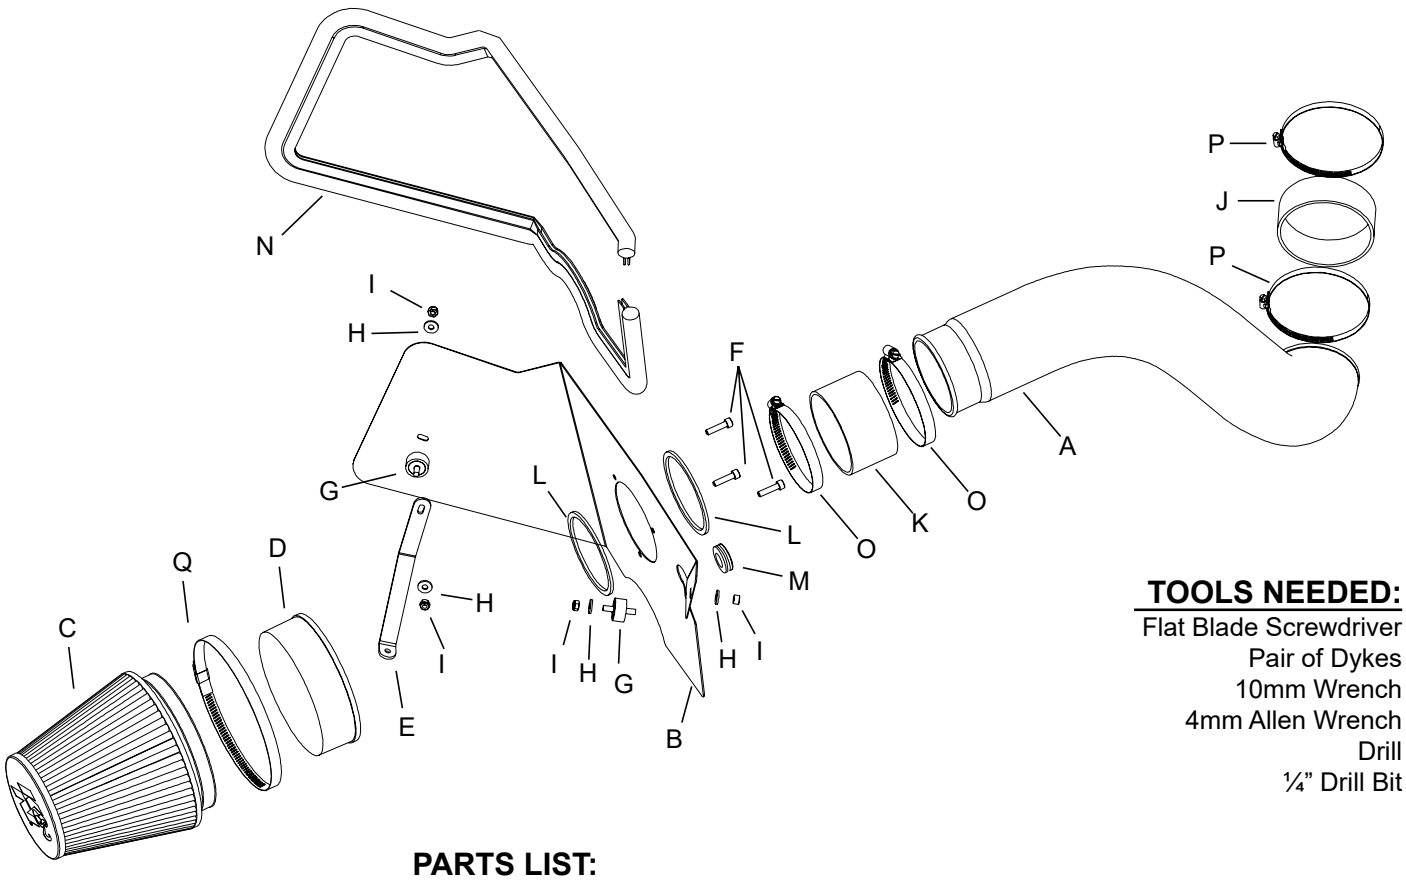

TOOLS NEEDED:
Flat Blade Screwdriver
Pair of Dykes
10mm Wrench
4mm Allen Wrench
Drill
¼" Drill Bit

PARTS LIST:

	Description	Qty.	Part#				
A	INTAKE TUBE; Y	1	08740A	J	HOSE; 4"ID X 1.5"L	1	08755
B	HEAT SHIELD	1	07417	K	HOSE; 3.75" ID x 2.25"L	1	08631
C	AIR FILTER	1	RU-1042	L	GASKET; 1/16"	2	09033
D	ADAPTER; #240	1	08783A	M	GROMMET; 3/4"ID	1	08058
E	BRACKET; C-BEND	1	070822	N	EDGE TRIM; 55"L	1	102480A
F	BOLT; 5MM-.80 X 20MM	3	08320	O	HOSE CLAMP; #60	2	08624
G	STUD; M6-1.00 MNTD	2	07027	P	HOSE CLAMP; #64 MIDI	2	08650
H	WASHER; 1/4"ID X 5/8"	4	08275	Q	HOSE CLAMP; #104	1	08697
I	NUT; 6MM NYLOCK	4	07553				

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles' anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.

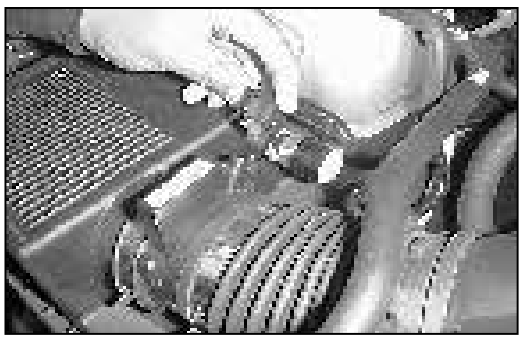

2. Disconnect the mass air sensor electrical connection.



3. Loosen the hose clamp on the intake hose at the mass air sensor.



4. Loosen the hose clamp on the intake tube at the throttle body.

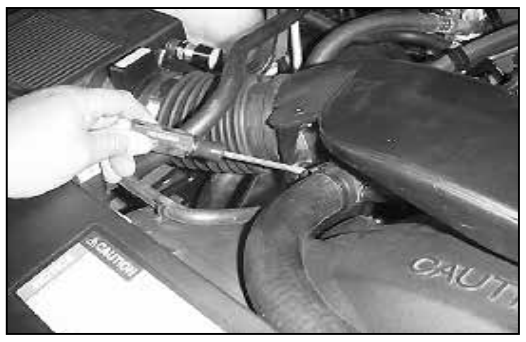

5. Using a flat blade screwdriver, pry the radiator hose retaining clip from the intake tube.



6. Detach the intake hose from the mass air sensor.