TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 63-3115 Installation Instructions

63 Series Intake for Cadillac XT5, Blazer & Acadia

Part number: 63-3115

trailfortress.com/k-n-performance-air-intake-system-63-3115

Scan for fitment, price and install help

INSTALLATION INSTRUCTIONS

AIRCHARGER® HIGH-FLOW INTAKE SYSTEMS

Not legal for sale or use in California on any pollution controlled motor vehicle.

63-3115
CHEVROLET / GMC / CADILLAC
2019-25 Blazer
2017-25 XT5 / Acadia
V6-3.6L

TOOLS NEEDED:

Flat Blade Screw Driver
3mm Allen Key
4mm Allen Key
t20 Torx
Side Cutters

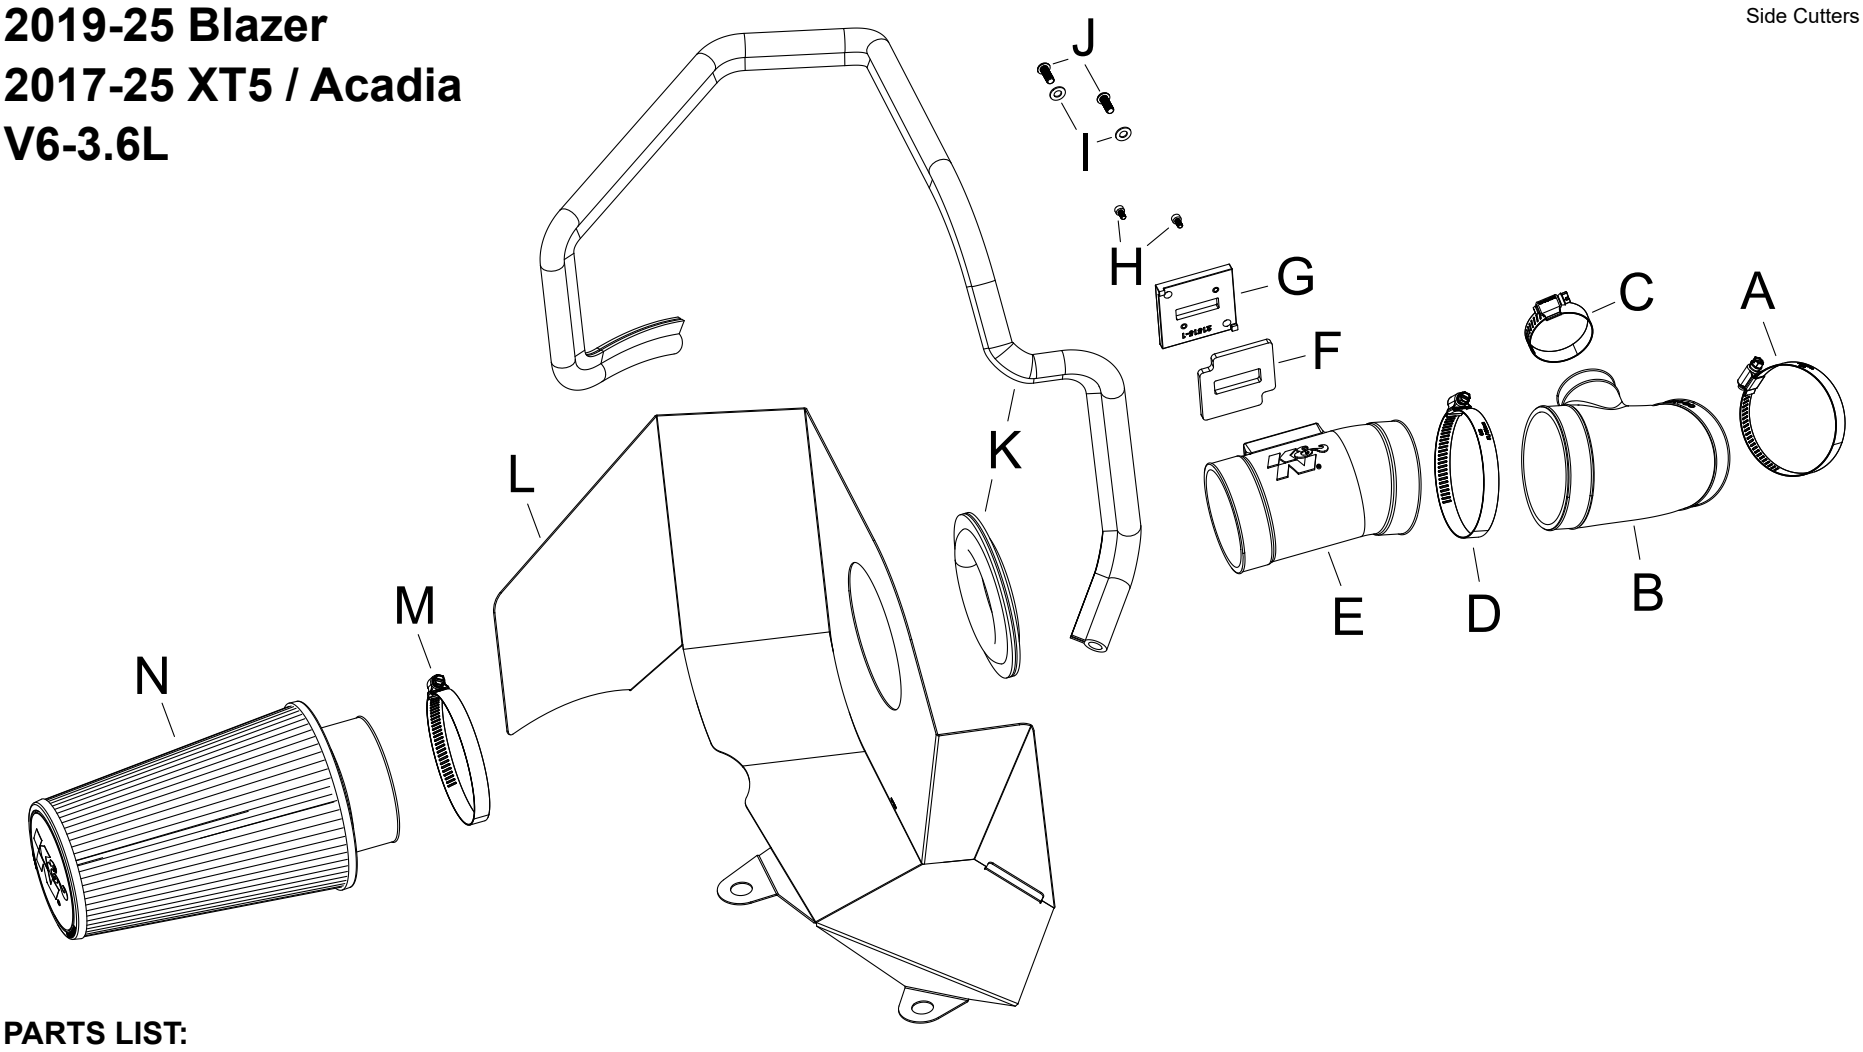

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	HOSE CLAMP #48	1	08601	F	GASKET; 3/16" PORON	1	09069	K	EDGE TRIM; (75”L)	1	102460
B	HOSE; 3"ID TO 3-1/2"ID, 35DEG	1	084109	G	ADAPTOR; MAF SENSOR	1	21515-1	L	HEAT SHIELD	1	07357
C	HOSE CLAMP; #24	1	08460	H	BOLT; M4-.7M X 8MM; ALNHD	2	07733	M	HOSE CLAMP; #60	1	08624
D	HOSE CLAMP #56	1	08620	I	WASHER; 6MM FLAT	2	08269	N	AIR FILTER	1	RC-3690
E	TUBE; AIRCHARGER, (NL)	1	087454	J	BOLT; M6 X 1 X 16MM; BTNHD	2	07730				

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Disconnect the mass air sensor electrical connection.



3. Pry loose the band clamp that secures the intake plenum tube to the intake hose and remove the clamp.



4. Loosen the two hose clamps that secure the factory intake hose. Remove the factory intake hose from the vehicle.