TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 63-3118 Installation Instructions

63 Series Intake for Silverado & Sierra 1500 (2020-2026)

Part number: 63-3118

trailfortress.com/k-n-performance-air-intake-system-63-3118


Scan for fitment, price and install help

AIRCHARGER® HIGH-FLOW INTAKE SYSTEMS

INSTALLATION INSTRUCTIONS

Not legal for sale or use in California on any pollution controlled motor vehicle.

63-3118
CHEVROLET / GMC
2020-25 SILVERADO 1500 / SIERRA 1500
L6-3.0L TURBO DIESEL

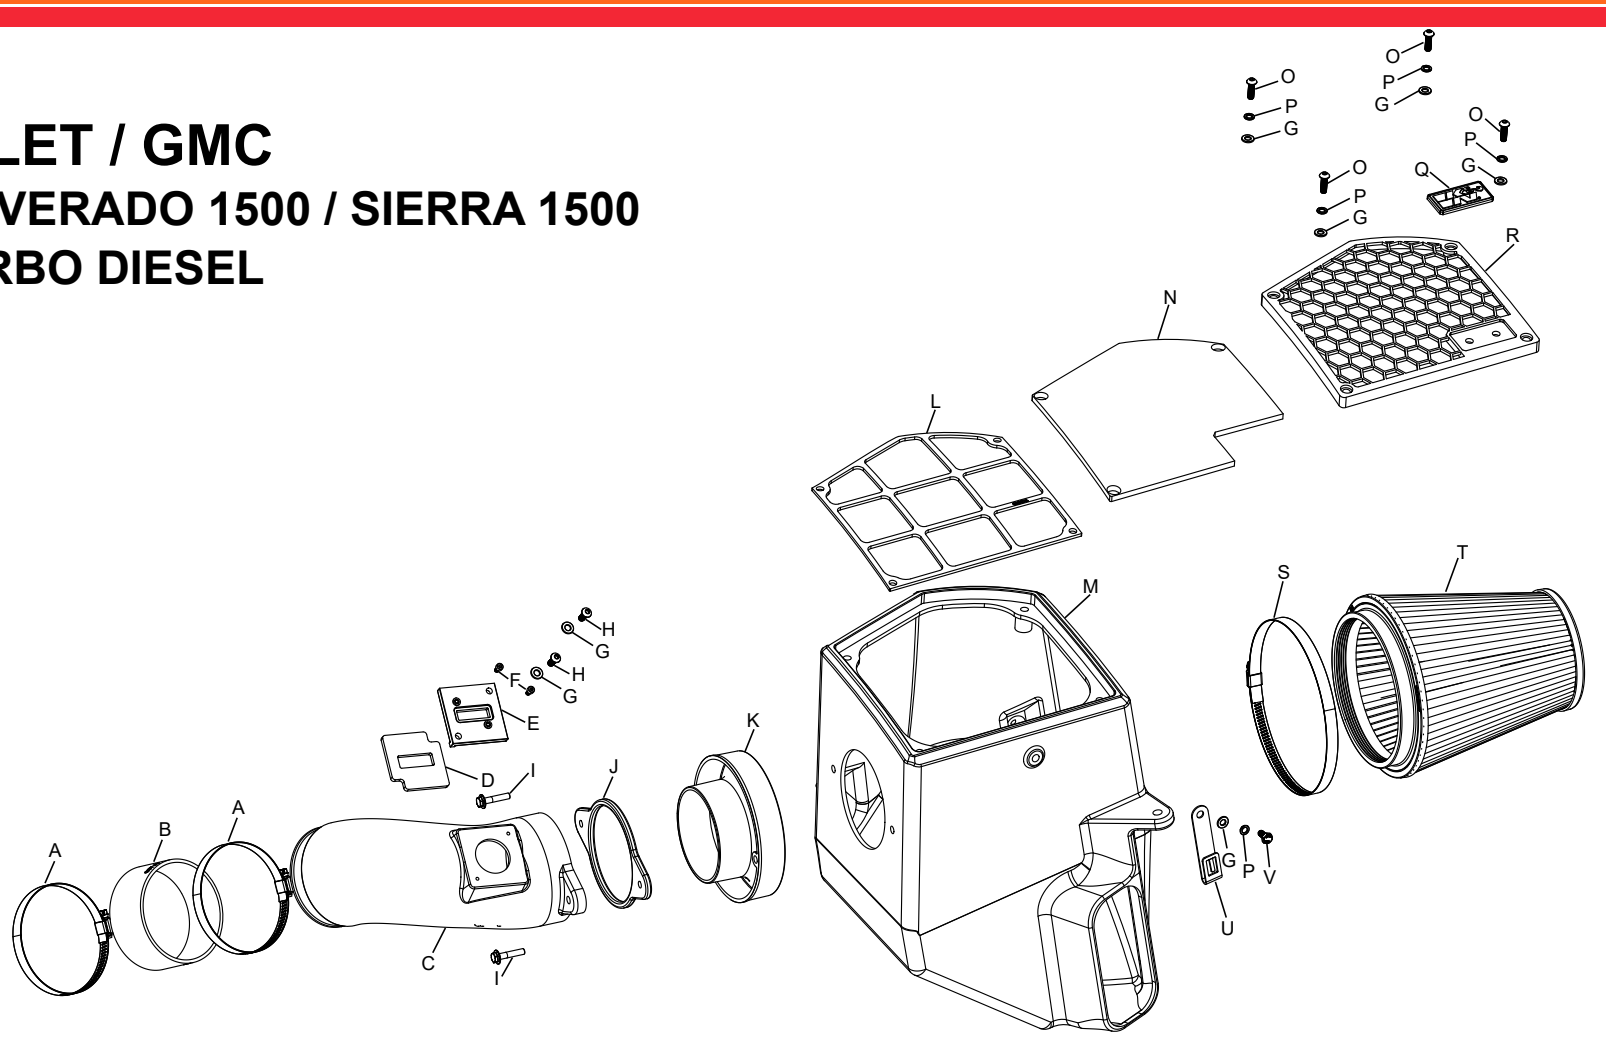

TOOLS NEEDED:

Ratchet
Extension
10mm deep socket
3mm allen key
4mm allen key
T10 Torx
T20 Torx
Phillips screw driver
Flat blade screw driver
90* pick.

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	HOSE CLAMP #64 STAINLESS	2	08645	I	BOLT; M6-1 X 30 HEX/FLANGE	2	1-1016	Q	BADGE; K&N LOGO	1	088096
B	HOSE; 4”ID X 2”L	1	08761	J	GASKET	1	09386	R	FRAME; PRECLEANER TOP	1	088075
C	TUBE; (OK)	1	087478A	K	ADAPTOR #454	1	27300	S	HOSE CLAMP #104	1	08697
D	GASKET; 3/16” PORON	1	09069	L	FRAME; PRECLEANER BTM	1	088074	T	AIR FILTER	1	RU-1044XD
E	ADAPTOR; MAF SENSOR	1	21515-1	M	AIR BOX; (OJ)	1	087477A	U	BRACKET	1	064358A
F	BOLT; M4-.7 X 8MM A/HD	2	07733	N	INSERT; FOAM	1	971971	V	BOLT; M6 X 1 X 12MM, HEXHD	1	07727
G	WASHER; 6MM FLAT	7	08269	O	SCREW; M6 X 20MM BTNHD	4	KIT-20BHC3060				
H	BOLT; M6 X 1 X 16MM BTNHD	2	07730	P	WASHER; M6 SPLT LOCK ZINC	5	1-3025				

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Remove the two screws that secure the hood release lever and then remove the lever from the vehicle.



3. Remove the ten retaining clips that secure the valence and then remove the valence from the vehicle.



4. Remove the retaining clip shown that secures the fresh air duct and then disconnect the duct from the air filter housing.



5. Loosen the hose clamp that secures the intake hose to the turbo inlet and disconnect the hose from the inlet.



6. Disconnect the mass air sensor electrical connection.