TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 63-3119 Installation Instructions

63 Series Intake for Silverado & Sierra HD (2020-2026)

Part number: 63-3119

trailfortress.com/k-n-performance-air-intake-system-63-3119

Scan for fitment, price and install help

AIRCHARGER® HIGH-FLOW INTAKE SYSTEMS

INSTALLATION INSTRUCTIONS


Not legal for sale or use in California on any pollution controlled motor vehicle.

63-3119
CHEVROLET / GMC
2020-25 SILVERADO 2500 / 3500HD
2020-25 SIERRA 2500 / 3500HD
6.6L TURBO DIESEL

NOTE: This kit was not designed to fit vehicles with a body lift.

TOOLS NEEDED:

Flat Blade Screw Driver
4mm Allen Key
5mm Allen Key
10mm Wrench
10mm Socket
Ratchet
Extension
Electrical Tape

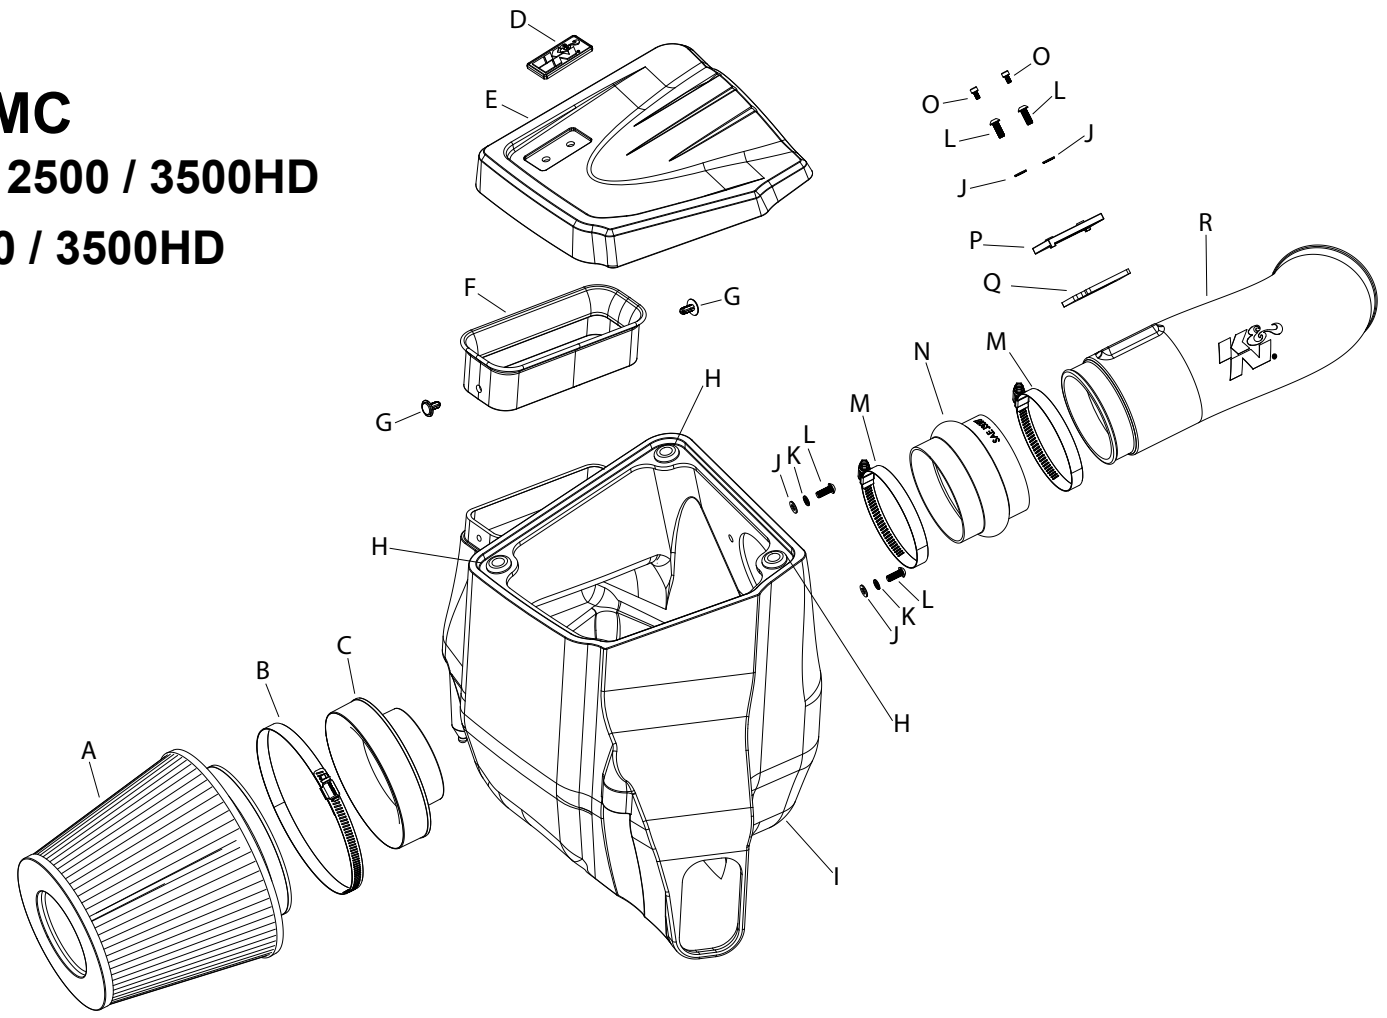

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	AIR FILTER	1	RU-5179	G	RIVET; TUFLOK	2	345010	M	HOSE CLAMP; #64 STAINLESS	2	08645
B	HOSE CLAMP; #104	1	08697	H	GROMMET; 1”OD, 1/2”ID, 1/2”	3	08064	N	HOSE; HUMP 4”ID X 3”L	1	08418
C	ADAPTOR; #454	1	27300	I	AIRBOX; (OP)	1	087494	O	BOLT; M4 - .7 X 8MM, ALNHD	2	07733
D	BADGE; K&N LOGO	1	088096	J	WASHER; 6MM FLAT	4	08269	P	ADAPTOR; MAF SENSOR	1	21515-1
E	LID; (OO)	1	087493A	K	WASHER, M6 SPLIT LOCK ZINC	2	1-3025	Q	GASKET; 3/16” PORON	1	09069
F	HOOD SEAL	1	084112	L	BOLT; M6 X 1 X 16MM, BTNHD	4	07730	R	TUBE; (OM)	1	087492

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Loosen the two hose clamps securing the factory intake hose and then remove the hose from the vehicle.



3. Disconnect the mass air sensor electrical connection. **NOTE: 2024 model year vehicles and later have a different mass air sensor, the connector lays flat as compared to the sensor pictured.**



4. Remove the nut that secures the air filter housing into the vehicle and then lift up and remove the air filter housing from the vehicle.



5. Using the provided push pins, install the fresh air intake hood seal onto the K&N air filter housing.



6. Install the three provided grommets into the K&N air filter housing as shown.