K&N 63-3121 Installation Instructions

Cold Air Intake for Cadillac CT5 (2022-2025)

Part number: 63-3121

trailfortress.com/k-n-performance-air-intake-system-63-3121


Scan for fitment, price and install help

INSTALLATION INSTRUCTIONS

AIRCHARGER® HIGH-FLOW INTAKE SYSTEMS

Not legal for sale or use in California on any pollution controlled motor vehicle.

63-3121
CADILLAC
2022-25 CT5 BLACKWING
V8 6.2L Supercharged

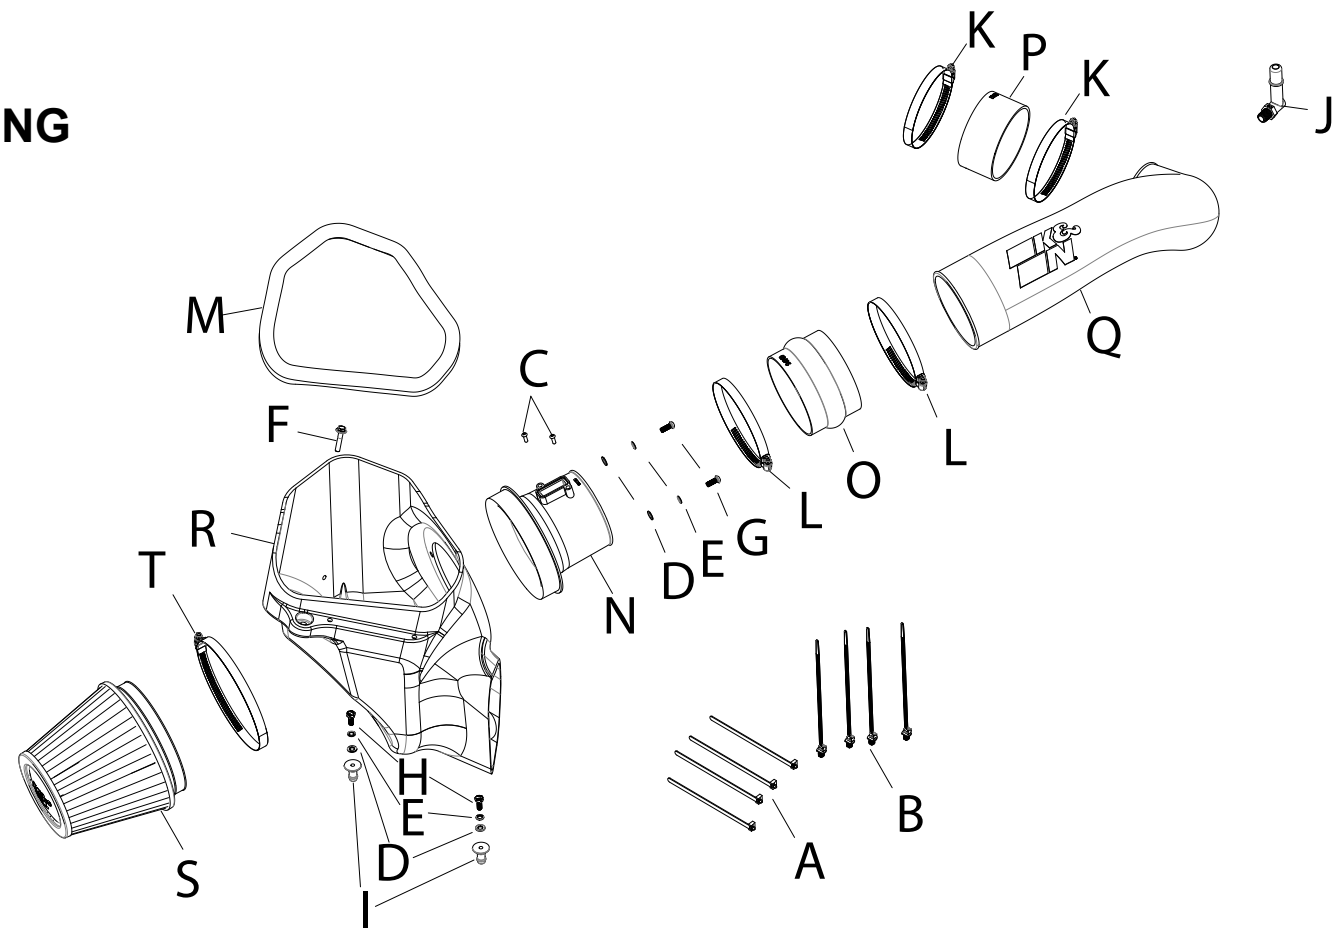

TOOLS NEEDED:

1/4” Ratchet
Extension
7mm socket
8mm socket
10mm socket
T20 Torx
Pliers
Panel Removal tool
2.5mm allen key
4mm allen key

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	CABLE TIES; 6”	4	21591	H	BOLT; M6-1 16MM HEX FLANGE	2	07812	O	HOSE; HUMP 4.5”	1	08695
B	ZIP TIE; 8” TREE PUSH-MNT	4	1-127	I	MOUNT; PLASTIC NYLON	2	8-186-1	P	HOSE; 4”X2”	1	08761
C	SCREW; M4 BUTTON HEAD	2	07726	J	VENT; 5/8” OD 90 DEGREE	1	088028	Q	TUBE	1	087566
D	WASHER; FLAT SS	4	08269	K	HOSE CLAMP; #64	2	08645	R	AIRBOX	1	087567
E	WASHER; SPLIT LOCK	4	1-3025	L	HOSE CLAMP; #72	2	08671	S	AIR FILTER	1	RP-5168
F	BOLT; M6-1 X30 HEX FLANGE	1	1-1016	M	EDGE TRIM; (32”L)	1	102493	T	HOSE CLAMP; #104	1	08697KA
G	BOLT; M6 BUTTONHEAD	2	07730	N	ADAPTOR; MAF HOUSING	1	088035				

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.


NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Disconnect the mass air sensor electrical connection.

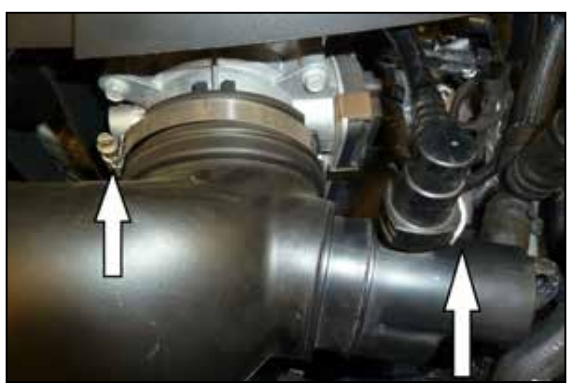

3. Loosen the hose clamp that secures the intake tube to the throttle body. Depress the locking tab and then disconnect the CCV hose from the intake tube.



4. Unhook the coolant line and wiring harness from the air filter housing. Remove the bolt securing the air filter housing to the core support and then remove the intake system from the vehicle.



5. Install the provided mounting posts onto the K&N air filter housing using the provided hardware.



6. Install the provided mass air flow housing into the K&N air filter housing, rotate 180 degrees so the sensor will be on the top and then secure with the provided hardware.