TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 63-3516 Installation Instructions

63 Series Intake for Honda Civic Turbo (2016-2021)

Part number: 63-3516

trailfortress.com/k-n-performance-air-intake-system-63-3516


Scan for fitment, price and install help

AIRCHARGER® HIGH-FLOW INTAKE KITS

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.
See knfilters.com for CARB status on each part for a specific vehicle

INSTALLATION INSTRUCTIONS

63-3516
HONDA
2016-21 Civic
L4-1.5L Turbo
NOTE: EXCLUDING CIVIC SI

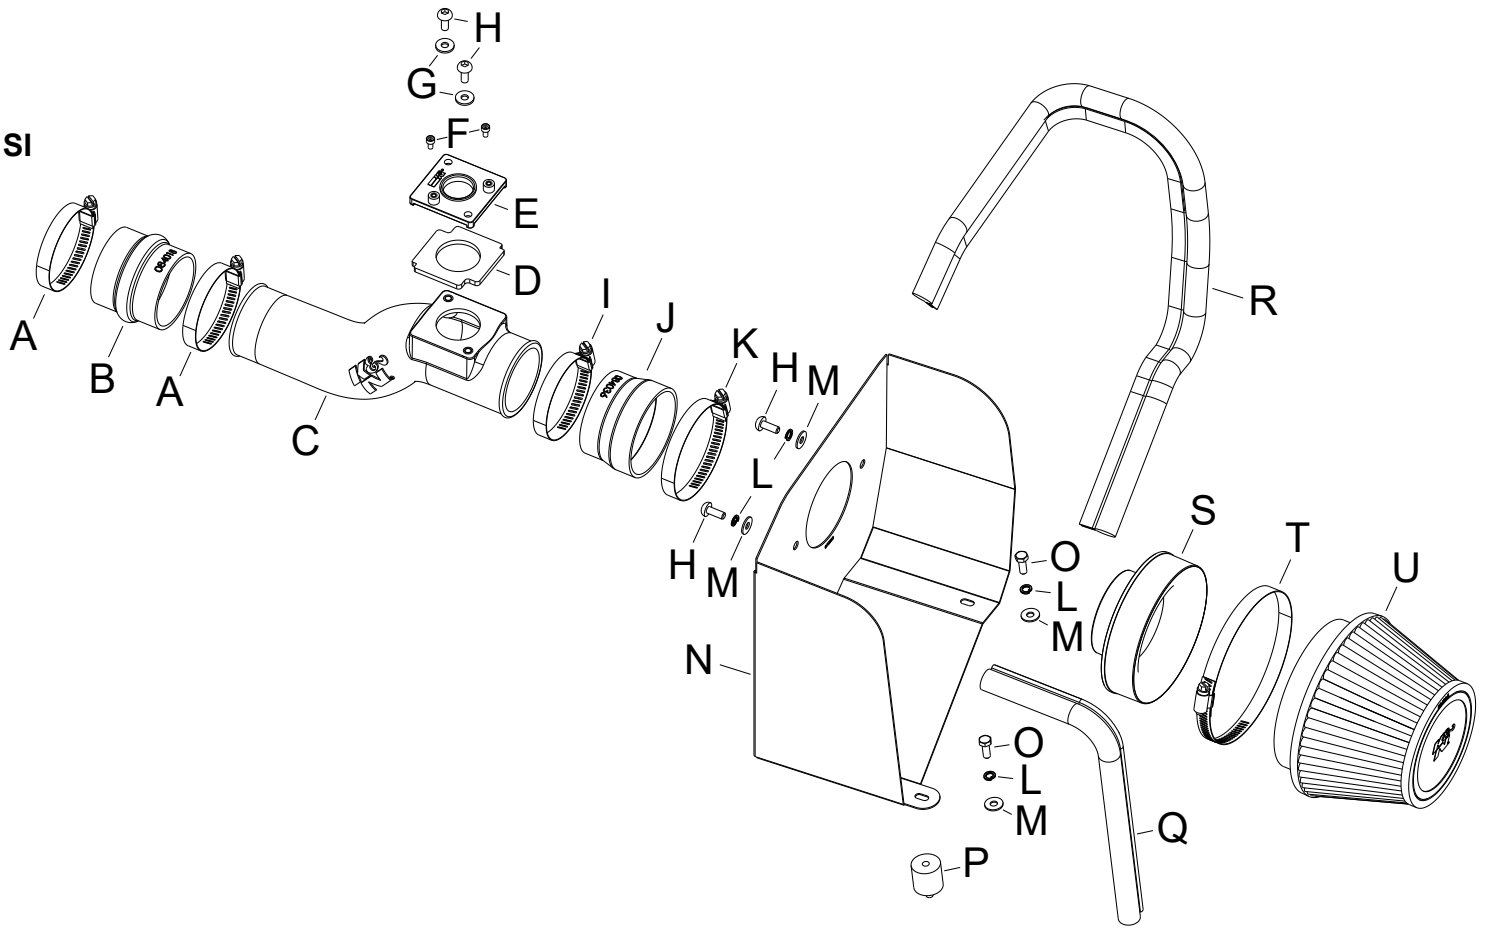

TOOLS NEEDED:

flat blade screw driver
phillips screw driver
ratchet
extension
10mm socket
8mm socket
4mm hex key
3mm hex key
side cutters

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	HOSE CLAMP #40	2	08554	H	BOLT; M6 X 1 X 16MM	4	07730	O	BOLT; M6-1 X 16MM	2	07812
B	HOSE; HUMP 2.5”ID X 2.5”L	1	084018	I	HOSE CLAMP #44 STAINLESS	1	08560	P	STUD; RUBBER MOUNT, M6	1	02033
C	INTAKE TUBE (LI)	1	087340A	J	HOSE; 3" TO 2.75" ID X 2" L	1	084036	Q	EDGE TRIM (14")	1	102478
D	GASKET; 3/16 PORON	1	09074	K	HOSE CLAMP #48	1	08601	R	EDGE TRIM (30")	1	102489A
E	ADAPTER; MAF SENSOR	1	088022	L	WASHER, M6 SPLIT LOCK ZINC	4	1-3025	S	ADAPTER; FILTER, 3.0"OD	1	21569
F	BOLT; M4 - .7 X 8MM	2	07733	M	WASHER; 1/4"ID X 5/8"OD	4	08275	T	CLAMP; #88, 1/2”, SS	1	KITHS88
G	WASHER; 6MM FLAT	2	08269	N	HEAT SHIELD	1	073235	U	FILTER CHARGER	1	RU-5163

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.


NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:


1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Disconnect the Mass air sensor connection and unhook the wiring harness from the air filter housing.

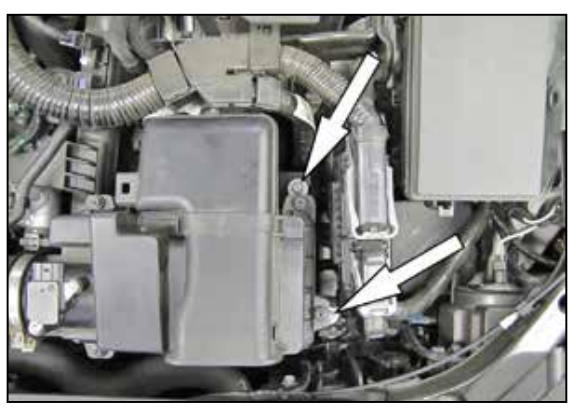


3. Loosen the two bolts securing the air filter housing to the mount bracket and inner fender.

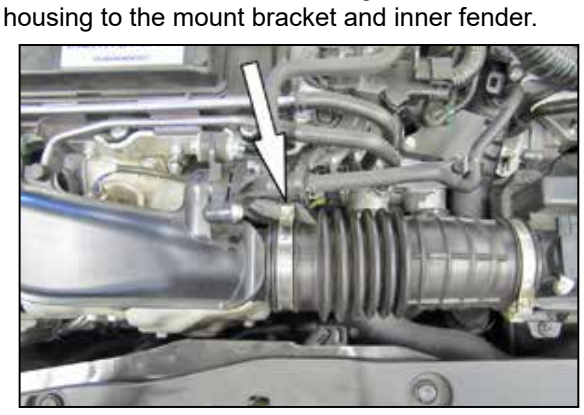

4. Loosen the hose clamp that secures the intake hose to the turbo inlet pipe and then remove the air filter housing and hose assembly.
NOTE: K&N Engineering, Inc., recommends that customers do not discard factory air intake.



5. Install the provided rubber mounted stud onto the inner fender air filter housing mounting location.

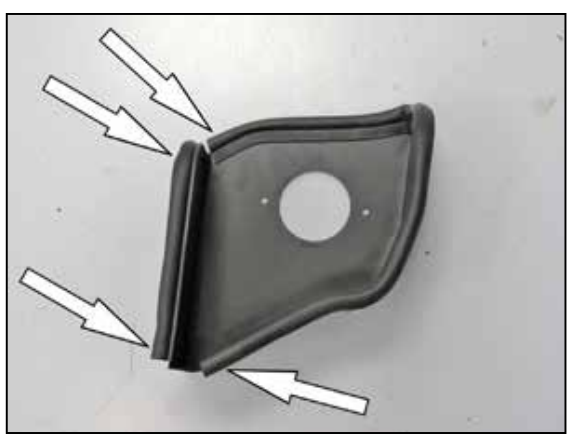

6. Install the provided edge trim onto the heat shield as shown.
NOTE: some trimming of the edge trim will be necessary.