TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 63-9034 Installation Instructions

63 Series Intake for Toyota 4Runner & FJ Cruiser

Part number: 63-9034

trailfortress.com/k-n-performance-air-intake-system-63-9034

Scan for fitment, price and install help

AIRCHARGER® HIGH-FLOW INTAKE KITS

LEGAL IN CALIFORNIA ONLY FOR RACING VEHICLES WHICH MAY NEVER BE USED, REGISTERED OR LICENSED FOR USE UPON A HIGHWAY.

See knfilters.com for CARB status on each part for a specific vehicle


INSTALLATION INSTRUCTIONS

63-9034
TOYOTA
2010-14 FJ Cruiser
2010-24 4Runner
V6-4.0L

NOTE: This kit was not designed to fit vehicles with a body lift.

TOOLS NEEDED:

Ratchet
Extension
13mm Socket
12mm Socket
10mm Socket
10mm Wrench
4mm Allen Wrench
3mm Allen Wrench
Pliers
Flat Blade Screw Driver

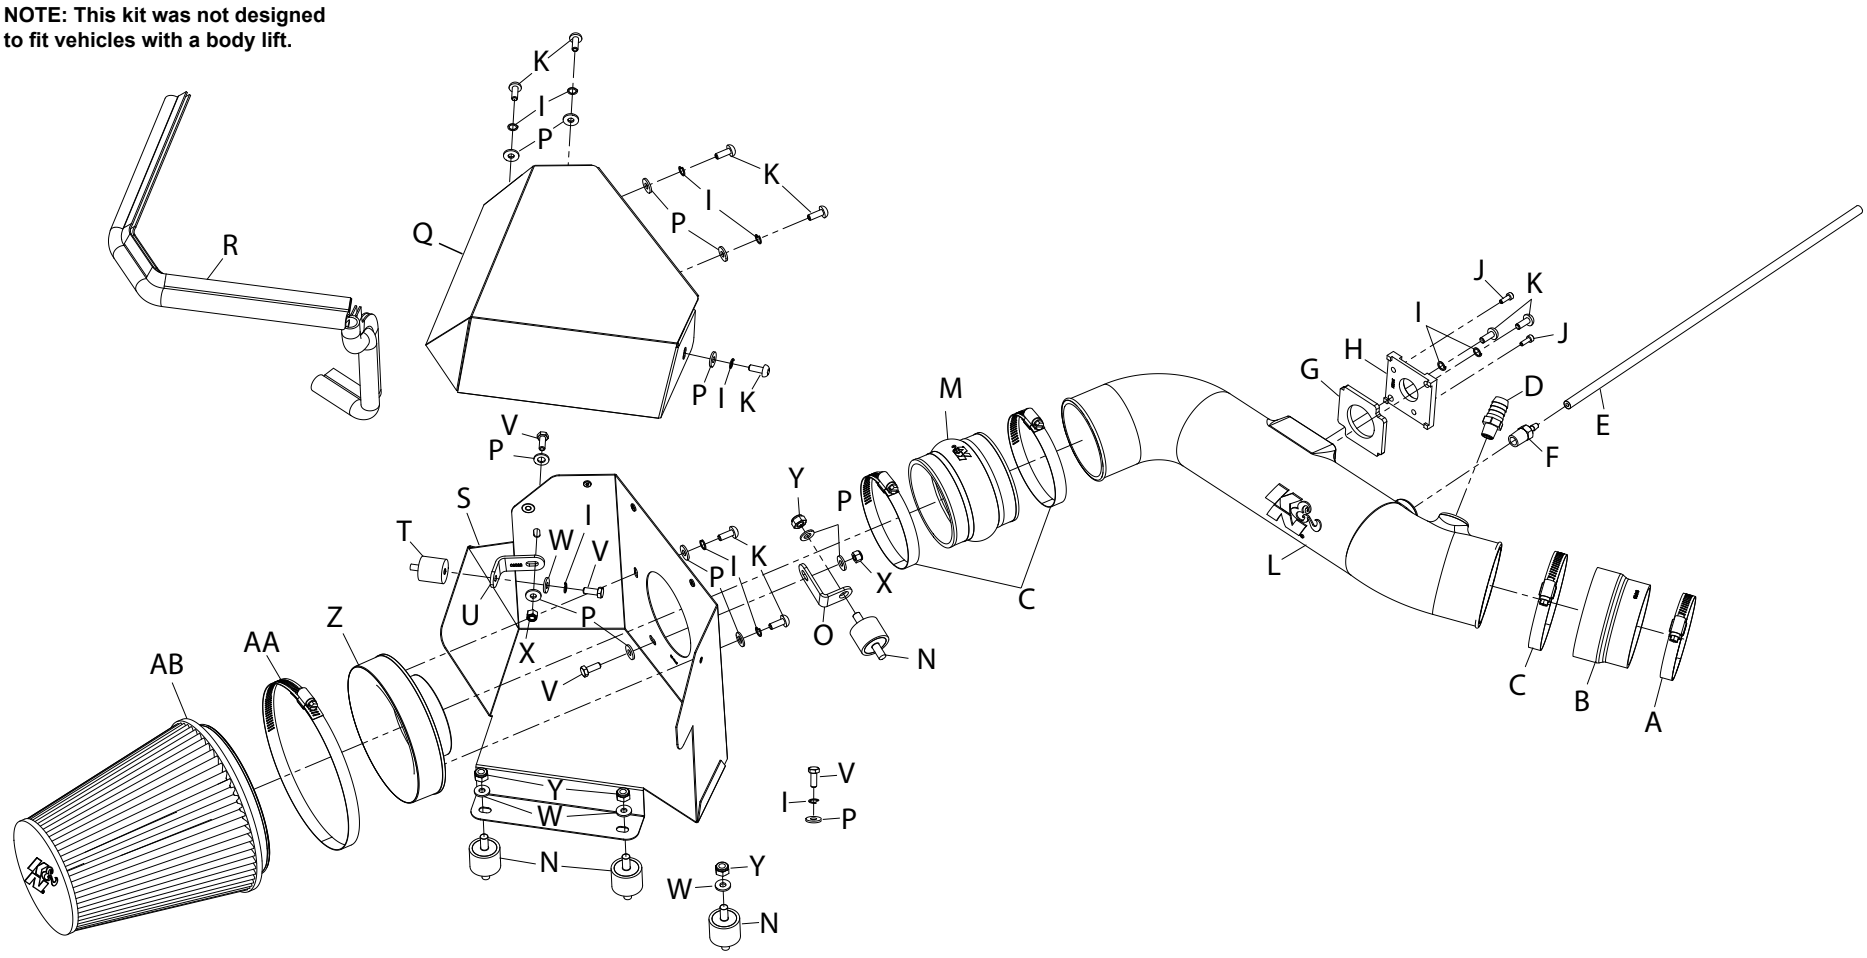

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	HOSE CLAMP #48	1	08601	K	BOLT; M6 X 1 X 16MM, BTNHD	9	07730	U	BRACKET; “L”	1	070712A
B	HOSE; 3.25”ID TO 3.5”ID X 2.25”	1	084091	L	INTAKE TUBE; (HX)	1	087238A	V	BOLT; M6-1 X 16MM, HEX	4	07812
C	HOSE CLAMP #56	3	08620	M	HOSE; HUMP 3.5”ID X 3”L	1	084057	W	WASHER; 8MM, FLAT	4	08272
D	FITTING; VENT, 1/4”NPT	1	82638	N	MOUNT; RUBBER 1” X 8MM	4	1228560	X	NUT; 6MM NYLOCK, HEXHD	2	07512
E	HOSE; 4MM ID X 18” L	1	08153	O	BRACKET; “L”	1	08022	Y	NUT; 8MM NYLOCK	4	07502
F	FITTING; 1/4”NPT, 3/16 BARB	1	080021	P	WASHER; 1/4”ID X 5/8”OD	13	08275	Z	ADAPTER; UNIV. 6”	1	21512-1
G	GASKET; 3/16” PORON	1	09074	Q	HEAT SHIELD; LID	1	074068	AA	HOSE CLAMP #104	1	08697
H	ADAPTER; MASS AIR; (GF)	1	21521	R	EDGE TRIM; (30”L)	1	102489	AB	AIR FILTER	1	RU-1048
I	WASHER; 1/4” LOCK	11	08198	S	HEAT SHIELD	1	074067-1				
J	BOLT; M4-.7 X 8MM, ALNHD	2	07733	T	STUD; M6 X 1, 1”T	1	02033				

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Lift up the engine cover to dislodge it from the mounting grommets and then remove the cover from the vehicle.



3. Disconnect the mass air sensor electrical connection and then unhook the wiring harness from the air box.
NOTE: The wiring harness attaches in three locations.