TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 63-9039 Installation Instructions

63 Series Intake for Toyota Tacoma (2016-2023)

Part number: 63-9039

trailfortress.com/k-n-performance-air-intake-system-63-9039

Scan for fitment, price and install help

AIRCHARGER® HIGH-FLOW INTAKE KITS

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.
See knfilters.com for CARB status on each part for a specific vehicle


INSTALLATION INSTRUCTIONS

63-9039
TOYOTA
2016-23 Tacoma
V6-3.5L

NOTE: This kit was not designed to fit vehicles with a body lift.

TOOLS NEEDED:

ratchet
extension
10mm socket
12mm socket
13mm socket
flat blade screw driver
phillips screw driver
3mm allen key
4mm allen key

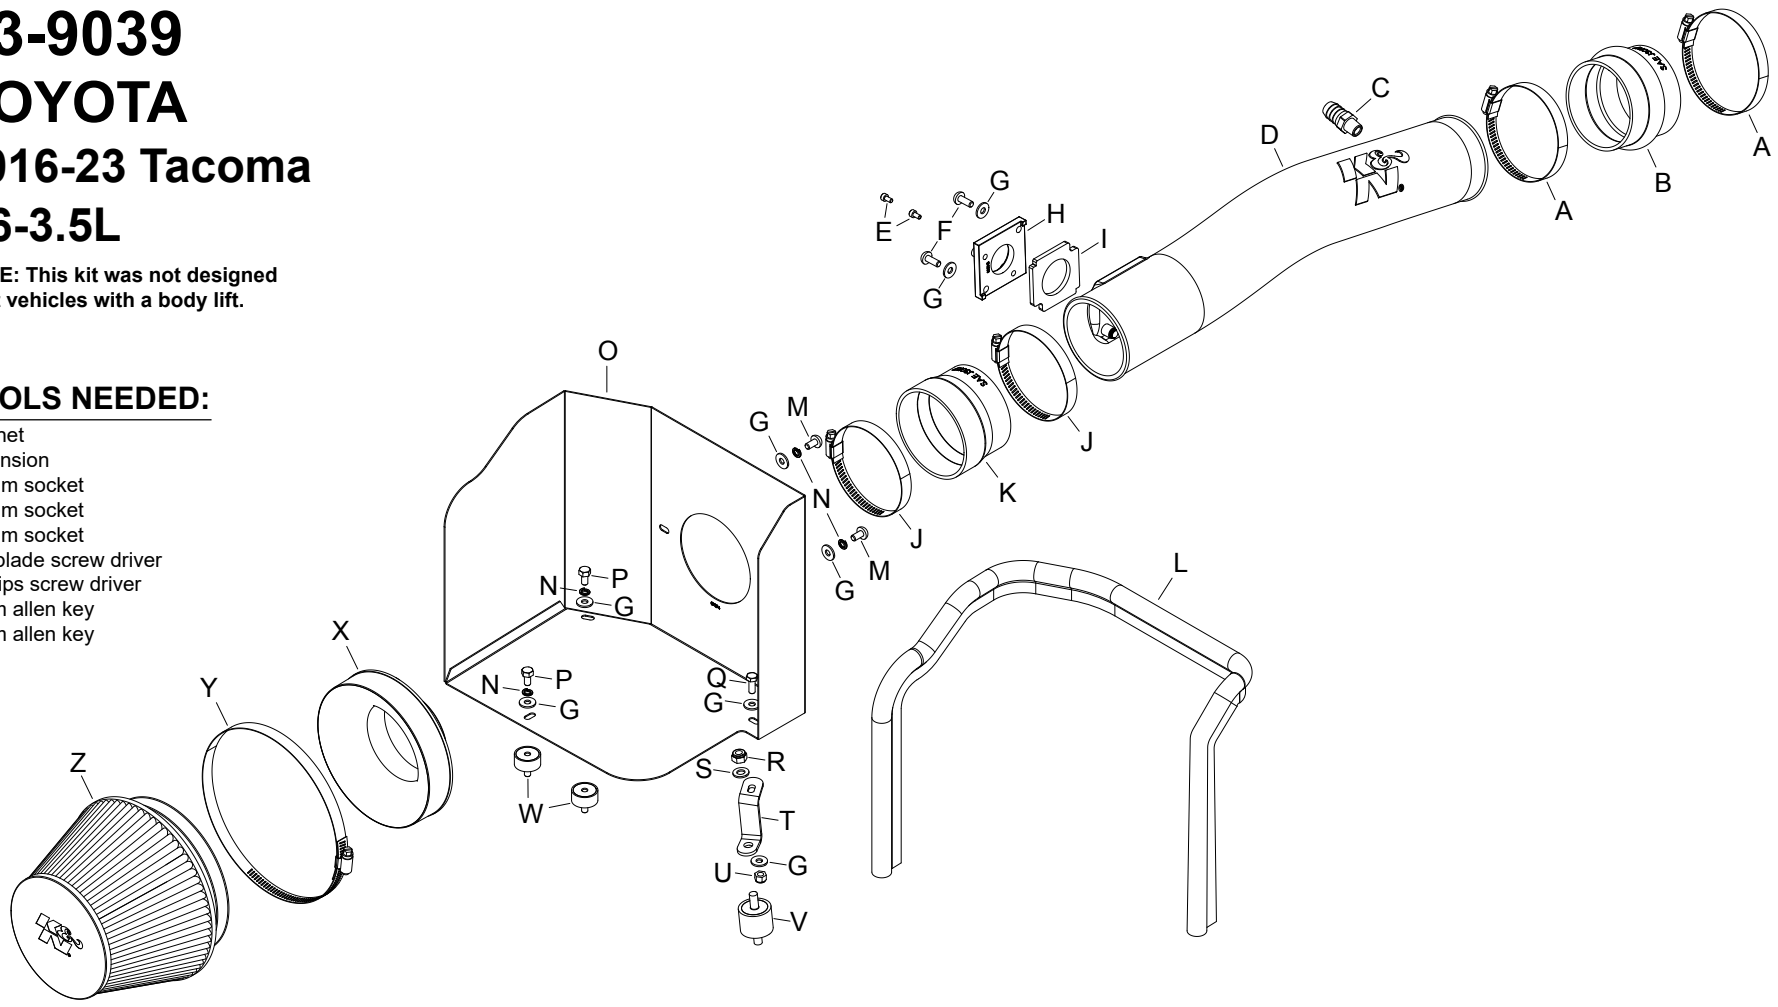

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	HOSE CLAMP #52	2	08610	J	HOSE CLAMP #56	2	08620	S	WASHER; 8MM, FLAT	1	08272
B	HOSE; HUMP 3.25"ID X 2-5/8"L	1	08171	K	HOSE; 3.5"ID X 2"L	1	08698	T	BRACKET; SHORT "Z"	1	07958
C	VENT; 1/4"NPT, 5/8"BARB	1	82638	L	EDGE TRIM; (39")	1	102496	U	NUT; 6MM NYLOCK, HEX	1	07512
D	INTAKE TUBE; (KO)	1	087311A	M	BOLT; M6-1 X 12MM BTNHD	2	07794	V	MOUNT; RUBBER 1" X 8MM	1	1228560
E	BOLT; M4 -.7 X 8MM ALNHD	2	07733	N	WASHER, M6 SPLIT LOCK ZINC	4	1-3025	W	STUD; RUBBER MNT, M/F, 1/2"L	2	070228
F	BOLT; M6 X 1 X 16MM BTNHD	2	07730	O	HEAT SHIELD	1	07394A	X	ADAPTER; UNIVERSAL, 6"	1	21512-1
G	WASHER; 6MM FLAT	8	08269	P	BOLT; M6 X 1 X 12MM HEX	2	07727	Y	HOSE CLAMP # 104	1	08697
H	ADAPTER; MASS AIR	1	088048	Q	BOLT; M6-1 X 16MM HEX	1	07812	Z	AIR FILTER	1	RU-2960
I	GASKET; 3/16" PORON	1	09074	R	NUT; 8MM NYLOCK	1	07502				

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Lift up the engine cover to dislodge it from the mounting studs and then remove it from the vehicle.



3. Release the spring clamp and disconnect the crank case vent hose from the factory intake tube.



4. Loosen the hose clamp securing the factory intake tube to the throttle body.



5. Disconnect the mass air sensor electrical connection and unhook the harness from the air filter housing.



6. Release the two clips securing the upper air filter housing and then remove the intake tube and air filter hosing along with the factory air filter.