TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 67-1561 Installation Instructions

Exhaust Kit for Ram 1500 with Factory Dual Exhaust (2009-2019)

Part number: 67-1561

trailfortress.com/k-n-exhaust-kit-67-1561

Scan for fitment, price and install help


PERFORMANCE EXHAUST SYSTEM

INSTALLATION INSTRUCTIONS

67-1561
DODGE
2009-2019 RAM 1500
V8-5.7L

TOOLS NEEDED:

Ratchet
Ratchet Extension
15mm socket
Exhaust Grommet Remover

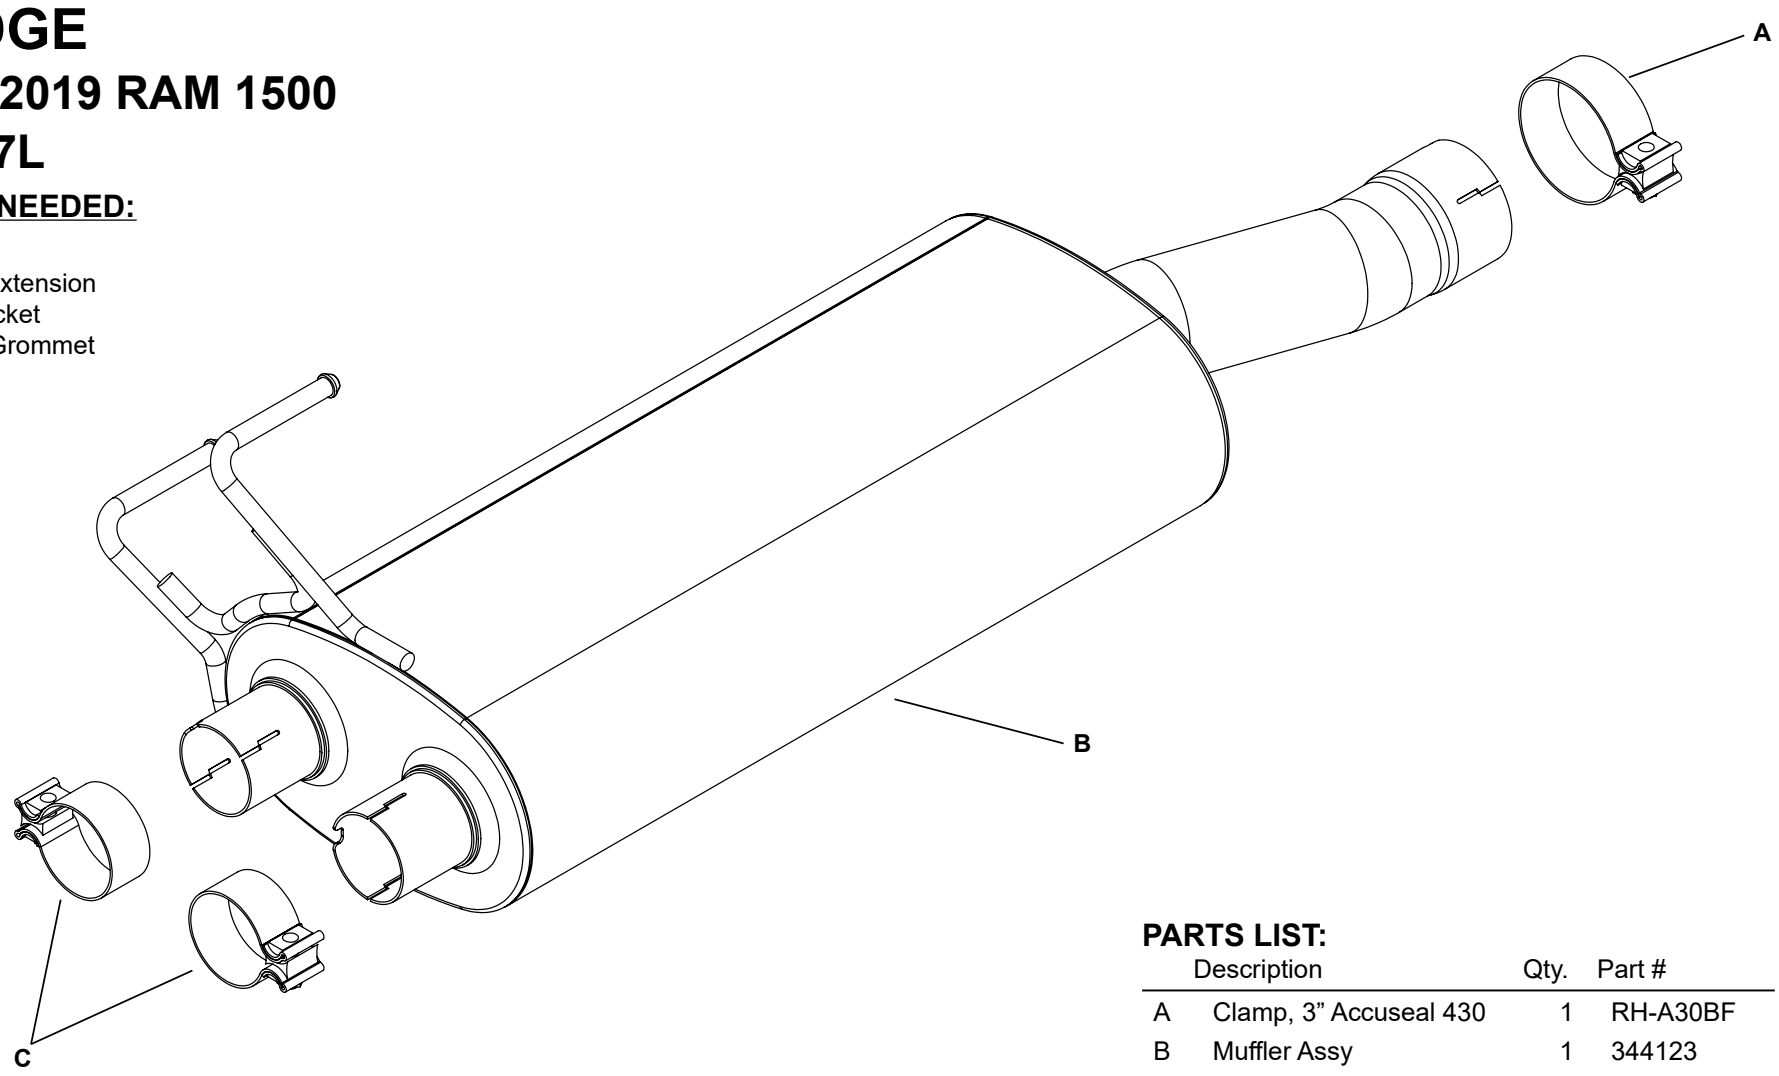


PARTS LIST:

	Description	Qty.	Part #
A	Clamp, 3” Accuseal 430	1	RH-A30BF
B	Muffler Assy	1	344123
C	Clamp, 2.25” Accuseal 430	2	RH-A225BF


TO START:

1. Turn off the ignition and allow engine and exhaust to cool to the touch.
WARNING: Exhaust components can be extremely hot after vehicle operation and can severely burn you.
Raise the vehicle to access the factory exhaust system with a lift or appropriate jack and properly positioned stands. It may be helpful to spray all existing hardware and hanger assemblies being removed with a penetrating oil or similar lubricant and allow to soak, especially if older and rusted.
WARNING: If working without a lift always use the correct jack points and lifting procedures specified by the vehicle manufacturer. Serious injury or death could occur if proper safety measures are not followed.

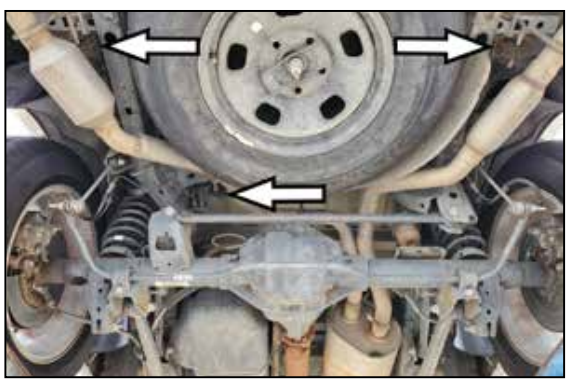



2. Lubricate all insulators before and throughout the installation process to ease removal of the stock muffler and tail pipes

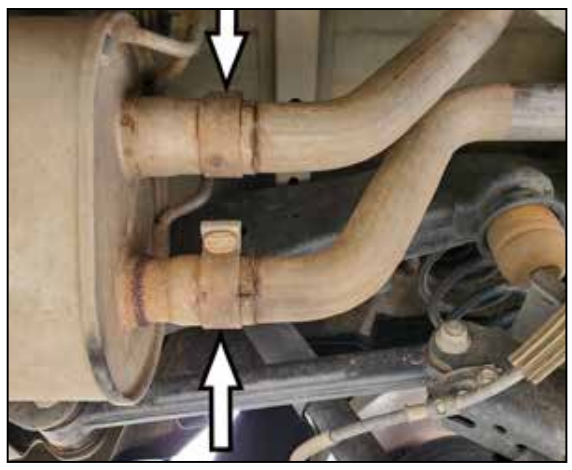

3. Loosen muffler outlet clamps.



4. Remove the passenger side rubber insulator. Gently work the tailpipe rearward by moving the tailpipe side-to-side while gradually pulling rearward from the muffler outlet.





5. Remove the driver side tailpipe insulators. Once the driver’s side tailpipe is free from the insulators, gently work the tailpipe rearward by moving the tailpipe side-to-side while gradually pulling rearward.