TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 69-1019TS Installation Instructions

Metal Intake for Honda Civic & Acura ILX (2012-2015)

Part number: 69-1019TS

trailfortress.com/k-n-performance-air-intake-system-69-1019ts

Scan for fitment, price and install help

TYPHOON INTAKE SYSTEMS


INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE KNFILTERS.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE.

INSTALLATION INSTRUCTIONS

69-1019TS
HONDA / ACURA
2012-14 Civic SI
2013-14 ILX
L4-2.4L

TOOLS NEEDED:

3mm Allen Wrench
4mm Allen Wrench
10mm Socket
Extension
Flat Blade Screwdriver
Phillips Screwdriver
Pliers
Ratchet

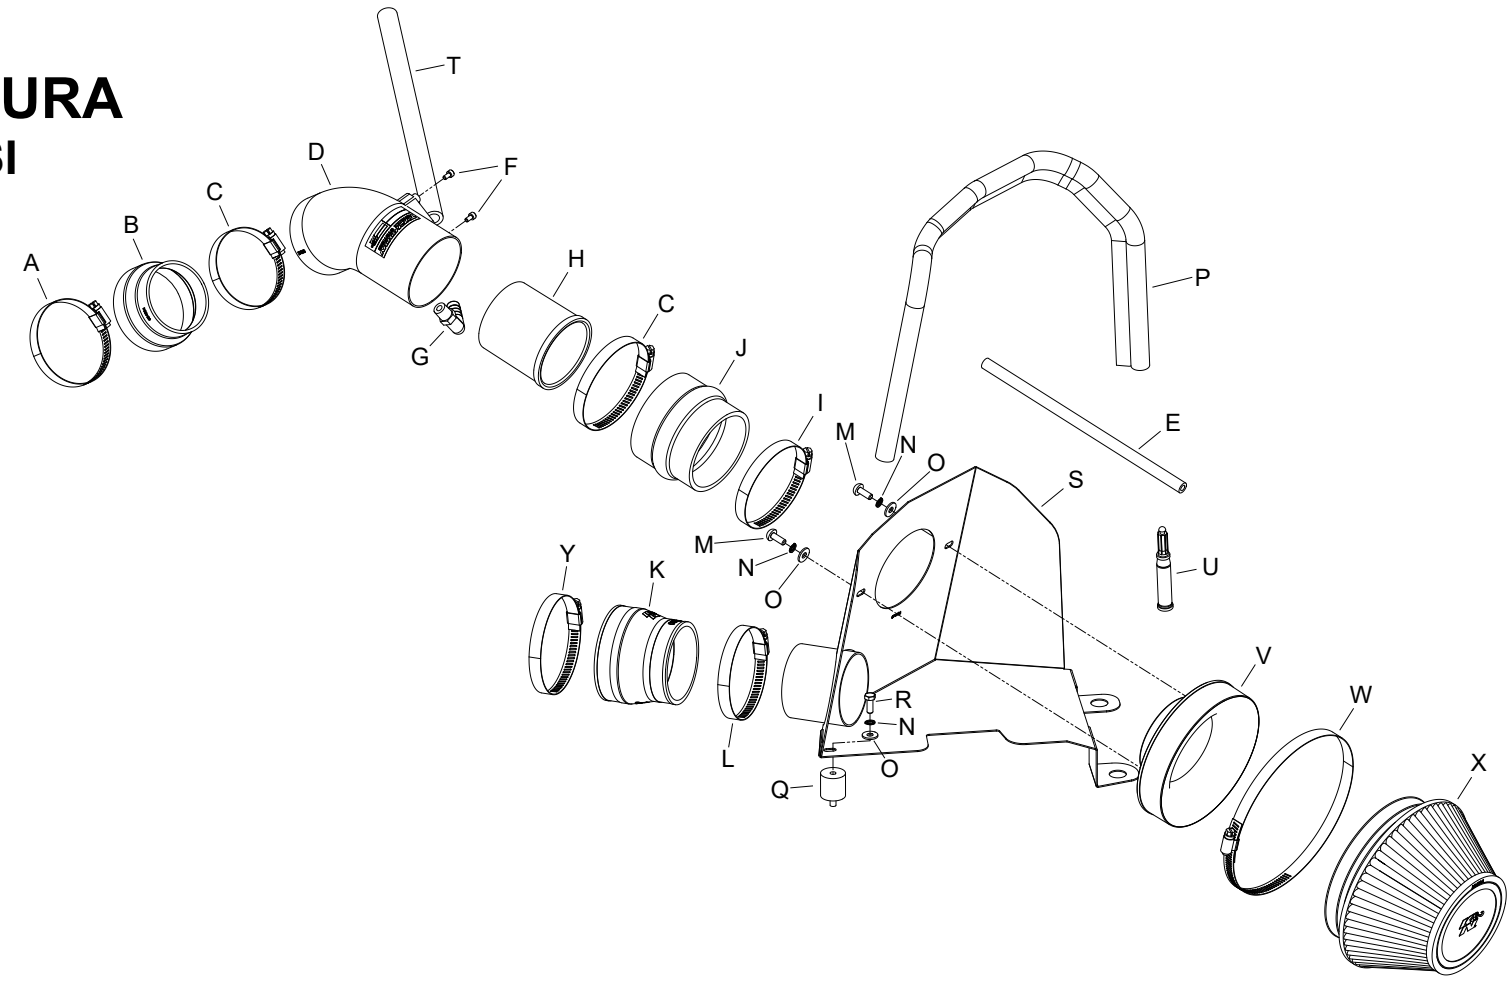

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	HOSE CLAMP #44	1	08560	J	HOSE, HUMP 3.25/3.50	1	5-576	S	HEAT SHIELD	1	074106
B	HOSE; 3-1/4” TO 2-3/4” ID	1	084034	K	HOSE; 3.0”ID TO 3.8”ID	1	08637	T	HOSE; 1/2” ID X 12”L	1	087031
C	HOSE CLAMP #52	2	08610	L	HOSE CLAMP #48	1	08601	U	SUPER GLUE, 3G DRIP PROOF	1	409
D	INTAKE TUBE	1	27560	M	BOLT; M6 X 1.00 X 16MM	2	07730	V	ADAPTER: UNIVERSAL, 6”	1	21512-1
E	HOSE; 1/4” ID X 10-1/2”L	1	08400	N	WASHER, M6 SPLIT LOCK	3	1-3025	W	HOSE CLAMP # 104	1	08697
F	BOLT; M4-0.07 8MM, A/H, SS	2	07733	O	WASHER; 6MM FLAT, SS	3	08269	X	AIR FILTER	1	RU-4600
G	VENT; 90 DEG, 1/2” HOSE	1	08110FK	P	EDGE TRIM (30”)	1	102489	Y	HOSE CLAMP #64	1	08645
H	VENTURI; 3.075” OD X	1	9-0378	Q	STUD; RUBBER MOUNT	1	02033				
I	HOSE CLAMP #56	1	08620	R	BOLT; 6MM-1.00 X 16MM	1	07812				

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable. Be sure the engine is completely cool before beginning the removal of the stock components. Be sure the vehicle is completely cool before beginning intake kit installation.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles’ anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Disconnect the mass air sensor electrical connection and unhook the wiring harness from the upper air box.



3. Release the spring clamp securing the crank case vent tube into the intake tube and then remove the crank case vent tube from the intake tube.



4. Loosen the hose clamp securing the intake tube to the throttle body.



5. Release the two clips securing the upper air box to the lower air box and then remove the upper air box and intake tube assembly.



6. Remove the lower air box retaining bolt shown.