TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 69-1020TS Installation Instructions

Metal Intake for Honda Civic (2012-2015)

Part number: 69-1020TS

trailfortress.com/k-n-performance-air-intake-system-69-1020ts

Scan for fitment, price and install help

TYPHOON INTAKE SYSTEMS

INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE KNFILTERS.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE.


INSTALLATION INSTRUCTIONS

69-1020TS
HONDA
2012-14 Civic
L4-1.8L

NOTE: Excludes LEV2 SULEV
2012-2014 Test Groups: CHNXV01.8VC2, DHNXV01.82C2, EHNXV01.8WC2

TOOLS NEEDED:

Ratchet
Extension
10mm socket
8mm socket, 6mm socket
Phillips screw driver
Flat blade screw driver
10mm wrench
¾" wrench
4mm Allen
3mm Allen
pliers.

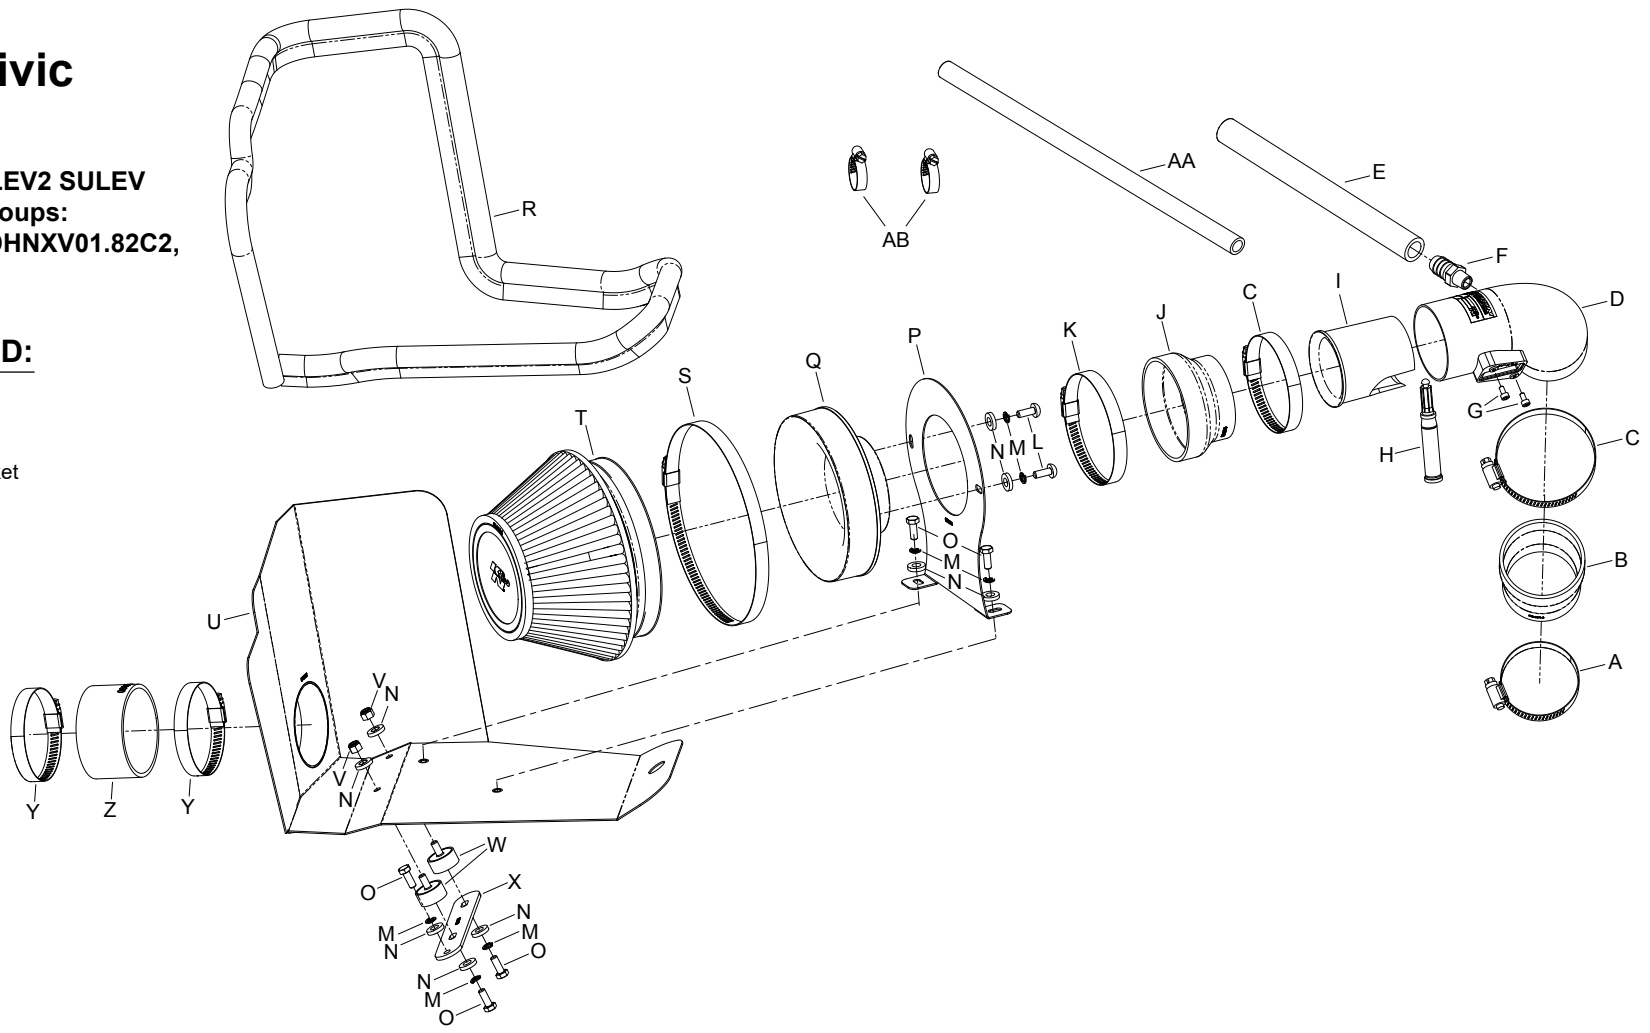

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	HOSE CLAMP; #36	1	08530	J	HOSE; 3.5" TO 2.75"ID X 2"L	1	084093	S	HOSE CLAMP; #104	1	08697
B	HOSE; 2.75" TO 2.5"ID X 2.5"L	1	084016	K	HOSE CLAMP; #56	1	08620	T	AIR FILTER	1	RU-4600
C	HOSE CLAMP; #44 STAINLESS	2	08560	L	BOLT; M6 X 1 X 16MM	2	07730	U	HEAT SHIELD	1	073122
D	INTAKE TUBE; SILVER	1	27581TS	M	WASHER; M6 SPLIT LOCK	7	1-3025	V	NUT; 6MM NYLOCK	2	07512
E	HOSE; 5/8"ID X 9.75"L	1	084047	N	WASHER; 1/4"ID X 5/8"OD	9	08275	W	STUD; RUBBER 1/2"L X 1"W	2	070228
F	FITTING; VENT 1/4"NPT	1	82638	O	BOLT; M6-1 X 16MM	5	07812	X	BRACKET; STRT	1	083173
G	BOLT; M4-.7 X 8MM	2	07733	P	BRACKET	1	083174	Y	HOSE CLAMP; #48	2	08601
H	SUPER GLUE	1	409	Q	ADAPTER; 6" FILTER	1	21512-1	Z	HOSE; 3"ID X 1.75"L	1	08190
I	VENTURI; 2.5"OD X 2.25"ID	1	9-479	R	EDGE TRIM; 57"L	1	102470	AA	HOSE; 5/16"ID X 17"L	1	5-2017
								AB	HOSE CLAMP; #6 MINI	2	08407

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles' anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.




2. Loosen the hose clamp securing the intake tube to the air box and then disconnect the tube from the air box.



3. Disconnect and remove the fresh air hose from the air box and fresh air inlet, then remove the hose from the vehicle.



4. Remove the two bolts retaining the air box.

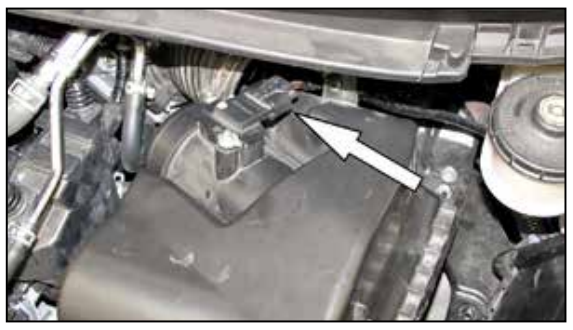

5. Lift the air box up to release it from the mounting grommet and then pull it forward to gain access to the mass air sensor connection.



6. Disconnect the mass air sensor electrical connection and then remove the complete air box assembly.
NOTE: K&N Engineering, Inc., recommends that customers do not discard factory air intake.

trailfortress.com/k-n-performance-air-intake-system-69-1020ts