TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 69-1210TS Installation Instructions

Metal Intake for Honda Accord & Acura TL

Part number: 69-1210TS

trailfortress.com/k-n-performance-air-intake-system-69-1210ts

Scan for fitment, price and install help

TYPHOON INTAKE SYSTEMS

INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE KNFILTERS.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE.


INSTALLATION INSTRUCTIONS

69-1210TS
ACURA / HONDA
2009-10 TL
V6-3.7L
2007-14 TL
V6-3.5L
2010-12 Accord Crosstour
2008-12 Accord

NOTE: Excluding Accord 2008-2009 LEV2 SULEV test groups 8HNXV03.5BMC and 9HNXV03.5EC3

TOOLS NEEDED:

5/8” Wrench
3mm Allen Wrench
10mm Socket
10mm Wrench
12mm Wrench
Extension
Flat Blade Screwdriver
Phillips Screwdriver
Pliers
Ratchet

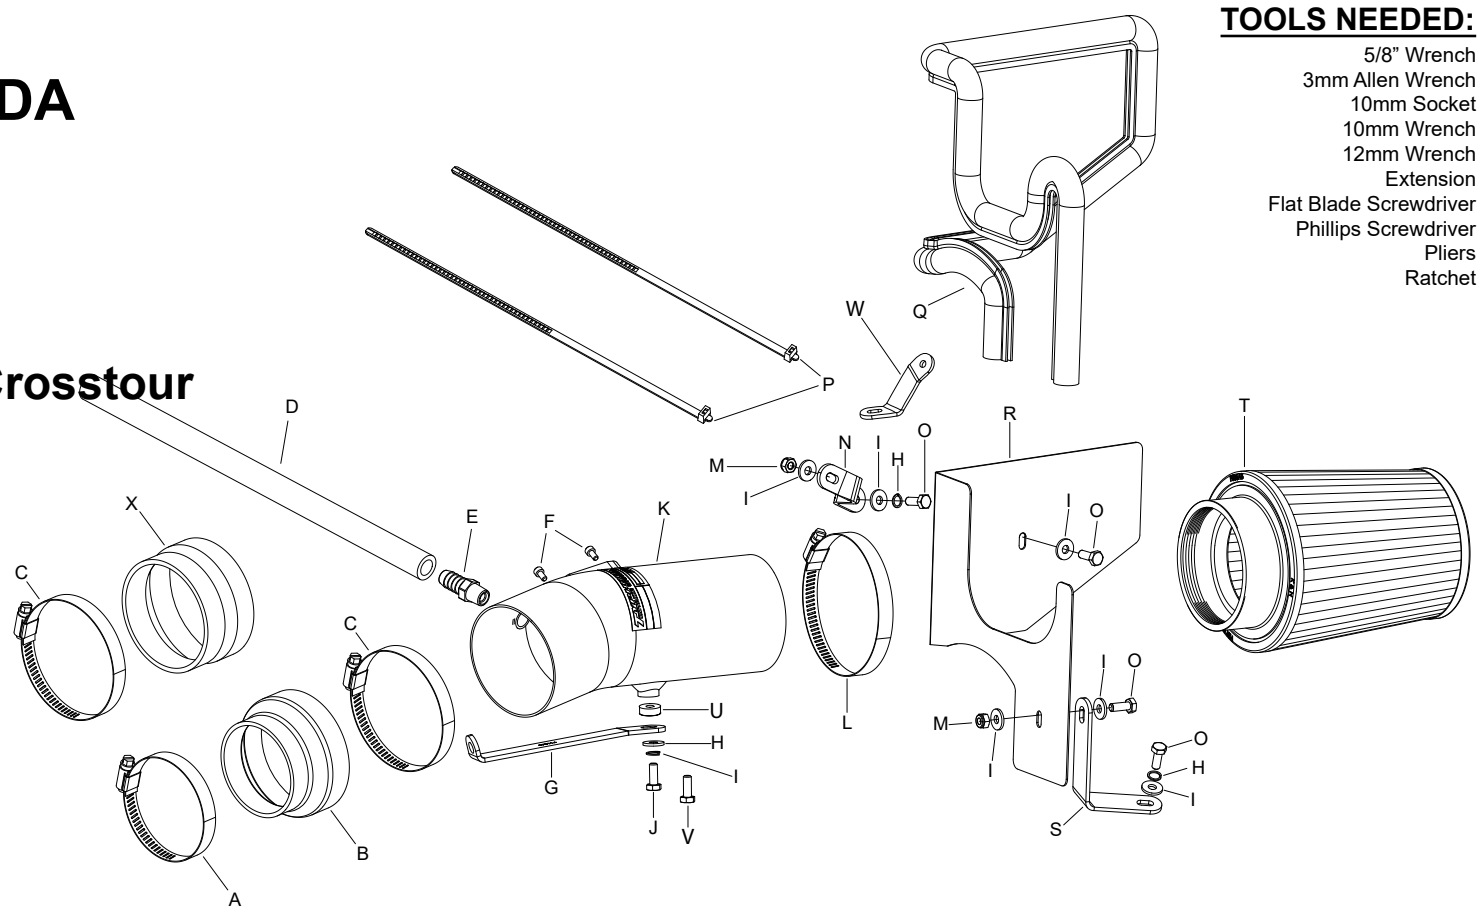

PARTS LIST

	Description	Qty.	Part #								
A	HOSE CLAMP #44	1	08560	I	WASHER; 1/4”ID X 5/8”OD-SAE	7	08275	Q	EDGE TRIM (48”)	1	102485A
B	HOSE; 3.5” TO 2.75” X 2”L,	1	084093	J	BOLT; M6 X 1 X 20MM HEX,	1	07795	R	HEAT SHIELD	1	073101
C	HOSE CLAMP #52	2	08610	K	INTAKE TUBE	1	27193TS	S	BRACKET; “L”, STL., FB/PC	1	070115
D	HOSE; 1/2”ID X 14”L	1	08402	L	HOSE CLAMP #60	1	08624	T	AIR FILTER	1	RU-4630
E	VENT; STRT. 1/2” HOSE, 1/4”NPT,	1	080022	M	NUT; 6MM NYLOCK, HEX HEAD	2	07512	U	SPACER: .625”OD X .250”ID X .250”L	1	06555
F	BOLT; M4 - .7 X 8MM	2	07733	N	BRACKET; “Z”, STL., FB/PC	1	070116	V	BOLT; M6-1.00 X 25MM	1	07858
G	BRACKET; “L”, STL., FB/PC	1	070114	O	BOLT; M6 - 1 X 16MM	4	07812	W	BRACKET; “Z”, STL, TK/PC	1	083158
H	WASHER; 1/4” LOCK, ZN	3	08198	P	CABLE TIES; 11”	2	21590	X	HOSE 3.5” to 3.25”ID X 2.5”L	1	08051

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:



1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles’ anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Disconnect the positive battery cable, remove the battery hold down and then remove the battery.



3. Disconnect the mass air sensor electrical connection.



4. Disconnect the crankcase vent tube from the intake tube and valve cover port as shown. The spring clamps will not be reused.
NOTE: Acura vehicles have a side and front engine cover that will need to be removed before performing this step.



5. Loosen the hose clamp which secures the stock intake tube to the throttle body.



6. Loosen the bolt which secures the lower airbox to the battery tray.



7. Remove the airbox assembly from the vehicle; be sure to unhook the wiring harness from the airbox as it is removed.
NOTE: K&N Engineering, Inc., recommends that customers do not discard factory air intake.

trailfortress.com/k-n-performance-air-intake-system-69-1210ts