TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 69-1506TS Installation Instructions

Metal Intake for Honda Accord (2018-2022)

Part number: 69-1506TS

trailfortress.com/k-n-performance-air-intake-system-69-1506ts

Scan for fitment, price and install help

TYPHOON INTAKE SYSTEMS


NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.
See knfilters.com for CARB status on each part for a specific vehicle

INSTALLATION INSTRUCTIONS

69-1506TS
HONDA
2018-22 Accord
L4-2.0L

TOOLS NEEDED:

Phillips screw driver
Flat blade screw driver
3mm allen
ratchet
Extension
10mm socket
10mm wrench

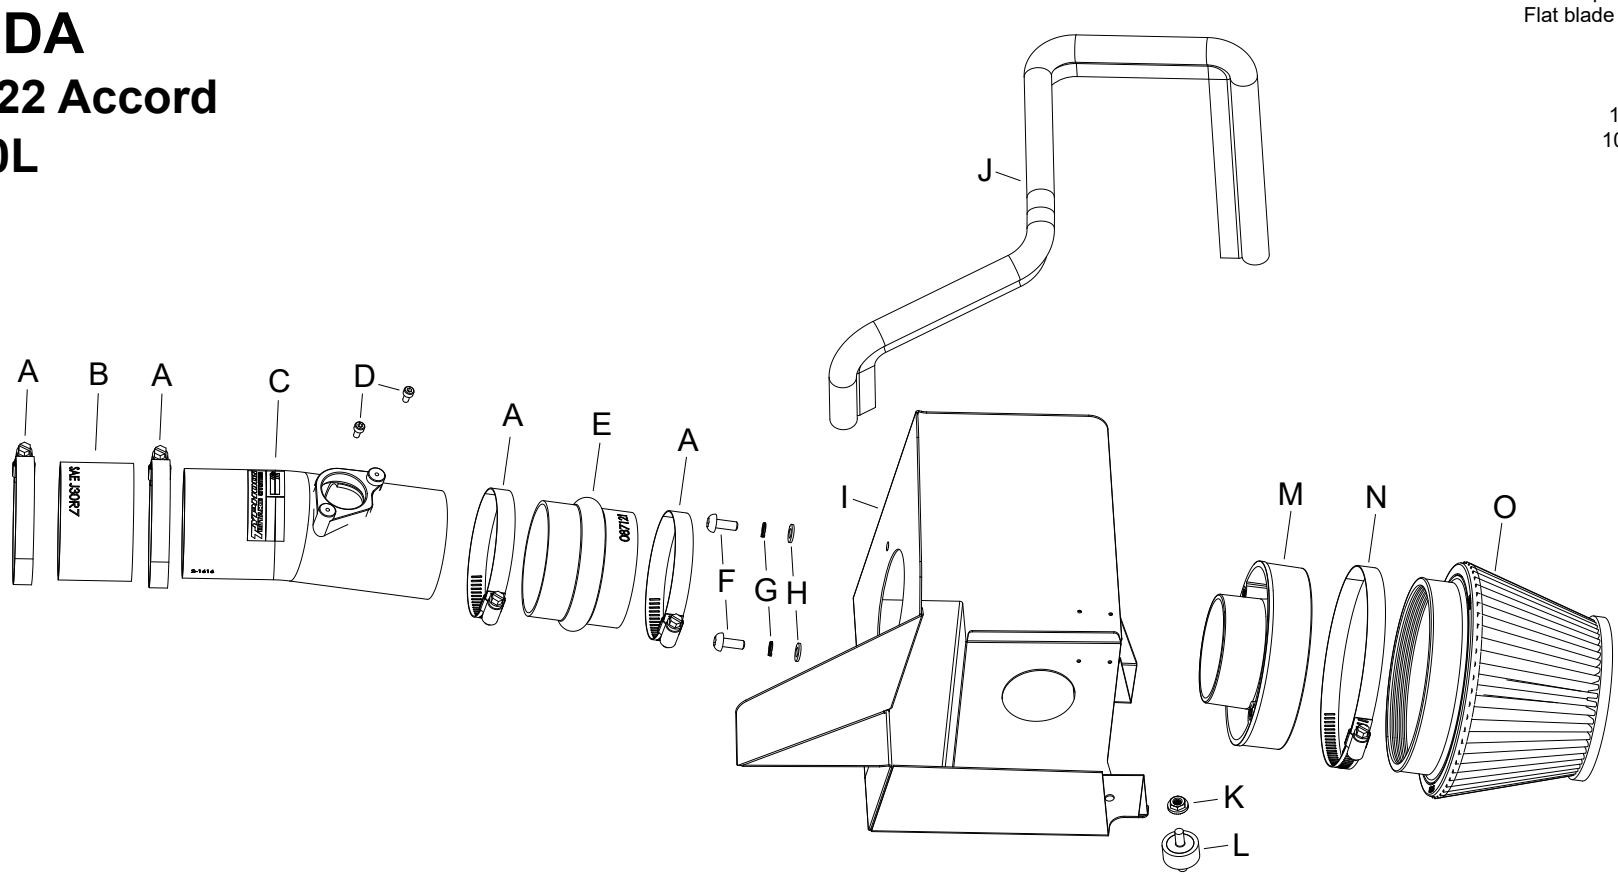

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	HOSE CLAMP #48	4	08601	F	BOLT; M6 X 1 X 16MM	2	07730	K	NUT; M6, SERRATED	1	KIT20WFCZ060
B	HOSE; 3"ID X 2"L	1	08711	G	WASHER, M6 SPLIT LOCK ZINC	2	1-3025	L	STUD; M6-1.00 M/M, RUBBER	1	07027
C	INTAKE TUBE; (AL)	1	2-1616S	H	WASHER; 6MM FLAT	2	08269	M	ADAPTER; FILTER, 3.0"OD	1	21569
D	BOLT; M4 - .7 X 8MM	2	07733	I	HEAT SHIELD	1	073265	N	HOSE CLAMP; #88	1	KITHS88
E	HOSE; HUMP 3"ID X 2.5"L	1	087121	J	EDGE TRIM; 30”L	1	102489A	O	AIR FILTER	1	RU-5163XD

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.




2. Disconnect the mass air sensor electrical connection.



3. Loosen the hose clamp that secures the intake hose to the turbo inlet tube.



4. Remove the four push pins that secure the fresh air intake duct and then lift the fresh air intake duct out to remove it from the vehicle.

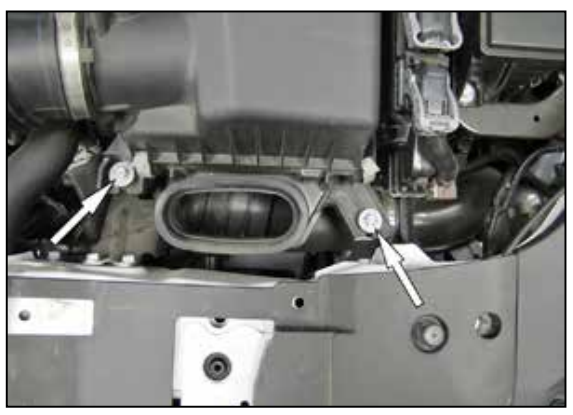

5. Remove the two bolts that secure the air filter housing to the vehicle. Pull the housing up to dislodge it from the mounting stud and remove from the vehicle.
NOTE: K&N Engineering, Inc., recommends that customers do not discard factory air intake.



6. Install the provided edge trim onto the heat shield as shown.
NOTE: Some trimming of the edge trim will be necessary.

trailfortress.com/k-n-performance-air-intake-system-69-1506ts