TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 69-5322TS Installation Instructions

Metal Intake for Kia Forte & Hyundai Elantra

Part number: 69-5322TS

trailfortress.com/k-n-performance-air-intake-system-69-5322ts

Scan for fitment, price and install help

TYPHOON INTAKE SYSTEMS


NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.
See knfilters.com for CARB status on each part for a specific vehicle

INSTALLATION INSTRUCTIONS

69-5322TS
KIA / HYUNDAI
2019-24 Forte
2020 Elantra
L4-2.0L

TOOLS NEEDED:

Pliers
Flat Blade Screw Driver
Ratchet
Extension
10mm Socket
9/16” Wrench
Phillips Screwdriver
10mm Wrench

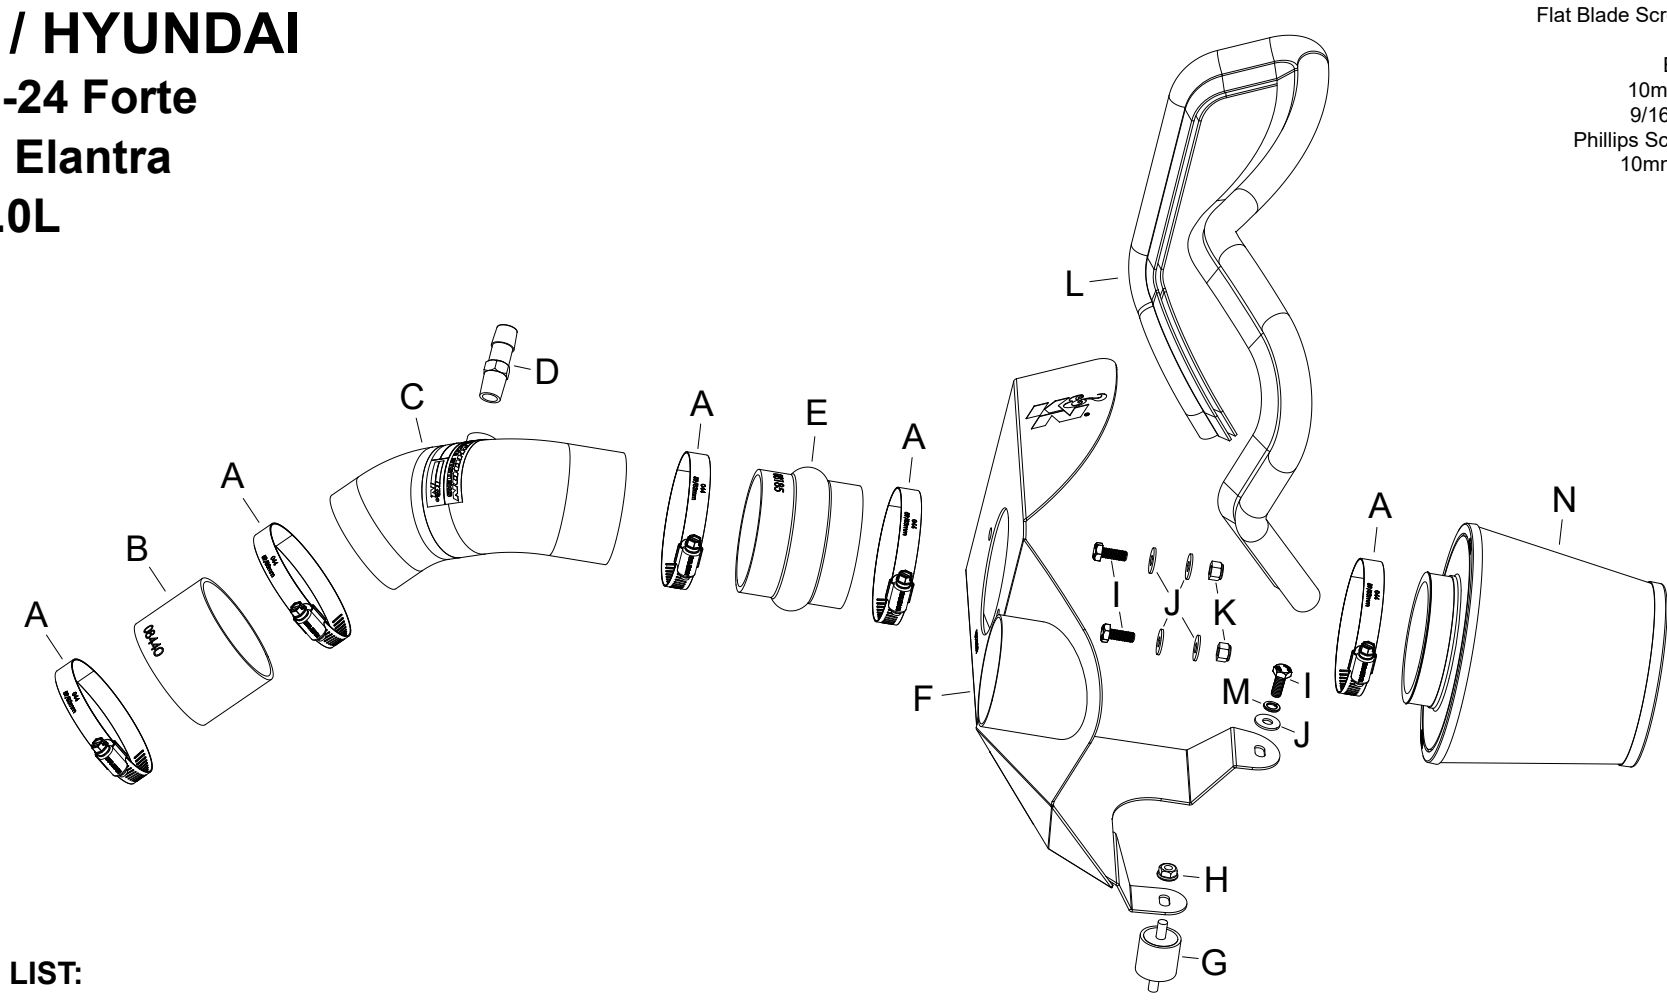

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	HOSE CLAMP; #44	5	08577	F	HEAT SHIELD	1	073289	K	NUT; 6MM NYLOCK, HEXHEAD	2	07512
B	HOSE; 2.75"ID X 2"L	1	08440	G	MOUNT, RUBBER 1" X 6MM	1	1228599	L	EDGE TRIM; (35”L)	1	102471
C	TUBE; 2.75"OD X 8"L, AL	1	25823S	H	NUT; M6, HEX, SERRATED	1	444.460.04	M	WASHER; M6 SPLIT LOCK ZINC	1	1-3025
D	VENT; STRT, 1/2" HOSE, 1/4"	1	080022	I	BOLT; M6-1 X 16MM, HEX	3	07812	N	AIR FILTER	1	RC-5284
E	HOSE; HUMP 2.75"ID X 2.5"L	1	08185	J	WASHER; 6MM FLAT	5	08269				

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Push in the center of the retaining pins and then remove the fresh air retaining pins. Remove the fresh air intake scoop and duct from the vehicle.



3. Disconnect the mass air sensor electrical connection. Release the spring clamp that secures the PCV hose to the intake hose and then disconnect the PCV hose.



4. Loosen the hose clamp that secures the intake hose to the throttle body.



5. Release the two upper air filter housing retaining clips and then remove the upper air filter housing and intake hose from the vehicle.



6. Remove the three bolts that secure the lower air filter housing and then remove the lower air filter housing. **NOTE: K&N Engineering, Inc., recommends that customers do not discard factory air intake.**