TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 69-7078TS Installation Instructions

69 Series Metal Intake for Nissan 370Z & INFINITI G37

Part number: 69-7078TS

trailfortress.com/k-n-performance-air-intake-system-69-7078ts


Scan for fitment, price and install help

TYPHOON INTAKE SYSTEMS

INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE KNFILTERS.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE.

INSTALLATION INSTRUCTIONS

69-7078TS
NISSAN / INFINITI
2009-14 370Z / 370Z NISMO
2008-13 G37
V6-3.7L

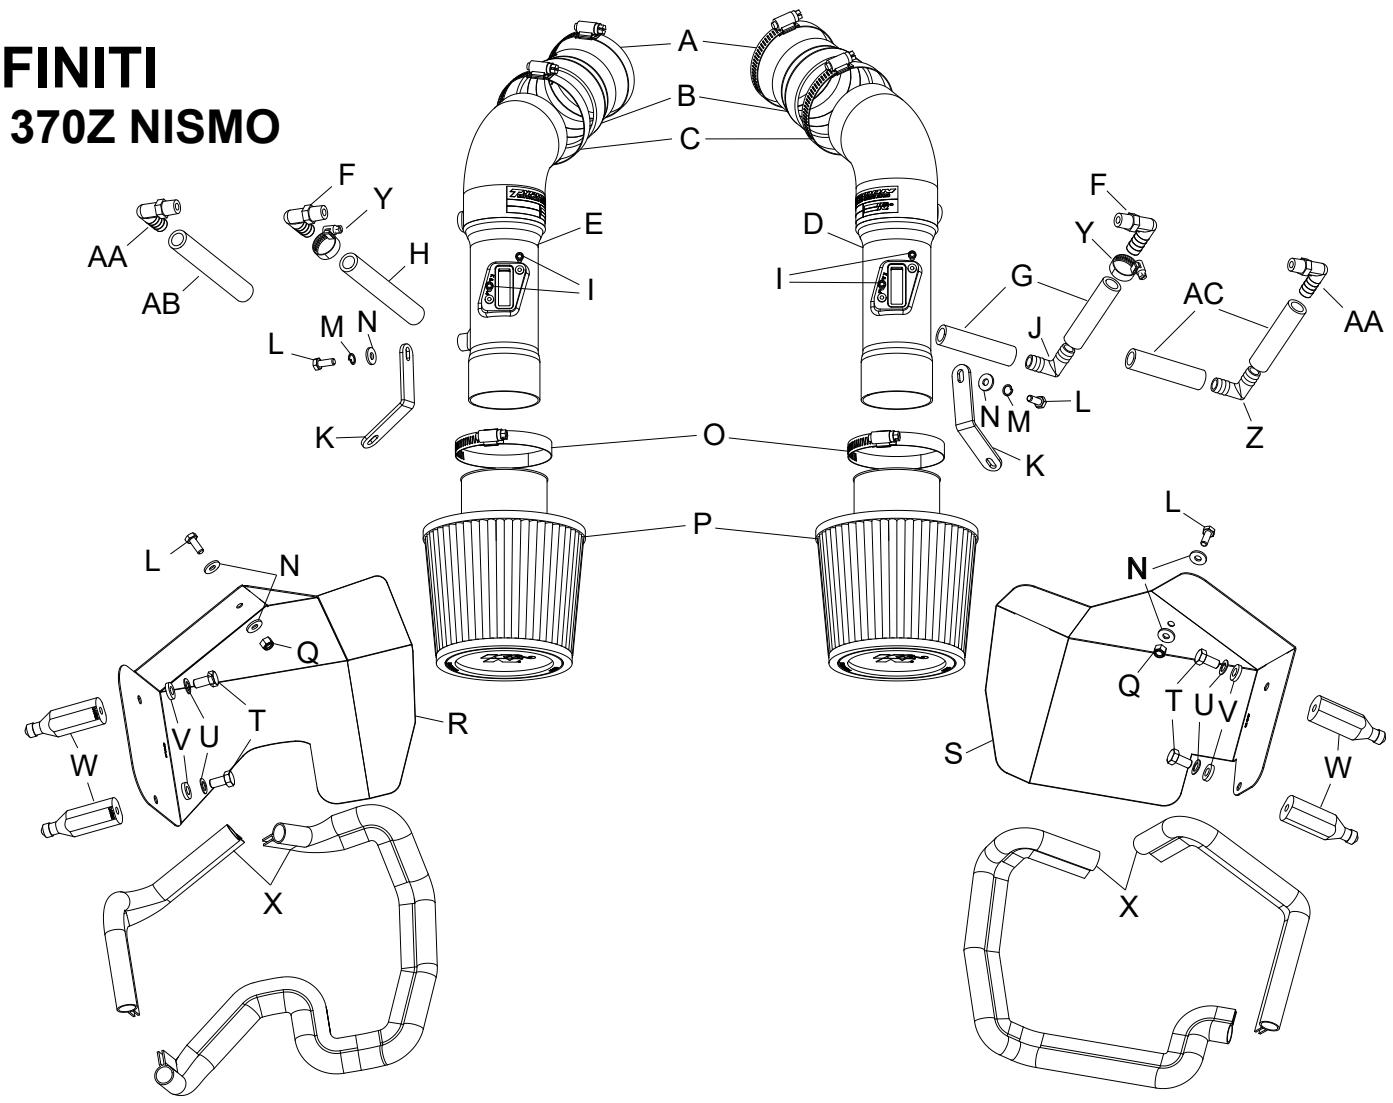

TOOLS NEEDED:

Ratchet
Extension
13mm socket
10mm socket
Flat blade screw driver
Phillips screw driver
Pliers
3mm allen wrench
10mm wrench.

PARTS LIST:

	Description	Qty.	Part #								
A	HOSE CLAMP #48	2	08601	K	BRACKET; ANGLED	2	070581	U	WASHER; 8MM SPRING (WAVE)	4	08239
B	HOSE; 3” TO 2-3/4”IDX 2”L TPRD	2	084036	L	BOLT; 6MM-1.00X16MM, SS	4	07812	V	WASHER; 5/16”IDX5/8”OD, FLAT	4	08276
C	HOSE CLAMP #44 STAINLESS	2	08560	M	WASHER; 1/4” LOCK, ZN	2	08198	W	STANDOFF	4	06532
D	INTAKE TUBE	1	27466	N	WASHER; 1/4”ID X 5/8”OD	6	08275	X	EDGE TRIM (39”)	2	102496
E	INTAKE TUBE	1	27467	O	HOSE CLAMP #44	2	08577	Y	HOSE CLAMP	2	08410
F	VENT; 90DEG, 1/2”HOSE,1/4”NPT,	2	08110FK	P	AIR FILTER	2	RU-4960XD	Z	90 DEGREE 1/2” MENDER	1	08065
G	HOSE; 1/2”ID X 4.5”L	2	08485	Q	NUT; 6MM NYLOCK, HEXHEAD,	2	07512	AA	90 DEGREE 5/8” NPT	2	08525
H	HOSE; 1/2”ID X 7”L	1	08159	R	HEAT SHIELD	1	074058	AB	HOSE: 5/8”X7”L	1	084008
I	BOLT; M4-0.07 8MM, A/H CAP	4	07733	S	HEAT SHIELD	1	074057	AC	HOSE: 5/8”X4”L	2	08244
J	VENT; 90 DEG, 5/8”HOSE, BLK	1	08072	T	BOLT; 8MM-1.25X16MM, HEXHEAD	4	07844				

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles’ anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Remove the two bolts which secure the front engine cover and then remove the front engine cover.
NOTE: On models not equipped with a strut tower brace it will be necessary to remove all five bolts securing the engine cover.



3. Disconnect the passenger side mass air sensor and unhook the wiring harness from the air box.



4. Loosen the hose clamp which secures the passenger side intake hose to the air box. Remove the bolt which secures the air box to the inner fender.



5. Remove the passenger side air box from the vehicle.



6. Remove the bolt shown which secures the crank case vent tube assembly to the intake plenum.