TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 69-9506TTK Installation Instructions

Metal Intake for VW Golf, GTI, Jetta & Audi A3

Part number: 69-9506TTK


trailfortress.com/k-n-performance-air-intake-system-69-9506ttk

Scan for fitment, price and install help

INSTALLATION INSTRUCTIONS

Not legal for sale or use in California on any pollution controlled motor vehicle.

69-9506TTK
VOLKSWAGEN / AUDI
2015-19 Golf
L4-1.8L Turbo
2015-26 GTI
2015-19 Golf R
2019-22 Arteon
2019-26 Jetta GLI
2017-20 S3
2017-20 A3
2017-22 Q3
L4-2.0L Turbo

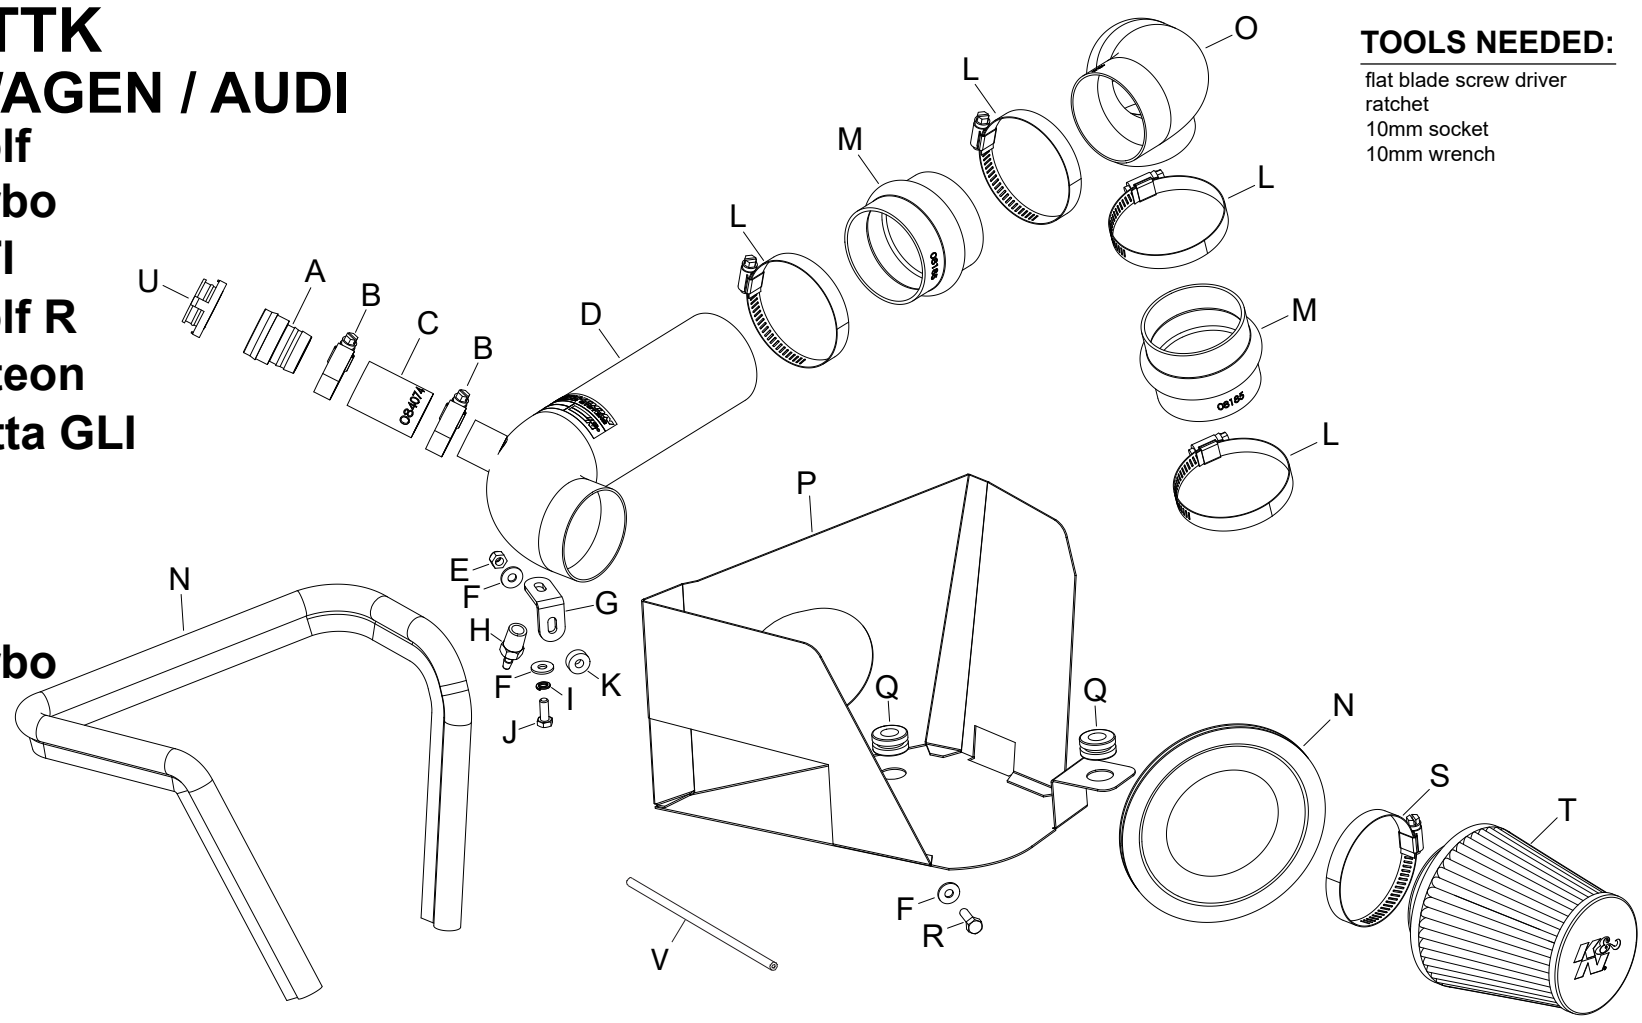

TOOLS NEEDED:

flat blade screw driver
ratchet
10mm socket
10mm wrench

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	FITTING; 1-1/8”OD, QC. BLK	1	088012	H	FITTING; 1/4”NPT, 3/16 BARB	1	080021	O	TUBE; 2.75”OD X 11”L, (AL)	1	27336TK
B	HOSE CLAMP #16	2	08413	I	WASHER, M6 SPLIT LOCK ZINC	1	1-3025	P	HEAT SHIELD	1	073181
C	HOSE; 1.125" ID X 2" L	1	084074	J	BOLT; M6-1 X 16MM, HEX	1	07812	Q	GROMMET; 1"OD,1/2"ID,1/2"	2	08064
D	TUBE; 2.75”OD X 13”L, (AL)	1	27337TK	K	SPACER: .625" OD X .250"ID	1	06555	R	BOLT; M6 X 1 X 20MM, HEX	1	07795
E	NUT; 6MM NYLOCK, HEXHD	1	07512	L	HOSE CLAMP #44 STAINLESS	4	08560	S	HOSE CLAMP #48	1	08601
F	WASHER; 6MM FLAT	3	08269	M	HOSE; HUMP 2.75”ID X 2.5”L	2	08185	T	AIR FILTER	1	RU-9350
G	BRACKET; "L"	1	064314	N	EDGE TRIM; (44"L)	1	102486	U	CAP; PUSH FIT PLUG	1	8-215
								V	HOSE; 4MM ID X 12”L	1	08147

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.


NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.




2. Loosen the hose clamp that secures the intake tube to the turbo inlet.

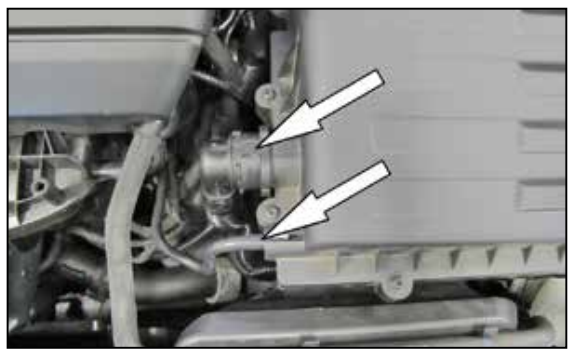


3. Disconnect the secondary air tube and vacuum hose from the air filter housing.
NOTE: Some vehicles may not be equipped with a secondary air tube.



4. Lift up the air filter housing to dislodge it from the mounting grommets and then rotate the assembly up from the rear to disengage it from the fresh air intake and remove it from the vehicle.
NOTE: K&N Engineering, Inc., recommends that customers do not discard factory air intake.

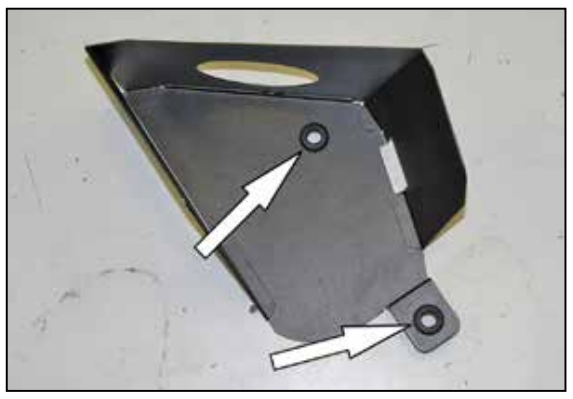

5. Install the two provided grommets into the heat shield as shown.

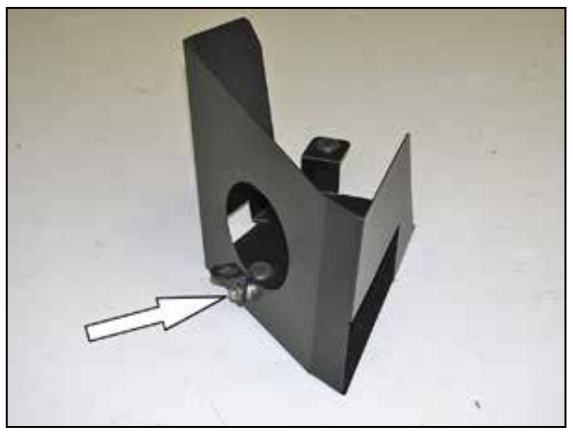

6. Install the provided tube mounting bracket (064314) onto the heat shield as shown.
NOTE: be sure to place the provided spacer between the heat shield and bracket.

trailfortress.com/k-n-performance-air-intake-system-69-9506ttk