TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 69-9510TC Installation Instructions

Metal Intake for VW Golf R & Arteon

Part number: 69-9510TC

trailfortress.com/k-n-performance-air-intake-system-69-9510tc

Scan for fitment, price and install help

INSTALLATION INSTRUCTIONS

Not legal for sale or use in California on any pollution controlled motor vehicle.

69-9510TC
VOLKSWAGEN
2022-25 MK8 GOLF R
2022-24 ARTEON
L4 - 2.0L TURBO

TOOLS NEEDED:

1/4” Ratchet
Extension
7mm Socket
8mm Socket
T25 Torx
Pliers

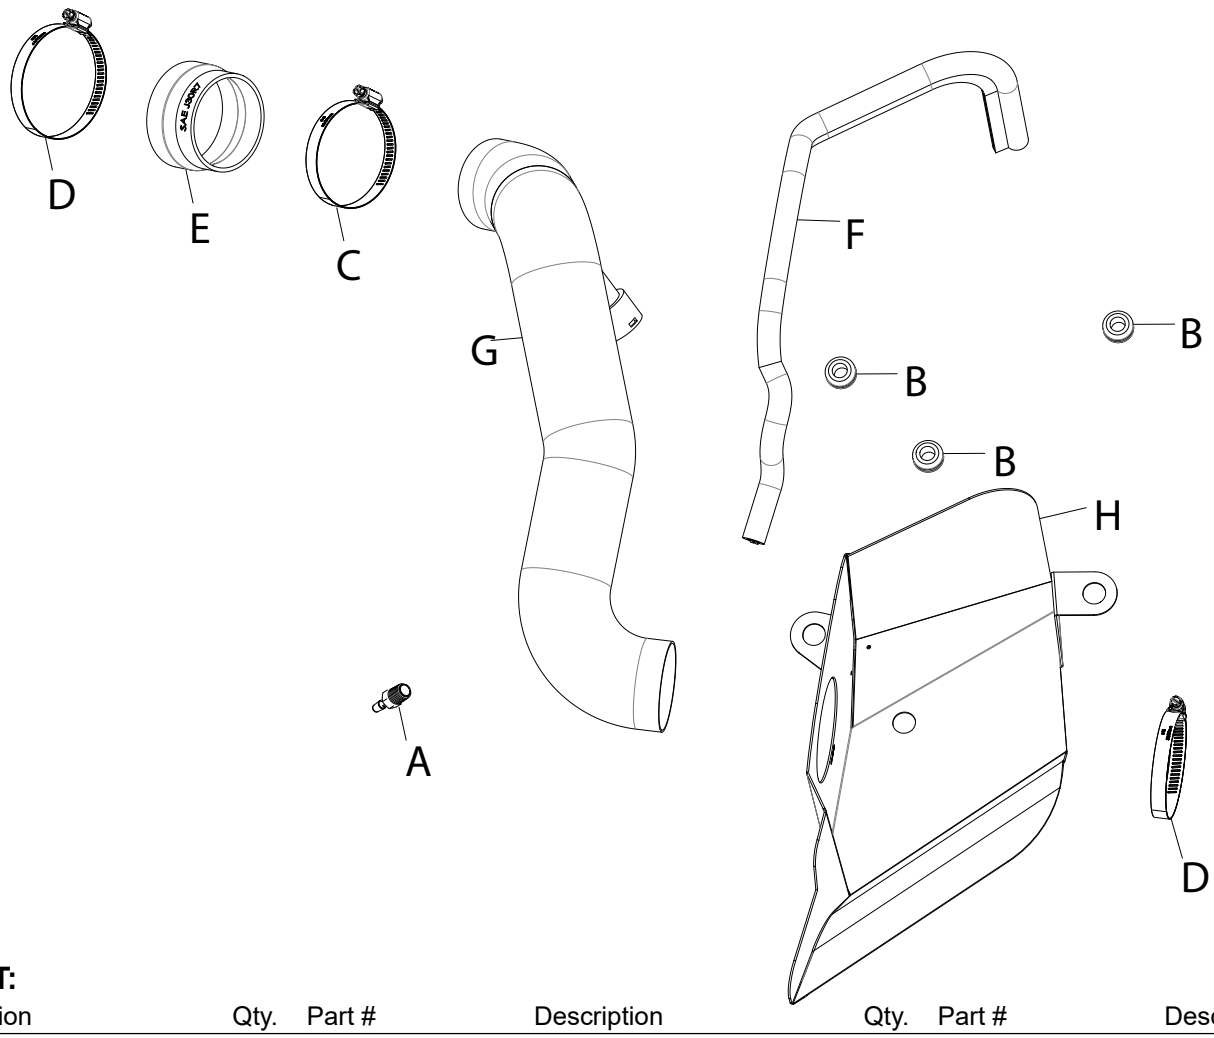

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	VENT; 1/4”HOSE BARB, 1/4”NPT	1	08046	D	HOSE CLAMP; #52	2	08610	G	TUBE; 3.0”OD X 28”L	1	25920C
B	GROMMET; 1”OD, 1/2”ID	3	08064	E	HOSE; 3.25”ID TO 3”ID X 2”L	1	08186	H	HEAT SHIELD	1	20-8649
C	HOSE CLAMP; #48	1	08601	F	EDGE TRIM; (56”L)	1	102490	I	AIR FILTER	1	RU-5176

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Loosen the hose clamp that secures the stock intake tube to the turbo inlet.



3. Release the spring clamp that secures the stock intake tube to the air filter housing and disconnect the tube from the housing.

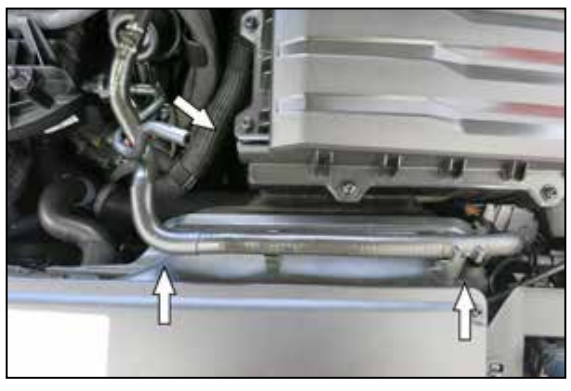

4. Disconnect the vacuum line from the air filter housing. Pull the coolant line away from scoop.



5. Remove the two screws that secure the fresh air inlet and then remove the fresh air inlet from the vehicle.



6. Remove the factory air filter housing from the vehicle.