TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 69-9900TS Installation Instructions

Metal Intake for Alfa Romeo Giulia & Stelvio

Part number: 69-9900TS

trailfortress.com/k-n-performance-air-intake-system-69-9900ts

Scan for fitment, price and install help

TYPHOON INTAKE SYSTEMS

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.
See knfilters.com for CARB status on each part for a specific vehicle

INSTALLATION INSTRUCTIONS

69-9900TS
ALFA ROMEO
2017-2022 GIULIA
2017-2022 STELVIO
L4-2.0L TURBO

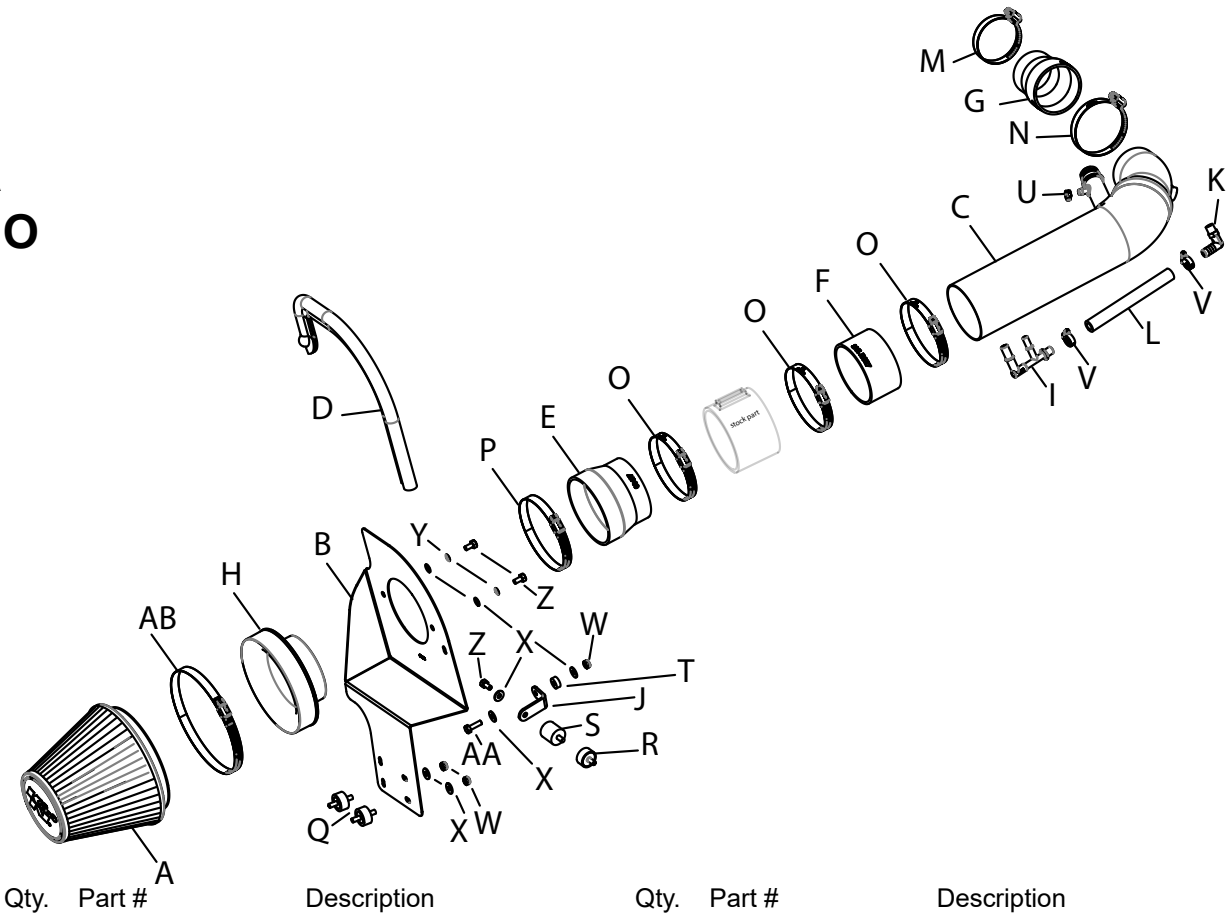

TOOLS NEEDED:

Ratchet
Extension
7mm socket
8mm socket
10mm socket
10mm wrench
Pliers
Flathead screwdriver

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	AIR FILTER	1	RU-1048	K	VENT; 90 DEG, 1/2"HOSE	1	08110FK	U	HOSE CLAMP; #004 MINI	1	21850
B	HEATSHIELD	1	074571	L	HOSE; 1/2"ID X 7"L	1	08159	V	HOSE CLAMP; #006 MINI	2	08407
C	INTAKE TUBE	1	25921S	M	HOSE CLAMP; #36	1	08530	W	NUT; 6MM NYLOCK	3	07512
D	EDGE TRIM; 3/4" BULB, 26"L	1	102488	N	HOSE CLAMP; #44	1	08560	X	WASHER; 6MM FLAT, SS	7	08269
E	HOSE; 4"ID TO 3.5"ID X 3"L	1	08497	O	HOSE CLAMP; #56	3	08620	Y	WASHER; M6, SPLIT LOCK	2	1-3025
F	HOSE; 3.5 X 2" BLACK	1	5-351	P	HOSE CLAMP; #64	1	08645	Z	BOLT; M6 X 1 X 12MM	3	07727
G	HOSE; 2.25"/2.75" X 3" BLK	1	5-227	Q	STUD; M6-1.00 M/M	2	07027	AA	BOLT; M6 X 1 X 20MM HEX	1	07795
H	ADAPTOR; FILTER	1	27300	R	STUD; RUBBER MNT, M/F, 1/2"L	1	070228	AB	HOSE CLAMP; #104	1	08697
I	VENT; EJECTOR "F", CCV	1	08528	S	STUD; RUBBER MNT, M6 X 1"	1	02033				
J	BRACKET; "L"	1	08025A	T	SPACER; .625" OD	1	06555				

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Disconnect Mass air sensor electrical connection.



3. Remove the two bolts that secure the engine cover and then remove the engine cover from the vehicle.



4. Release the CCV tube quick connect fitting and disconnect the CCV tube. Release the pinch clamp that secures the vacuum line and disconnect the vacuum line from the intake tube.



5. Release the locking tabs that secure the vent lines to the ejector fittings on the bottom of the intake tube, then disconnect the vent lines.



6. Release the pinch clamp that secures the intake tube to the turbo inlet and then disconnect the intake tube from the turbo.