TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

# K&N 71-9042 Installation Instructions

Dryflow Intake for Toyota Tundra & Sequoia

Part number: 71-9042

trailfortress.com/k-n-performance-air-intake-system-71-9042

Scan for fitment, price and install help

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.


See knfilters.com for CARB status on each part for a specific vehicle

# INSTALLATION INSTRUCTIONS

# 71-9042
# TOYOTA
## 2022-24 Tundra
## 2023-24 Sequoia
## V6-3.5L Twin Turbo

**TOOLS NEEDED:**

Flat Blade Screw Driver
Phillips Screw Driver
Ratchet
Extension
8mm Socket
10mm Socket
3mm Allen Key
4mm Allen Key
Side Cutters
Adjustable Wrench

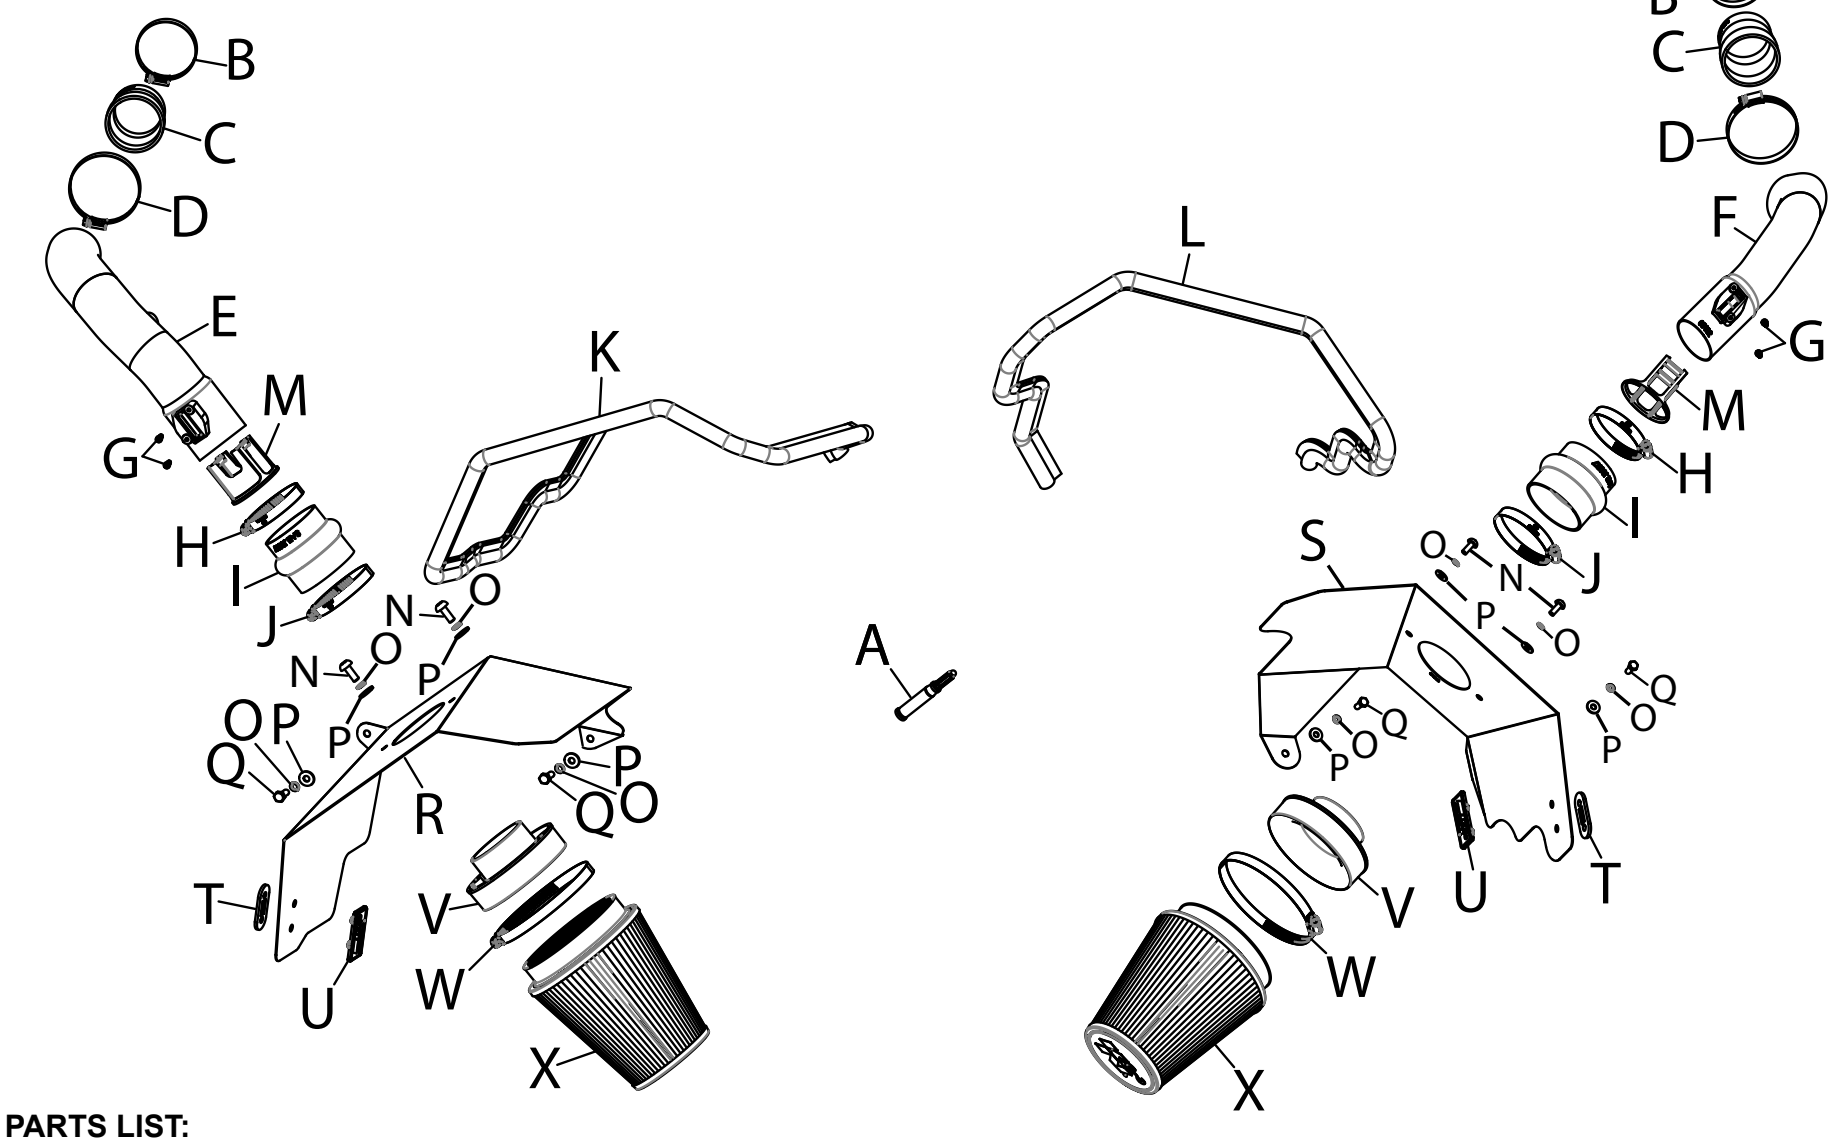


**PARTS LIST:**

| | Description | Qty. | Part # | | Description | Qty. | Part # | | Description | Qty. | Part # |
|---|---|---|---|---|---|---|---|---|---|---|---|
| A | SUPER GLUE | 1 | 409 | I | HOSE; HUMP 3” TO 2.75” X 3”L | 2 | 08421 | Q | BOLT; M6-1 X 16MM, HEX | 4 | 07812 |
| B | HOSE CLAMP; #36 BLK ZINC | 2 | 08530KA | J | HOSE CLAMP; #48 BLK ZINC | 2 | 08601KA | R | HEAT SHIELD; PASSENGER | 1 | 074563 |
| C | HOSE; 2.25”ID TO 2.5”ID X 2.5”L | 2 | 08638 | K | EDGE TRIM; (66”L) | 1 | 102472 | S | HEAT SHIELD; DRIVER | 1 | 074562 |
| D | HOSE CLAMP; #40 BLK ZINC | 2 | 08554KA | L | EDGE TRIM; (61”L) | 1 | 102492 | T | PLATE; LOCKING | 2 | 010151 |
| E | TUBE; 2.5”OD TO 2.75”OD X 15”L | 1 | 25900TK | M | MAF INSERT; 2.59”OD | 2 | 9-21070 | U | BADGE; PLASTIC SNAP-IN | 2 | 088096 |
| F | TUBE; 2.5”OD TO 2.75”OD X 15”L | 1 | 25901TK | N | BOLT; M6 X 1 X 16MM, BTNHD | 4 | 07730 | V | ADAPTER; 3”OD HOSE TO 5”OD | 2 | 21569 |
| G | BOLT; M4-.7 X 8MM ALNHD | 4 | 07733 | O | WASHER; M6, SPLIT LOCK | 8 | 1-3025 | W | HOSE CLAMP; #80 BLK ZINC | 2 | 08694KA |
| H | HOSE CLAMP; #44 BLK ZINC | 2 | 08577KA | P | WASHER; 6MM FLAT | 8 | 08269 | X | AIR FILTER | 2 | RU-3135HBK |

**If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.**

**NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.**

### TO START:

1. Turn off the ignition and disconnect the negative battery cable.
**NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.**



2. Disconnect the passenger and driver side mass air sensor electrical connection and unhook the harness’s mounting clips.

