K&N 77-1017KC Installation Instructions

Charge Pipe Kit for Subaru WRX (2022-2025)

Part number: 77-1017KC

trailfortress.com/k-n-charge-pipe-kit-77-1017kc

Scan for fitment, price and install help

INSTALLATION INSTRUCTIONS

77 Series METAL INTAKE SYSTEMS FOR TRUCKS & SUVs

Not legal for sale or use in California on any pollution controlled motor vehicle.

77-1017KC
SUBARU
2022-25 WRX
H4-2.4L

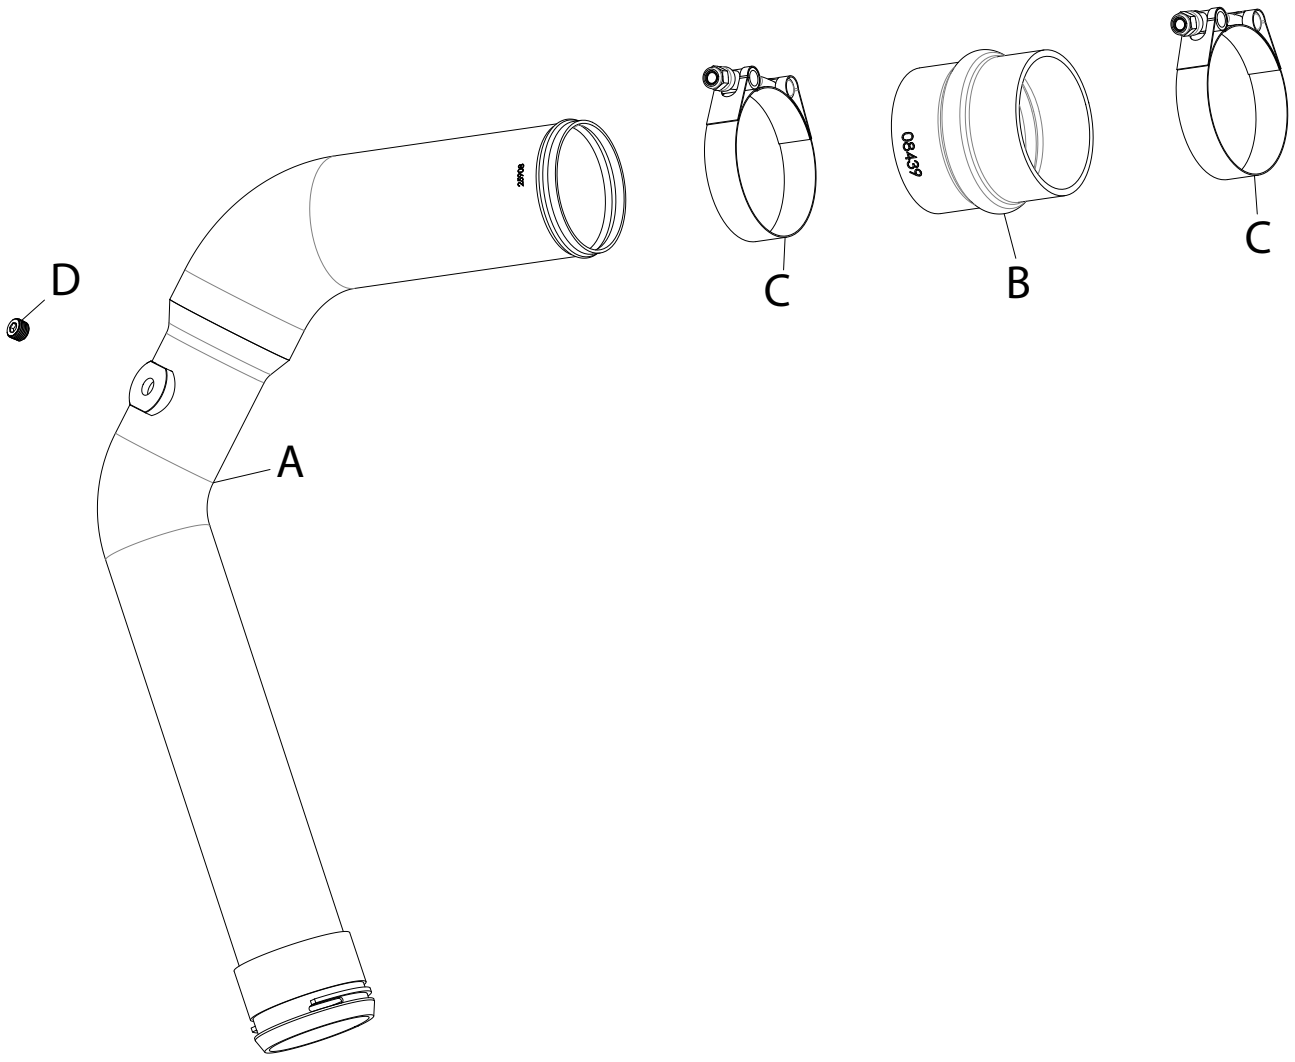

TOOLS NEEDED:

Long flat blade screwdriver
Standard flat blade screwdriver
12mm socket
12mm wrench
Ratchet
11mm socket
3/16” allen key

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	CHARGE TUBE	1	25908C	C	HOSE CLAMP; T-BOLT	2	21852	D	PLUG; STAINLESS 1/8” NPT	1	1-1014
B	HOSE; HUMP 2.75” x 3”L	1	08439								

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Remove the two plastic pins that secure the fresh air duct and then remove the duct from the vehicle.



3. Remove the bolt that secures the charge tube to the engine.



4. Loosen the hose clamp that secures the charge tube to the intercooler.





5. Release the spring clip the secures the charge tube to the turbo charger inlet by pulling it back until it sets into the unlocked position. Top photo shows the clip in the unlocked position.