TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 77-1019KC Installation Instructions

Charge Pipe Kit for Hyundai Veloster N (2020-2022)

Part number: 77-1019KC

trailfortress.com/k-n-charge-pipe-kit-77-1019kc

Scan for fitment, price and install help

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See knfilters.com for CARB status on each part for a specific vehicle

INSTALLATION INSTRUCTIONS

77-1019KC
HYUNDAI
2020-22 VELOSTER N
6SPD MANUAL TRANS ONLY
L4-2.0L TURBO

TOOLS NEEDED:

1/4” Ratchet
Extension
10mm socket
11mm socket
Pliers
3/16” wrench

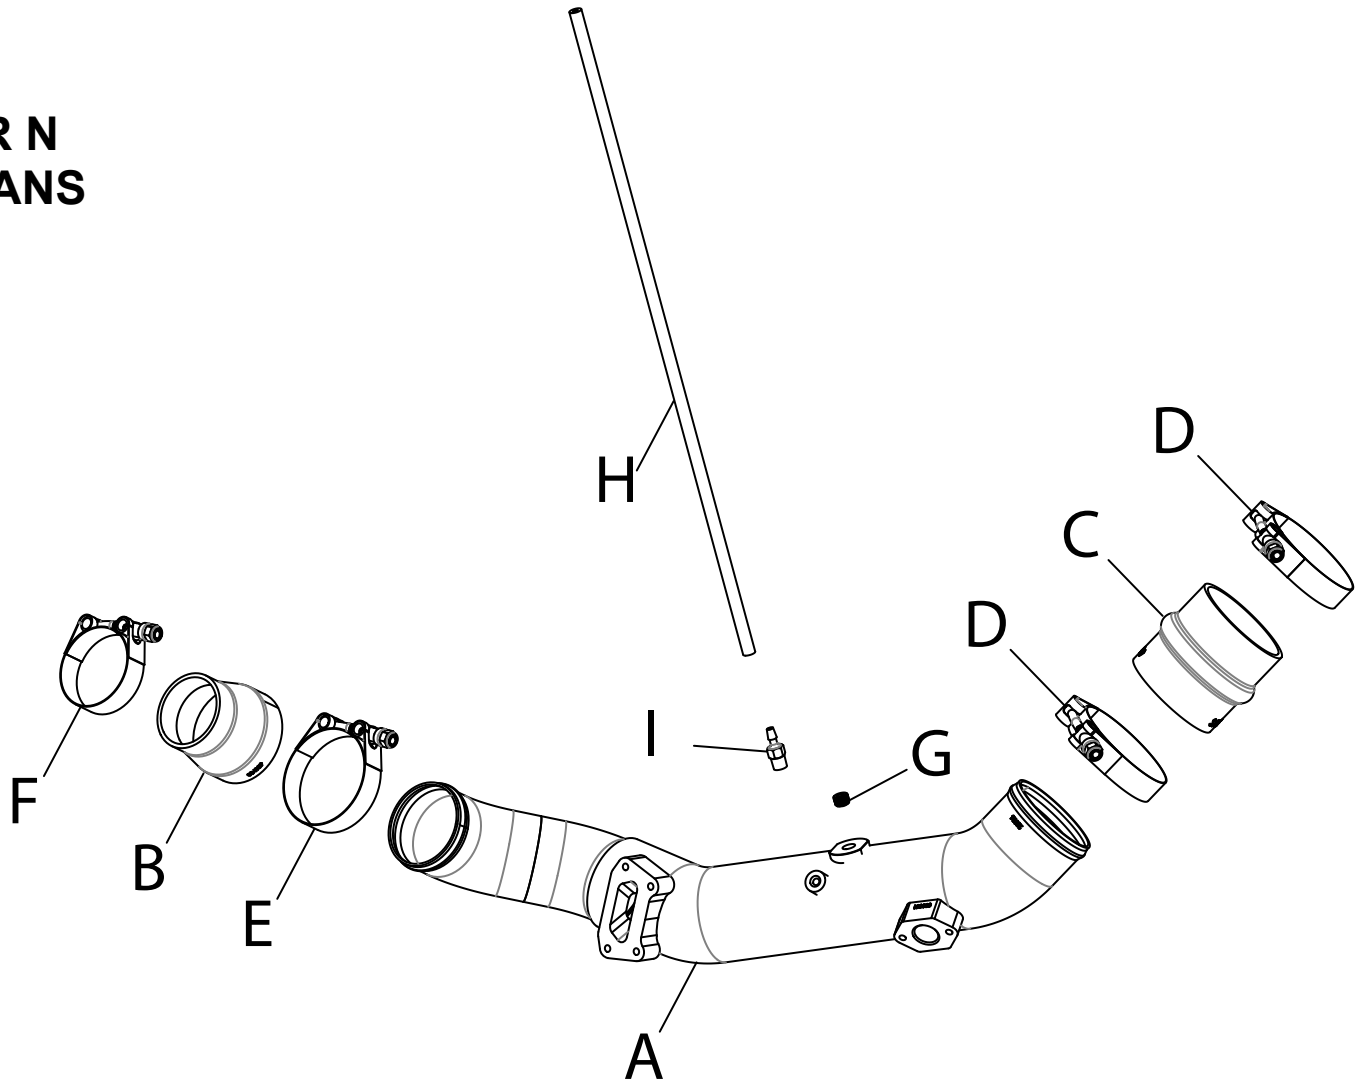

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	CHARGE TUBE	1	25926C	D	HOSE CLAMP; T BOLT	2	21852	G	PLUG; STAINLESS 1/8” NPT	1	1-1014
B	HOSE; STEP 2” X 2.5” X 2-5/8”L	1	084139	E	HOSE CLAMP; T BOLT	1	21851	H	HOSE; 5/32” X 20”L	1	5-3020
C	HOSE; HUMP 2.75” X 3”L	1	08439	F	HOSE CLAMP; T BOLT	1	9437	I	FITTING; BARBED 3/16”	1	KITFITTING14

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Release the spring clamps that secure the BOV and CCV hoses and then disconnect the hoses from the factory intake tube.



3. Loosen the hose clamps that secure the factory intake tube and then remove the intake tube from the vehicle.

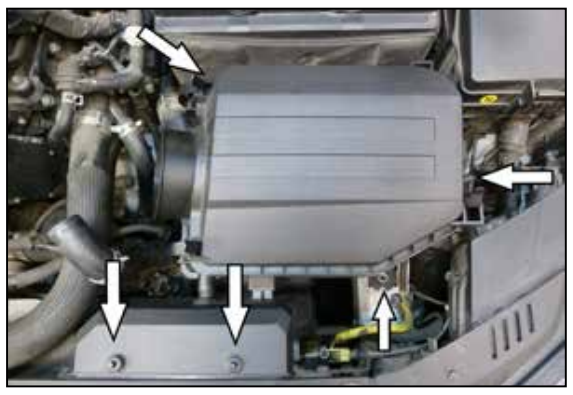

4. Remove the two plastic retainers securing the fresh air duct and then remove the three bolts that secure the factory air filter housing. Remove the factory air filter housing assembly from the vehicle.



5. Disconnect the pressure sensor and vacuum switch electrical connection. Disconnect the vacuum line attached to the vacuum switch.