TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 77-1020KC Installation Instructions

Charge Pipe Kit for Ford Bronco & Ranger

Part number: 77-1020KC

trailfortress.com/k-n-charge-pipe-kit-77-1020kc

Scan for fitment, price and install help

77 Series
METAL INTAKE SYSTEMS
FOR TRUCKS & SUVs

INSTALLATION INSTRUCTIONS

Not legal for sale or use in California on any pollution controlled motor vehicle.

77-1020KC
FORD
2023-25 BRONCO RAPTOR
2024-25 RANGER RAPTOR
V6-3.0L TURBO

NOTE: This kit was not designed to fit vehicles with a body lift.

TOOLS NEEDED:

Ratchet
Extension
7mm Socket
8mm Socket
10mm Socket
11mm Socket
3mm Allen Key
Adjustable Wrench
Pick

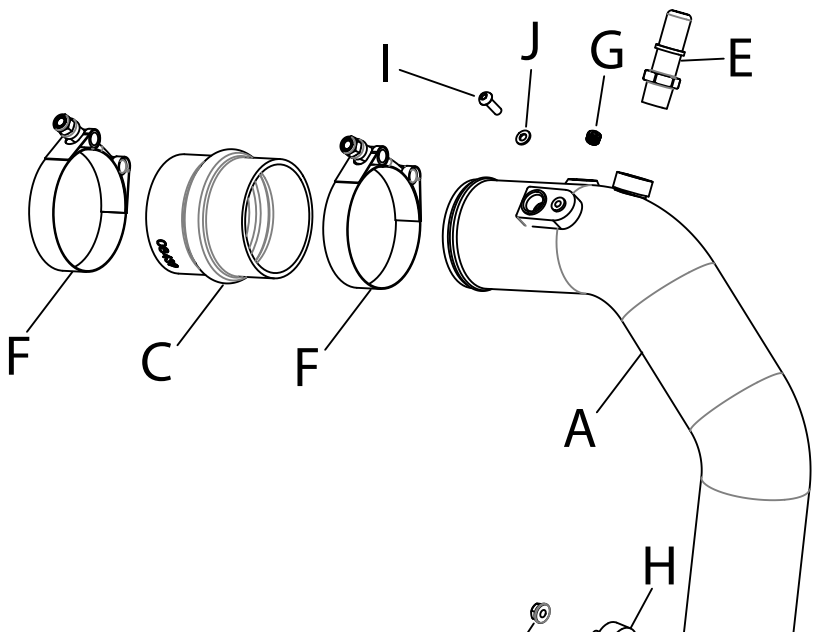

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	UPPER CHARGEPIPE	1	25927C	E	FITTING; QUICK CONNECT	1	82637-1	H	STUD; M6-1.00 M/M RUBBER	1	07027
B	LOWER CHARGEPIPE	1	25928C	F	HOSE CLAMP; T-BOLT, #312	4	21852	I	BOLT; M5 X .8 X 20MM	1	22208
C	HOSE; HUMP 2.75”ID X 3”L	2	08439	G	PLUG; 1/8” NPT	1	1-1014	J	WASHER; 5MM FLAT	1	08212
D	NUT; M6, HEX, SERRATED	2	444.460.04								

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.