TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

# K&N 77-1572KS Installation Instructions

Silver Metal Intake for Durango & Grand Cherokee

Part number: 77-1572KS

trailfortress.com/k-n-performance-air-intake-system-77-1572ks

Scan for fitment, price and install help

77 Series
METAL INTAKE SYSTEMS
FOR TRUCKS & SUVs


# INSTALLATION INSTRUCTIONS

Not legal for sale or use in California on any pollution controlled motor vehicle.
NOTE: Some specific models and years may be legal in CA. Check the CARB status on your parts at knfilters.com.

# 77-1572KS
# JEEP / DODGE
## 2016-21 Grand Cherokee
## 2016-25 Durango
## V6-3.6L

**TOOLS NEEDED:**

Ratchet
Extension
10mm Socket
4mm Allen
3/4” Wrench
Flat Blade Screw Driver

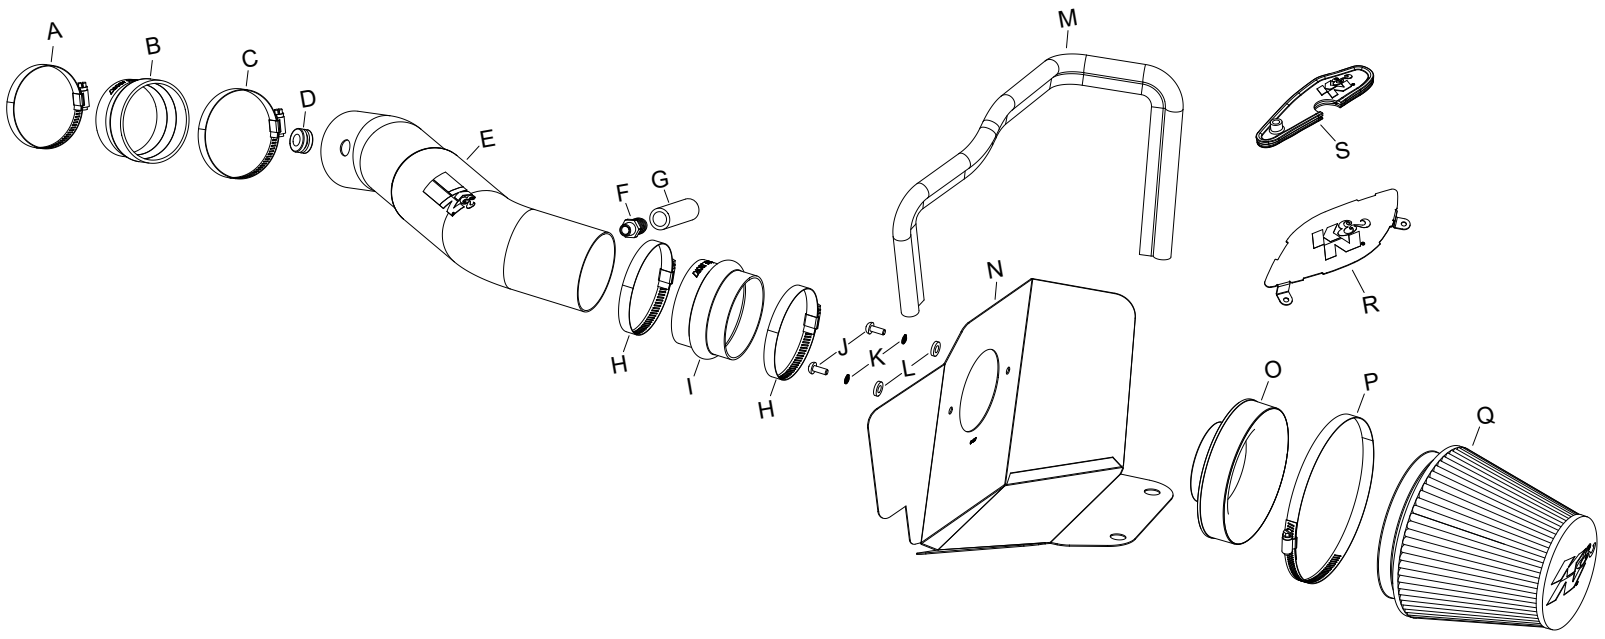


**PARTS LIST:**

| | Description | Qty. | Part # | | Description | Qty. | Part # | | Description | Qty. | Part # |
|---|---|---|---|---|---|---|---|---|---|---|---|
| A | HOSE CLAMP; #48 | 1 | 08601 | G | HOSE; 5/8" ID X 3" L | 1 | 08464 | M | EDGE TRIM; (55”L) | 1 | 102480 |
| B | HOSE; 3.25" TO 3" ID X 2" L | 1 | 08186 | H | HOSE CLAMP; #56 | 2 | 08620 | N | HEAT SHIELD | 1 | 074087 |
| C | HOSE CLAMP; #52 | 1 | 08610 | I | HOSE; HUMP 3.5" ID X 2.5" L | 1 | 08699 | O | ADAPTER; UNIVERSAL, 6" | 1 | 21512-1 |
| D | GROMMET; 1"OD, 1/2”ID, 1/2” | 1 | 08064 | J | BOLT; M6 X 1 X 16MM, BTNHD | 2 | 07730 | P | HOSE CLAMP # 104 | 1 | 08697 |
| E | TUBE; 3.25”OD TO 3.5”OD X 2”L | 1 | 27669S | K | WASHER, M6 SPLIT LOCK ZINC | 2 | 1-3025 | Q | AIR FILTER | 1 | RU-1042 |
| F | VENT; 1/4”NPT, 5/8”BARB, STRT | 1 | 82638 | L | WASHER; 1/4"ID X 5/8"OD | 2 | 08275 | R | BLOCK OFF | 1 | 073262 |
| | | | | | | | | S | BLOCK OFF; HOOD VENT | 1 | 21597 |

**If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.**

**NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.**

### TO START:

1. Turn off the ignition and disconnect the negative battery cable.
**NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.**



2. Lift up the inspection cover and remove the bolt that secures the decorative engine cover. Then remove the decorative engine cover from the vehicle.
**NOTE: The cover is also secured by four mounting studs and grommets**



3. Disconnect the inlet air temperature sensor electrical connection.



4. Loosen the hose clamps securing the intake tube to the throttle body and air filter housing and then remove the intake tube assembly from the vehicle.
**NOTE: The intake tube assembly is also held on two mounting studs and grommets.**



5. Disconnect the crank case vent tube from the elbow attached to the factory air filter housing as shown.



6. Unhook the hood seal mounting pin from the fresh air intake scoop.