TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 77-3090KTK Installation Instructions

Metal Intake for Silverado & Sierra HD (2016-2019)

Part number: 77-3090KTK

trailfortress.com/k-n-performance-air-intake-system-77-3090ktk


Scan for fitment, price and install help

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA.

INSTALLATION INSTRUCTIONS

77-3090KTK
CHEVROLET / GMC
2016-19 Silverado 2500HD / 3500HD
2016-19 Sierra 2500HD / 3500HD
V8-6.0L

NOTE: This kit was not designed to fit vehicles with a body lift.

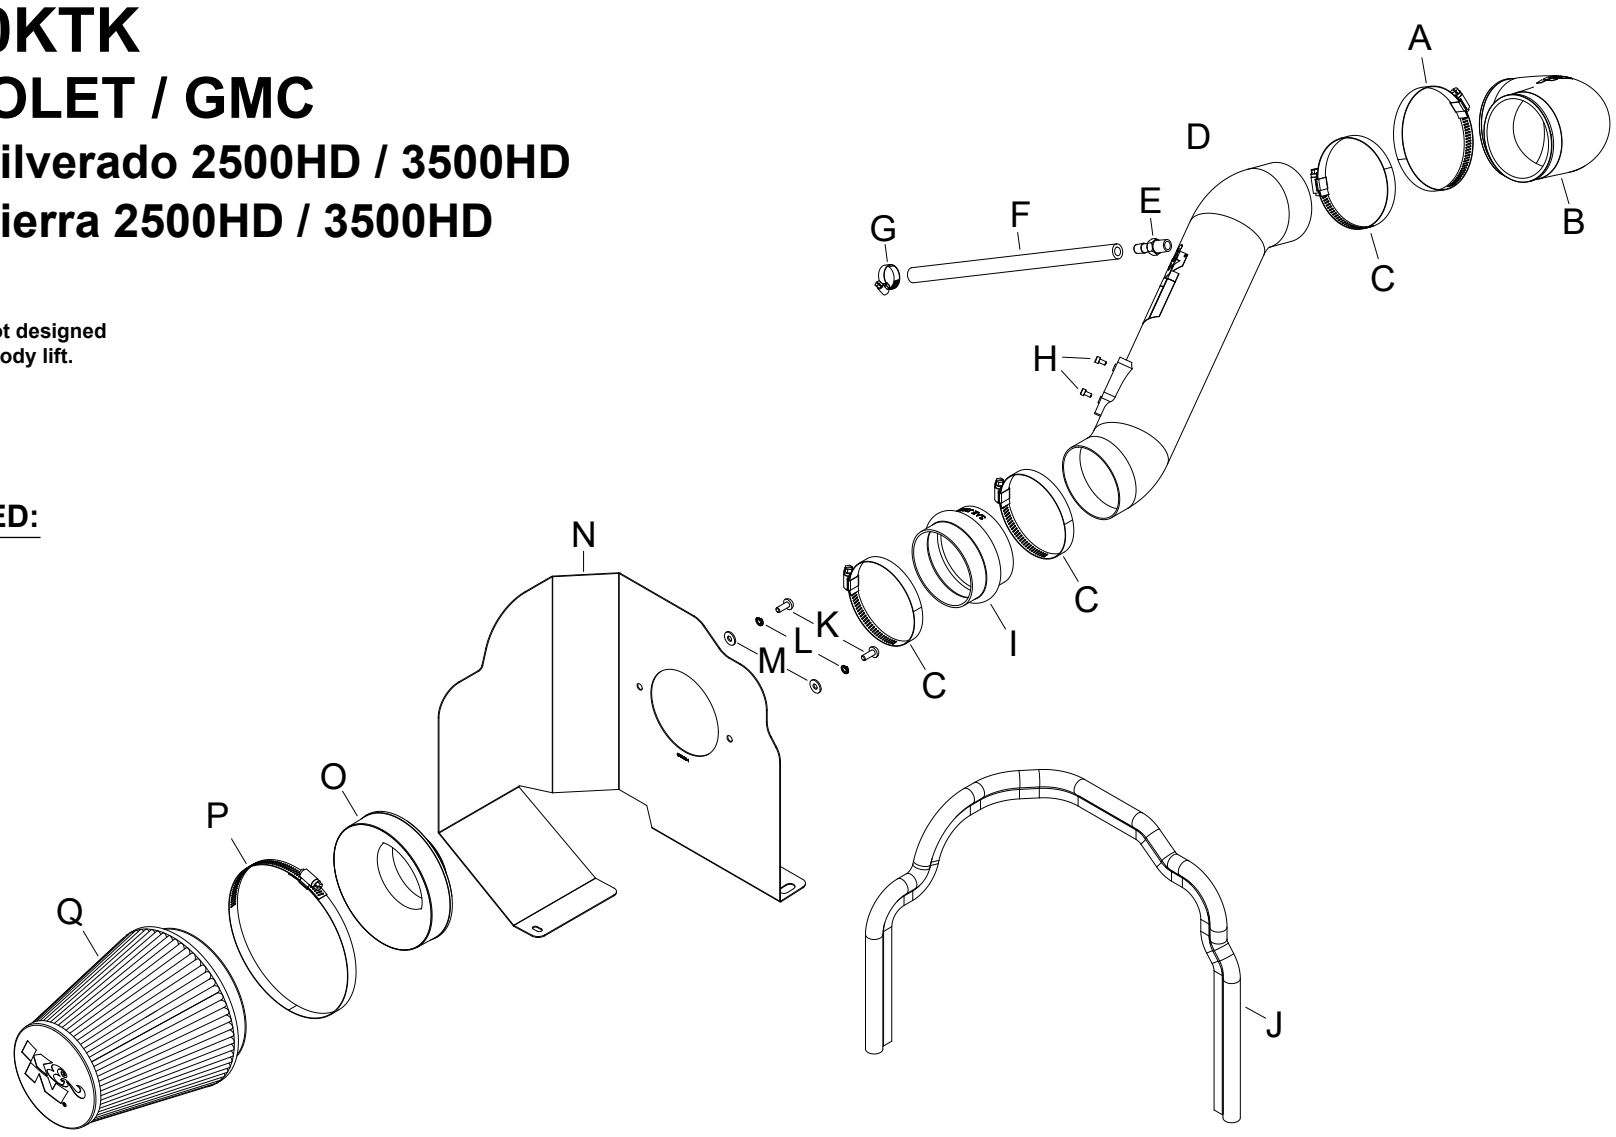

TOOLS NEEDED:

ratchet
extension
10mm socket
flat blade screw driver
phillips screw driver
t15 torx
3mm allen key
4mm allen key

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	HOSE CLAMP #64 STAINLESS	1	08645	G	HOSE CLAMP #004	1	21850	M	WASHER; 6MM FLAT	2	08269
B	HOSE; 4" TO 3.5" ID 90DEG	1	084086-1	H	BOLT; M4-.7 X 8MM	2	07733	N	HEAT SHIELD	1	073155-1A
C	HOSE CLAMP #56	3	08620	I	HOSE; HUMP 3.5”ID X 2.5”L	1	08699	O	ADAPTER; UNIVERSAL, 6"	1	21512-1
D	INTAKE TUBE; AL	1	27671TK	J	EDGE TRIM; 44”L	1	102486A	P	HOSE CLAMP #104	1	08697
E	VENT; STRT, 3/8"HOSE, 1/4"	1	08047	K	BOLT; M6 X 1 X 16MM	2	07730	Q	FILTER CHARGER	1	RU-1041
F	HOSE; 3/8" ID X 12" L	1	08412	L	WASHER, M6 SPLIT LOCK ZINC	2	1-3025				

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Lift up and remove the engine cover from the engine.



3. Disconnect the mass air sensor and humidity sensor electrical connections.



4. Disconnect he crank case vent hose from the intake tube plenum.





5. Loosen the hose clamps that secure the intake tube to the throttle body and air filter housing. Unhook the radiator hose clip from the intake tube and then remove the intake tube from the vehicle.

trailfortress.com/k-n-performance-air-intake-system-77-3090ktk