TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 77-3103KC Installation Instructions

Metal Intake for Silverado & Sierra HD (2020-2026)

Part number: 77-3103KC

trailfortress.com/k-n-performance-air-intake-system-77-3103kc

Scan for fitment, price and install help

77 Series
METAL INTAKE SYSTEMS
FOR TRUCKS & SUVs

INSTALLATION INSTRUCTIONS

Not legal for sale or use in California on any pollution controlled motor vehicle.

77-3103KC
CHEVROLET / GMC
2020-26 Silverado 2500-3500HD
2020-26 Sierra 2500-3500HD
V8-6.6L

NOTE: This kit was not designed to fit vehicles with a body lift.

TOOLS NEEDED:

Phillips Screw Driver
Flat Blade Screw Driver
T20 Torx
3mm Allen
4mm Allen
10mm Wrench

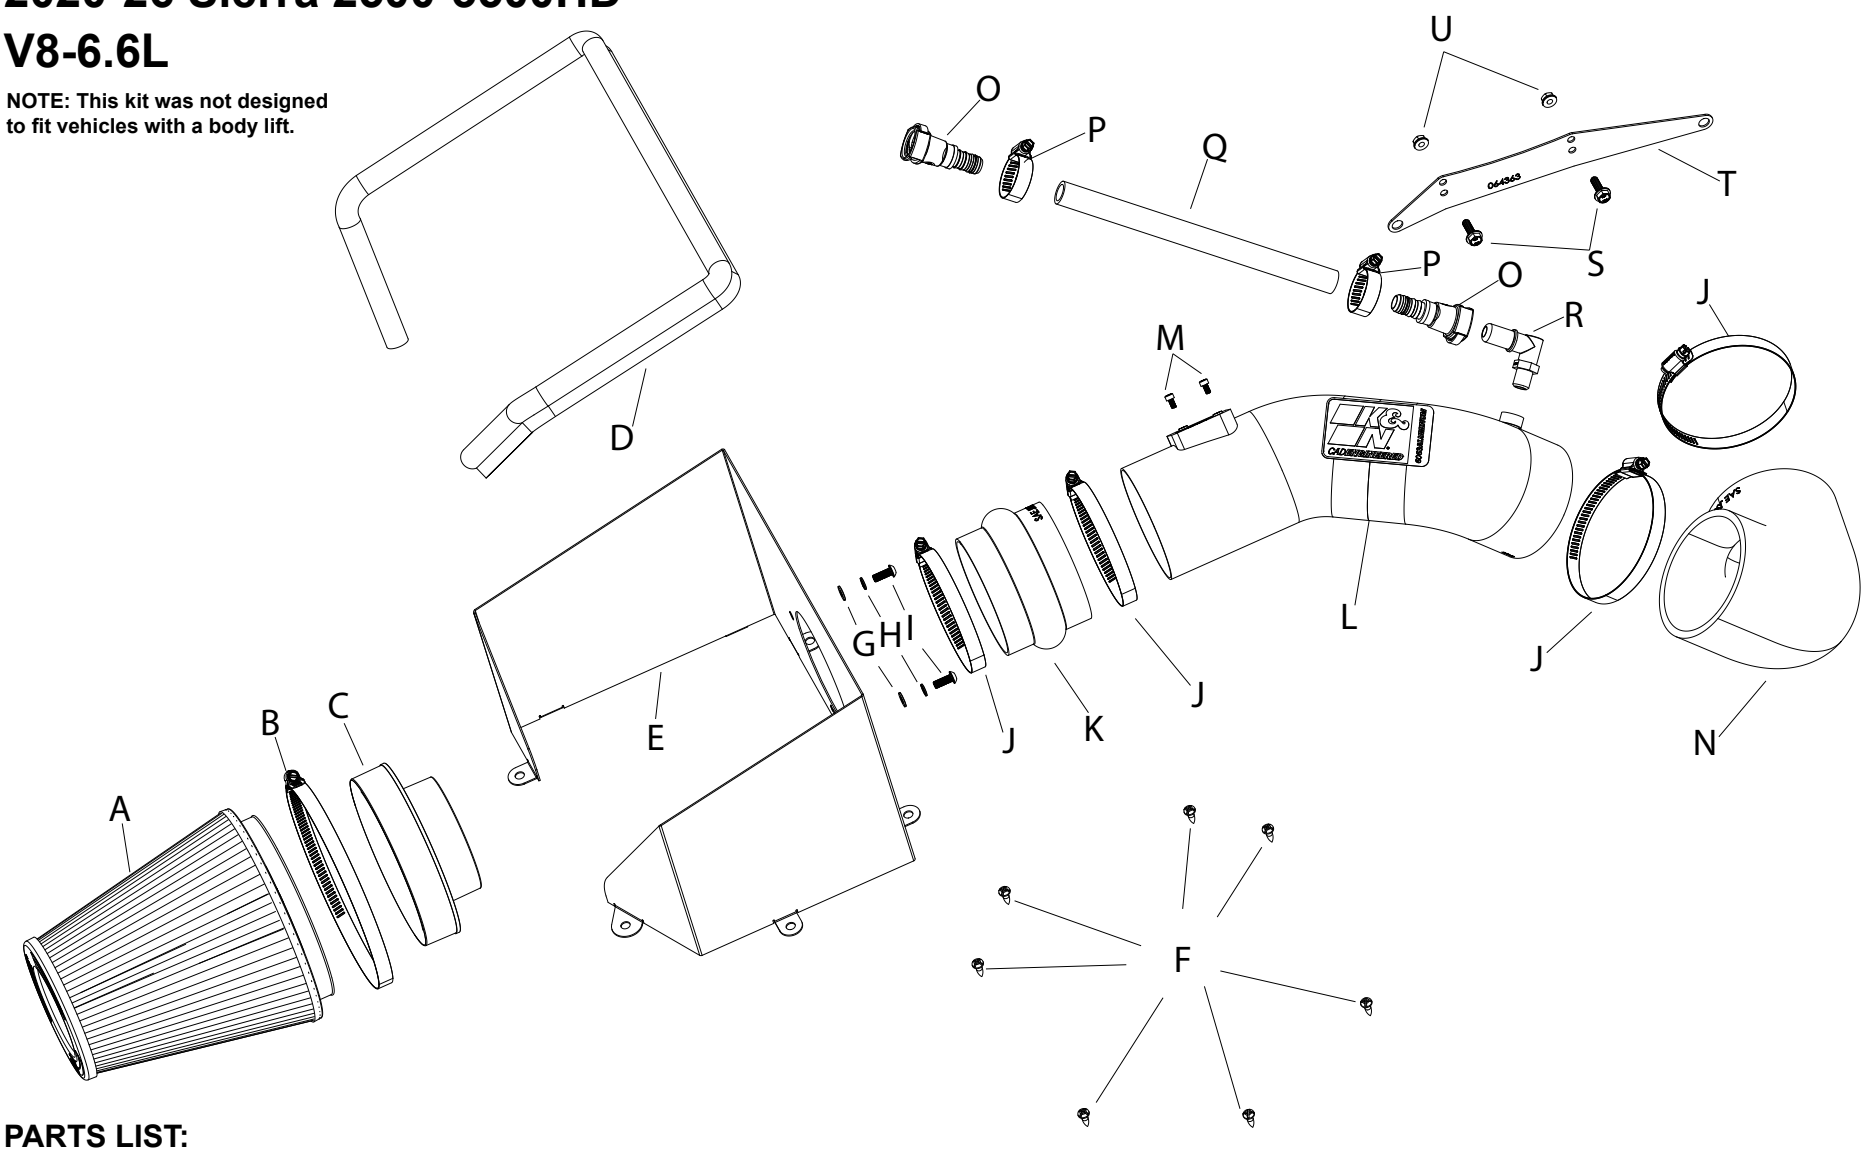

PARTS LIST:

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
A	AIR FILTER	1	RU-1044	H	WASHER; M6 SPLIT LOCK ZINC	2	1-3025	O	FITTING; 16-14MM PCV	2	08526
B	HOSE CLAMP #104	1	08697	I	BOLT; M6 X 1 X 16MM BTNHD	2	07730	P	HOSE CLAMP; #10 MINI	2	08411
C	ADAPTER; #454	1	27300	J	HOSE CLAMP; #64 STAINLESS	4	08645	Q	HOSE; 3/4"ID X 10"L	1	5-4010
D	EDGE TRIM; (42"L)	1	102499	K	HOSE; HUMP 4"ID X 3"L	1	08418	R	VENT; 90"D, 1/4"NPT, TO .600"	1	82633
E	HEAT SHIELD	1	073307	L	TUBE; 4"OD X 14"L	1	25840C	S	BOLT; M6-1 X 30, HEX/FLANGE	2	1-1016
F	SCREW; #12 X 5/8"L	7	07788	M	BOLT; M4-.7 X 8MM, ALNHD	2	07733	T	BRACKET; HEATER HOSE MNT	1	064363
G	WASHER; 6MM FLAT	2	08269	N	HOSE; 4"ID, 90 DEG. WRAP	1	08503	U	NUT; M6 HEX, SERRATED	2	444.460.04

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Separate the coolant pipe from the rear of the intake plenum by disconnecting the retaining clips from the plenum.



3. Push in the locking tabs on the CCV quick connect fittings and then remove the CCV hose assembly from the vehicle.