TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

# K&N 77-9043KP Installation Instructions

Metal Intake for Tacoma, 4Runner & Land Cruiser

Part number: 77-9043KP

trailfortress.com/k-n-performance-air-intake-system-77-9043kp

Scan for fitment, price and install help

# INSTALLATION INSTRUCTIONS


77 Series METAL INTAKE SYSTEMS FOR TRUCKS & SUVs

Not legal for sale or use in California on any pollution controlled motor vehicle.

# 77-9043KP
# TOYOTA
## 2024-26 TACOMA
## 2024-26 LAND CRUISER
## 2026 4RUNNER
## L4-2.4L TURBO

**TOOLS NEEDED:**

Flat Blade Screwdriver
Phillips Screwdriver
Ratchet
Extension
10mm socket
Side cutters
3mm allen key

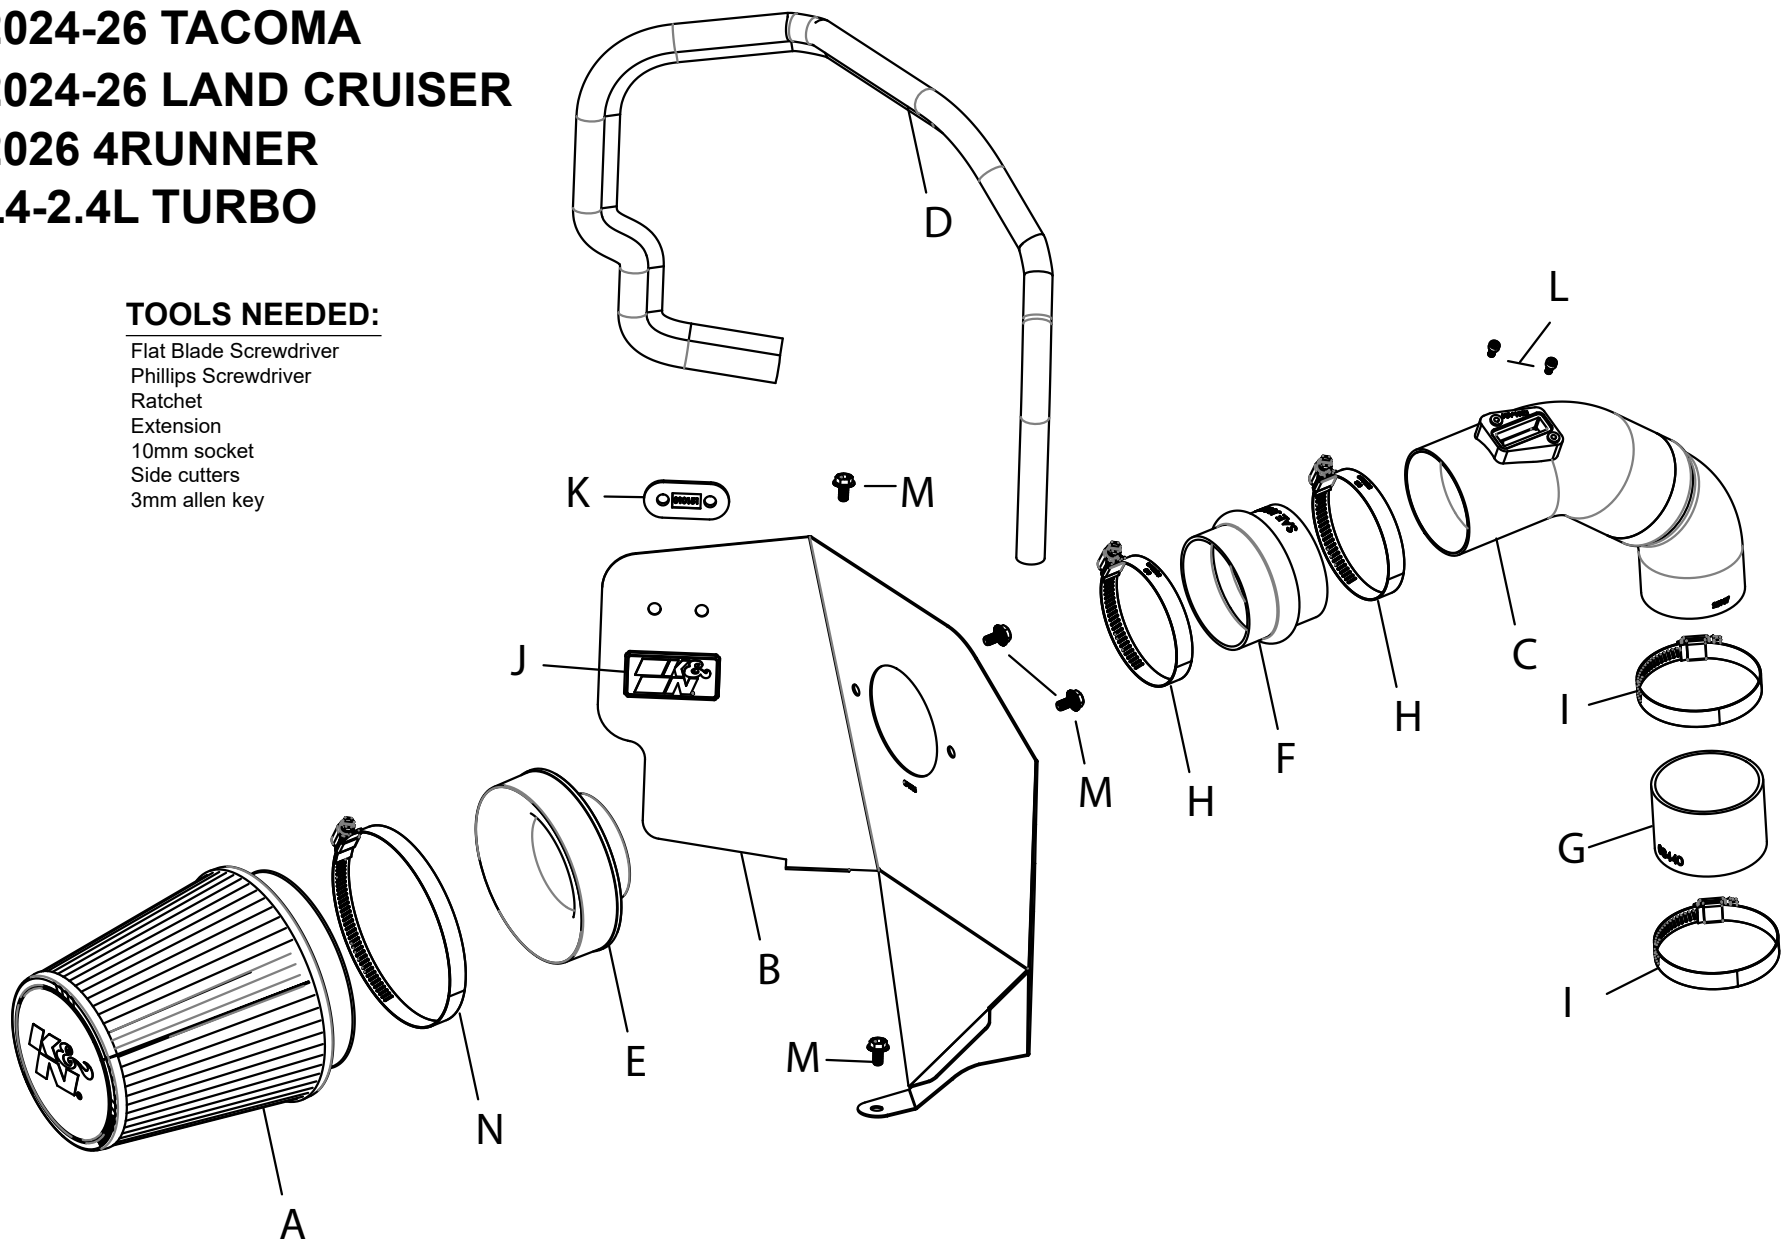


**PARTS LIST:**

| | Description | Qty. | Part # | | Description | Qty. | Part # | | Description | Qty. | Part # |
|---|---|---|---|---|---|---|---|---|---|---|---|
| A | AIR FILTER | 1 | RU-1037 | F | HOSE; HUMP 3”ID X 2.5”L | 1 | 087121 | K | PLATE; LOCKING | 1 | 010151 |
| B | HEAT SHEILD | 1 | 074586 | G | HOSE; 2.75”ID X 2”L | 1 | 08440 | L | BOLT; M4-.7 X 8MM | 2 | 07733 |
| C | INTAKE TUBE | 1 | 25937P | H | HOSE CLAMP; #48 | 2 | 08601 | M | BOLT; M6-1 X 12, HEX | 4 | 1-2110 |
| D | EDGE TRIM; 3/4” @ 48”L | 1 | 102485 | I | HOSE CLAMP; #44 | 2 | 08577 | N | HOSE CLAMP; #88 | 1 | KITHS88 |
| E | ADAPTER; FILTER | 1 | 21569 | J | BADGE; PLASTIC, SNAP-IN | 1 | 088096 | | | | |

**If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.**

**NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.**

**TO START:**

1. Turn off the ignition and disconnect the negative battery cable.
**NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner’s manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.**



2. Push down the centers of the four plastic retaining clips that secure the fresh air duct. Then remove the fresh air duct from the vehicle. ***NOTE: Land Cruiser models do not use the under hood fresh air duct, skip to the next step. NOTE: Due to manufacturing changes, some models may have 5 of the retaining pins to be removed.***



3. Disconnect the mass air sensor electrical connection and then unhook the wiring harness from the air filter housing.