TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 81-0805 Installation Instructions

Oil Catch Can for Silverado 1500, Tahoe & Yukon


Part number: 81-0805

trailfortress.com/k-n-oil-catch-can-81-0805

Scan for fitment, price and install help

Oil Separator
INSTALLATION INSTRUCTIONS

81-0805
CADILLAC / CHEVROLET / GMC
2015-19 Escalade 6.2L
2014-18Silverado 5.3L / 6.2L
2015-20 Tahoe 5.3L / 6.2L
2015-20 Surburban 5.3L / 6.2L
2014-18 Sierra 5.3L / 6.2L
2015-20 Yukon / Yukon XL 5.3L / 6.2L

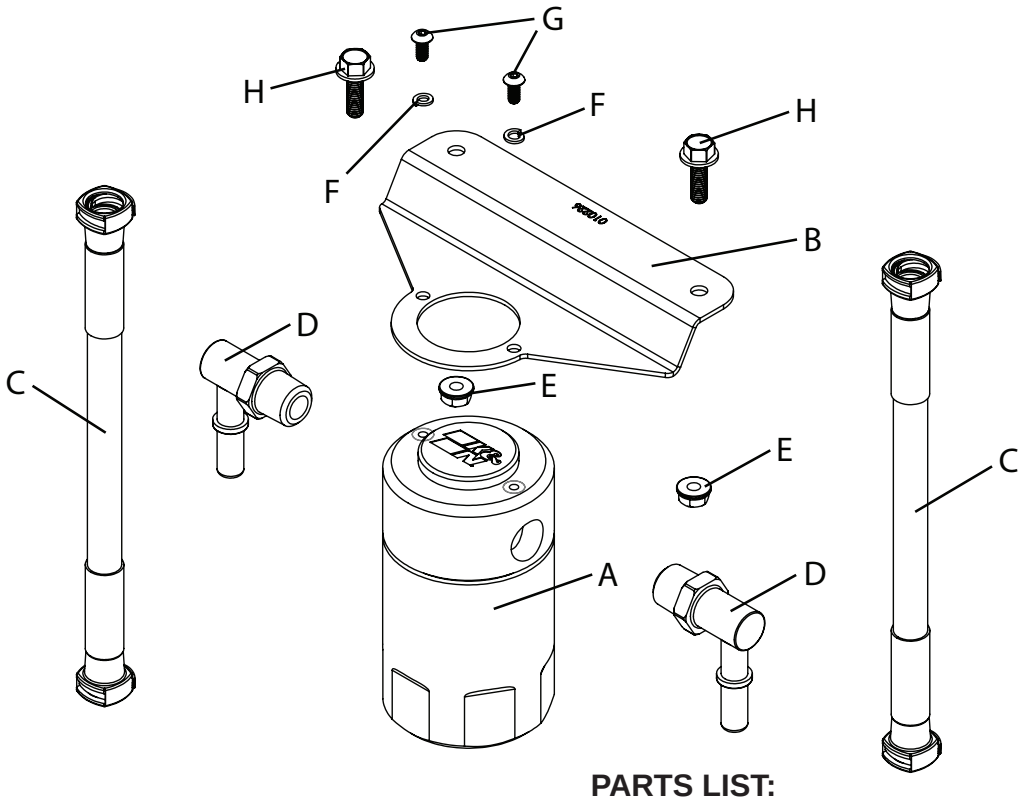

PARTS LIST:

	Description	Qty.	Part #
A	CATCH CAN; 2.5”OD X 4.5”H	1	85-6860
B	BRACKET	1	010226
C	HOSE; 3/8”ID X 16”L	2	084152
D	QUICK RELEASE; 3/8” NPT	2	082339
E	NUT; M6 HEX SERRATED	2	AEM-444.460.04
F	18-8 SPLIT LOCK WASHER	2	92146A618
G	8-32 X 3/8; BTNHD HEX	2	91255A192
H	BOLT; HEX/FLANGE M6-1 X 20	2	98093A440

TOOLS NEEDED:

2.5mm Allen key
10mm Socket
Ratchet
10mm Wrench
13/16” Wrench