TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N 81-0806 Installation Instructions

Oil Catch Can for Charger, Challenger & 300


Part number: 81-0806

trailfortress.com/k-n-oil-catch-can-81-0806

Scan for fitment, price and install help

Oil Separator
INSTALLATION INSTRUCTIONS

81-0806
CHRYSLER / DODGE
2005-23 300C 5.7L
2005-23 Charger 5.7L
2005-23 Challenger 5.7L
2005-10 Magnum 5.7L

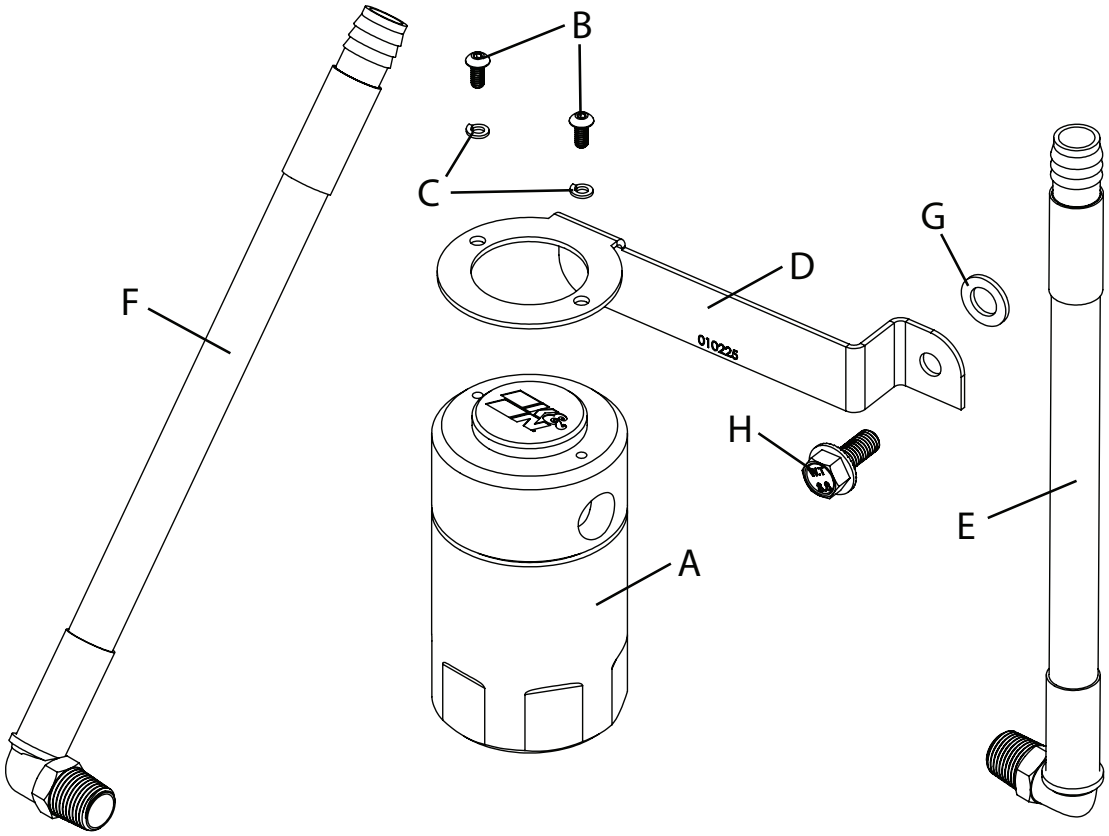

PARTS LIST:

	Description	Qty.	Part #
A	CATCH CAN; 2.5”OD X 4.5”H	1	85-6860
B	8-32 X 3/8; BTNHD HEX	2	91255A192
C	18-8 SPLIT LOCK WASHER	2	92146A618
D	BRACKET	1	010225
E	HOSE; 1/2”ID X 9”L	1	084151
F	HOSE; 1/2”ID X 15”L	1	084150
G	WASHER; 15/16” OD X 3/16”ID	1	345044
H	BOLT; HEX/FLANGE M8-1.25 X 20	1	AEM-1-2025

TOOLS NEEDED:

2.5mm Allen key
10mm Socket
Ratchet
11/16” Wrench