K&N RK-3953 Installation Instructions

Intake System for Harley-Davidson

Part number: RK-3953

trailfortress.com/k-n-intake-system-harley-davidson-rk3953

Scan for fitment, price and install help

INSTALLATION INSTRUCTIONS

PART NUMBER: RK-3953

This Assembly Fits:


SEE CATALOG FOR CURRENT APPLICATIONS

SEE KNFILTERS.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE

Congratulations, you have purchased the finest custom air cleaner that money can buy. With proper care, this filter will last 1 million miles or more. This custom air cleaner replaces the stock air cleaner assembly. The following procedure **MUST** be followed to ensure a proper fit and seal of the custom air cleaner.

TOOLS NEEDED:

5/32 Allen
3/16 Allen
1/4 Allen
5/16 Allen
T-27 Torx
7/16 Socket
1/2 Socket
Ratchet

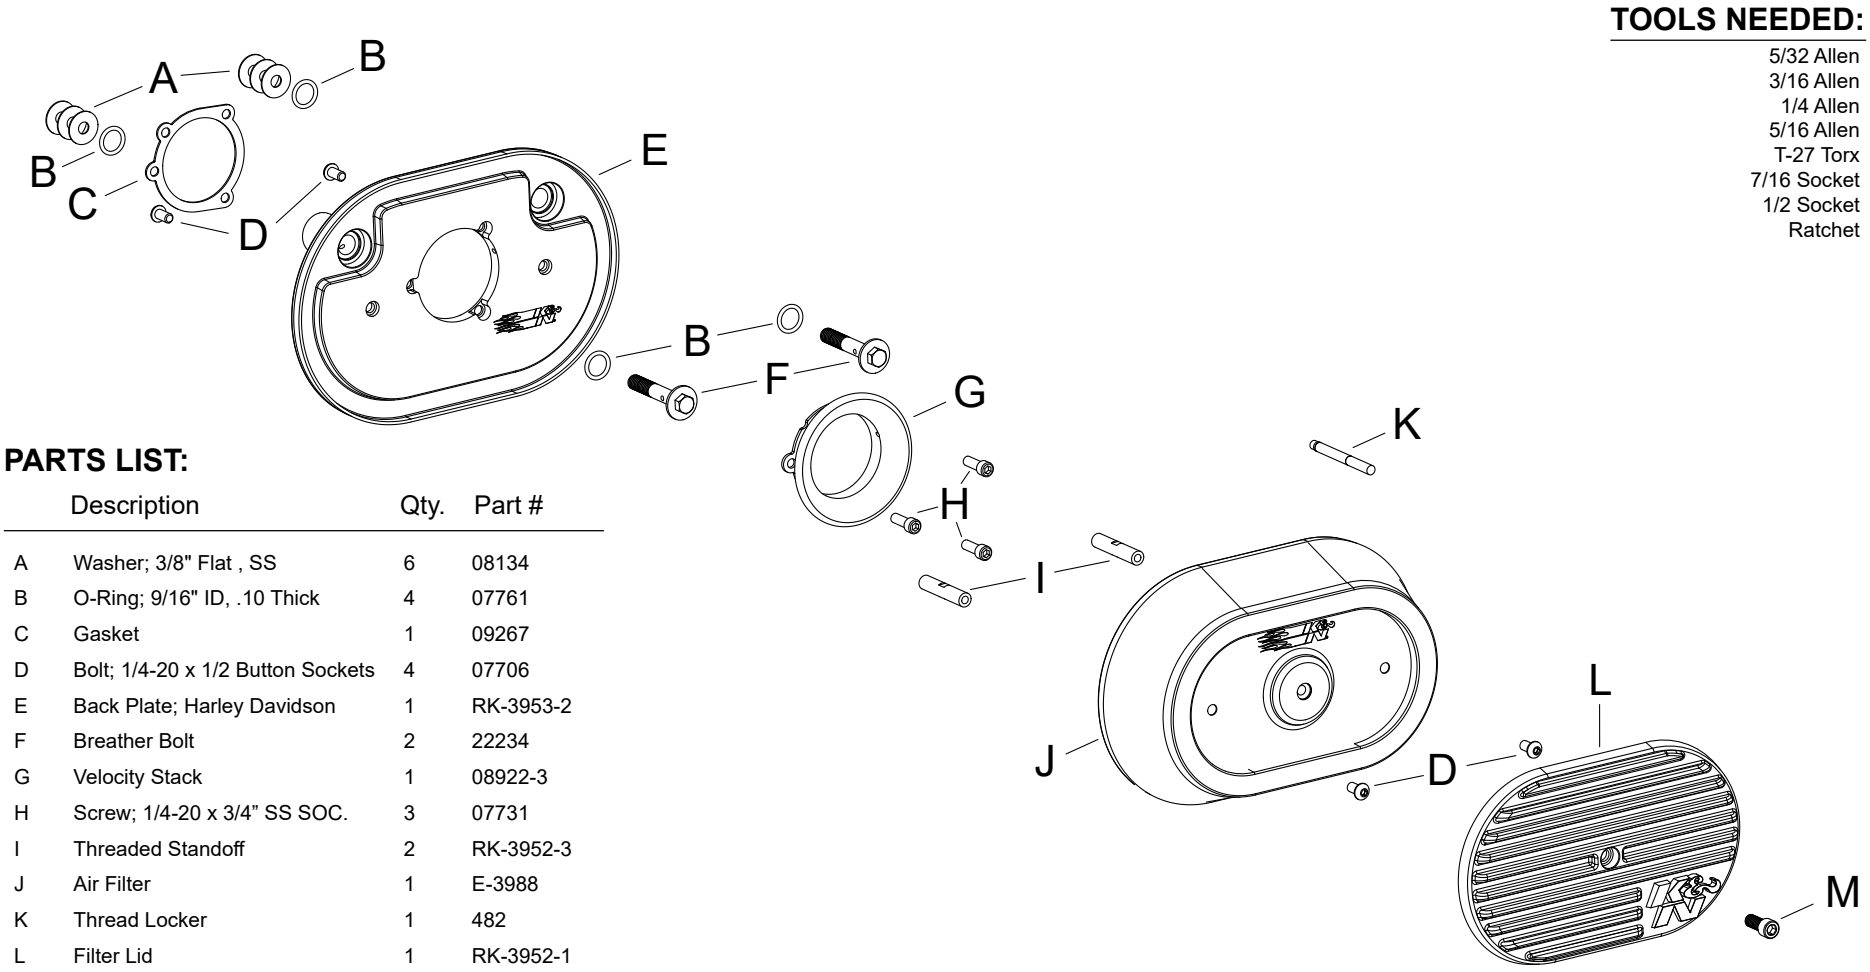

PARTS LIST:

	Description	Qty.	Part #
A	Washer; 3/8" Flat , SS	6	08134
B	O-Ring; 9/16" ID, .10 Thick	4	07761
C	Gasket	1	09267
D	Bolt; 1/4-20 x 1/2 Button Sockets	4	07706
E	Back Plate; Harley Davidson	1	RK-3953-2
F	Breather Bolt	2	22234
G	Velocity Stack	1	08922-3
H	Screw; 1/4-20 x 3/4” SS SOC.	3	07731
I	Threaded Standoff	2	RK-3952-3
J	Air Filter	1	E-3988
K	Thread Locker	1	482
L	Filter Lid	1	RK-3952-1
M	Screw; 5/16-18 x 3/4” SS SOC	1	22251

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.



2. Remove the Allen screw that attaches the air filter cover.



3. Remove the remove the three Torx screws that attach the air filter.



4. Remove the three back plate retaining bolts shown.



5. Remove the two rubber vent adapters from the vent bolts and then remove the two vent bolts.



6. Remove the backing plate and stock gasket. **NOTE: K&N Engineering, Inc. recommends that customers do not discard the factory air intake components.**



7. Install the provided intake velocity stack and the three throttle body bolts in the K&N® back plate.