K&N VF2001 Installation Instructions

VF2001

Part number: VF2001

trailfortress.com/k-n-cabin-air-filter-vf2001

Scan for fitment, price and install help

INSTALLATION INSTRUCTIONS
Part Number: VF2001

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

*** FREE K&N® decal To register your warranty, please see us online at knfilters.com/register. FREE K&N® decal ***

K&N® Cabin Air Filters replace your vehicle's stock cabin filter with a reusable design that cleans and freshens incoming air. They are electrostatically charged to grab and hold dust particles. K&N® cabin air filters help control odors while they help capture most mold, mildew, fungus, spores, bacteria and germs. When they get dirty they can be cleaned and reused and best of all, they come with a 10 year/Million mile limited warranty.

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

When applicable, refer to owner's manual for manufacturers installation/removal instructions. The following are helpful steps when replacing/servicing cabin air filter with K&N® cabin air filter.

1. Open glove box compartment. Fig. 1
2. Locate glove box stop feature. In most vehicles this is located on the right hand side of the glove box.
3. Remove fastener holding stop feature. Depending on your vehicle, the fastener may be a screw or a clip. Allow stop rod or cable to hang free. Fig. 2 & 3 **NOTE: On some models the stop rod assembly may fall off when disengaged from glove box, simply reinstall on retention feature of vehicle.**
4. Apply pressure to the sides of the glove box pushing into the center. This will allow the glove box to hang free allowing access to the cabin filter housing. On some models, there may be clips that need to be twisted and removed. Fig. 4
5. Locate cabin filter housing behind glove box compartment and unfasten clips on the cabin filter tray. Fig. 5
6. Remove cabin filter tray from cabin filter housing. Fig. 6
7. Remove dirty cabin filter. Fig. 7 **NOTE: Most trays have tabs built in. Use caution to ensure you do not bend or break these tabs. Remove any debris that might be present on cabin filter tray and inside the cabin filter housing.**
8. Install K&N® Cabin Filter. Cabin filter will only fit in one direction. Once filter is installed correctly the filter will sit flush inside of tray. Fig. 8
9. Reinstall cabin filter tray into cabin housing, ensure tray is locked into place.
10. Reverse steps 1-4 to complete cabin filter installation. With the cabin filter installed, clean an area on the housing and apply the K&N® Stop Decal. The decal will help notify others that this is a reusable cabin filter.


Fig. 1


Fig. 2


Fig.3


Fig. 4

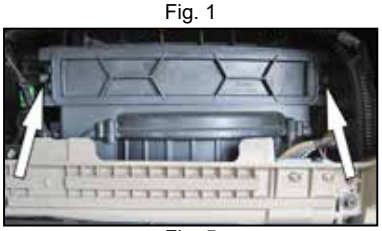
Fig. 5

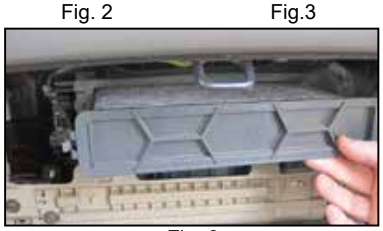
Fig. 6

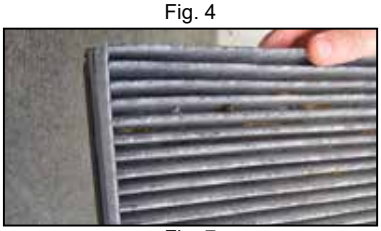
Fig. 7


Fig. 8

Please visit our website knfilters.com for a complete listing of other K&N® products for your vehicle, such as oil filters, air filters, and intake kits. We recommend refreshing your K&N® Cabin Air Filter every 12 months, or 12,000 miles. Use K&N® Refresher kit pt.# 99-6000 which includes the easy to follow instructions.

•1455 Citrus St. P.O. Box 1329, Riverside, C.A. USA 92502 • Tech Service 800-858-3333 • Fax 951-826-4001
•Email: tech@knfilters.com®• WWW: http://www.knfilters.com®

19660C
5/15/17

trailfortress.com/k-n-cabin-air-filter-vf2001