TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N VF2016 Installation Instructions

Washable Cabin Air Filter for Chevrolet Equinox & GMC Terrain

Part number: VF2016

trailfortress.com/k-n-cabin-air-filter-vf2016

Scan for fitment, price and install help

INSTALLATION INSTRUCTIONS
Part Number: VF2016

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

*** FREE K&N® decal To register your warranty, please see us online at knfilters.com/register. FREE K&N® decal ***

K&N® Cabin Air Filters replace your vehicle's stock cabin filter with a reusable design that cleans and freshens incoming air. They are electrostatically charged to grab and hold dust particles. K&N® cabin air filters help control odors while they help capture most mold, mildew, fungus, spores, bacteria and germs. When they get dirty they can be cleaned and reused and best of all, they come with a 10 year/Million mile limited warranty.

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

When applicable, refer to owner's manual for manufacturers installation/removal instructions. The following are helpful steps when replacing/servicing cabin air filter with K&N® cabin air filter.

The following steps can be followed for the Chevrolet and GMC models.

1. Open glove box half way.
2. With glove box open half way, apply pressure on the bottom of the glove box, pushing in towards the dash, this will release the glove box from the hinges allowing you to remove glove box out from the dash. Fig. 2
   Note: Use caution to not apply too much pressure. The bottom of the glove box has hinges that snap into the dash of the vehicle. Fig. 3 & 4.
3. Locate cabin air filter housing behind the glove box, and unfasten clips holding cover onto cabin filter housing. Fig. 5
4. Remove dirty cabin filter from housing. Remove any debris that might be present in the cabin filter housing. Fig. 6
5. Install K&N® Cabin Filter. **Note: Filter can only be installed one way.** Fig. 6
6. Reverse steps 1-3 to complete cabin filter installation. With the cabin filter installed, clean an area on the cowl and apply the K&N® Stop Decal. The decal will help notify others that this is a re-usable cabin filter.



Fig. 1



Fig. 2

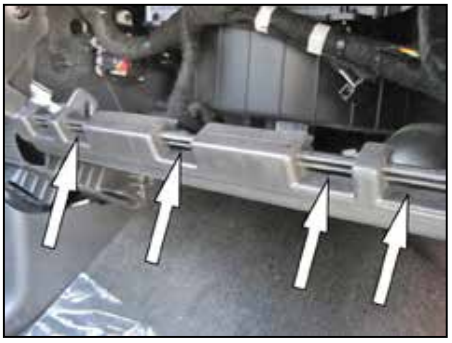

Fig. 3



Fig. 4



Fig. 5



Fig. 6

Please visit our website knfilters.com for a complete listing of other K&N® products for your vehicle, such as oil filters, air filters, and intake kits. We recommend refreshing your K&N® Cabin Air Filter every 12 months, or 12,000 miles. Use K&N® Refresher kit pt.# 99-6000 which includes the easy to follow instructions.

•1455 Citrus St. P.O. Box 1329, Riverside, C.A. USA 92502 • Tech Service 800-858-3333 • Fax 951-826-4001
•Email: tech@knfilters.com®• WWW: http://www.knfilters.com®

11826B
5/12/17

trailfortress.com/k-n-cabin-air-filter-vf2016