TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N VF2054 Installation Instructions

VF2054

Part number: VF2054

trailfortress.com/k-n-cabin-air-filter-vf2054

Scan for fitment, price and install help

INSTALLATION INSTRUCTIONS
Part Number: VF2054

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

*** FREE K&N® decal To register your warranty, please see us online at knfilters.com/register. FREE K&N® decal ***

K&N® Cabin Air Filters replace your vehicle's stock cabin filter with a reusable design that cleans and freshens incoming air. They are electrostatically charged to grab and hold dust particles. K&N® cabin air filters help control odors while they help capture most mold, mildew, fungus, spores, bacteria and germs. When they get dirty they can be cleaned and reused and best of all, they come with a 10 year/Million mile limited warranty.

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

When applicable, refer to owner's manual for manufacturers installation/removal instructions. The following are helpful steps when replacing/servicing cabin air filter with K&N® cabin air filter.

1. Open the glove box and locate the access panel for the cabin filter housing. **NOTE: If the vehicle does not have an access panel in the glove box, carefully push inward on the sides of the glove box to allow it to be dropped below the stops. The cabin filter housing will now be accessible – skip to step 3.** Fig. 1
2. Remove the access panel to reveal the cabin filter housing. Fig 2
3. Remove the cabin filter housing door by squeezing the tabs on the right side and pulling it towards you. Figs. 3 & 4
4. Remove the cabin filter tray (by pulling it towards you) and remove the filter from the plastic tray. Figs. 5 & 6 Note: Remove any dirt and debris that may be present in cabin filter housing.
5. Note the location of the tray divider. It will need to be aligned with the notches in the sides of the K&N® filter. Figs. 6 & 7
6. Install K&N® cabin air filter into tray, with the notches in the filter aligned with the tray divider. **NOTE: Use caution when installing the filter, some trays have small tabs that help retain the filter.** Fig. 8
7. Reverse steps 1-4 to complete the cabin filter installation. With the cabin filter installed, clean an area on the housing and apply the K&N® Stop Decal. The decal will help notify others that this is a reusable cabin filter.

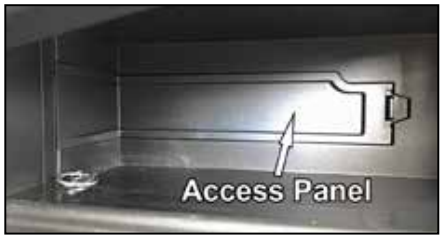

Fig.1


Fig.2


Fig.3


Fig.4


Fig.5

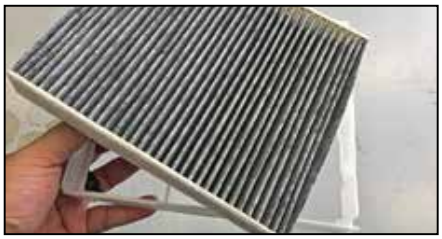
Fig.6


Fig.7

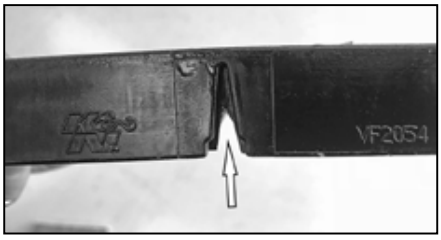

Fig.8


Fig.9

Please visit our website knfilters.com for a complete listing of other K&N® products for your vehicle, such as oil filters, air filters, and intake kits. We recommend refreshing your K&N® Cabin Air Filter every 12 months, or 12,000 miles. Use K&N® Refresher kit pt.# 99-6000 which includes the easy to follow instructions.

•1455 Citrus St. P.O. Box 1329, Riverside, C.A. USA 92502 • Tech Service 800-858-3333 • Fax 951-826-4001
•Email: tech@knfilters.com®• http://www.knfilters.com®

197212
10/24/17

trailfortress.com/k-n-cabin-air-filter-vf2054