TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

K&N VF3023 Installation Instructions

Cabin Air Filter for Tesla Model 3 & Model Y

Part number: VF3023

trailfortress.com/k-n-cabin-air-filter-vf3023

Scan for fitment, price and install help

INSTALLATION INSTRUCTIONS
Part Number: VF3023

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

*** FREE K&N® decal To register your warranty, please see us online at knfilters.com/register. FREE K&N® decal ***

K&N® Cabin Air Filters replace your vehicle's stock cabin filter with a reusable design that cleans and freshens incoming air. They are electrostatically charged to grab and hold dust particles. K&N® cabin air filters help control odors while they help capture most mold, mildew, fungus, spores, bacteria and germs. When they get dirty they can be cleaned and reused and best of all, they come with a No-Hassle Lifetime Limited Warranty.

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

When applicable, refer to owner's manual for manufacturers installation/removal instructions. The following are helpful steps when replacing/servicing cabin air filter with K&N® cabin air filter.

1. Turn off climate control. Locate passenger side foot well cover. **(Fig. 1)**
2. Remove the 4 plastic push rivets and lower the cover. **(Fig. 2 & Fig. 3)**
3. Disconnect the two electrical connections for the light and speaker and set the cover aside. **(Fig. 4 & Fig 5)**
4. On the passenger side of the center console, carefully remove the right side panel from the center console. **(Fig. 6)**
5. Remove the two connectors that are secured to the cabin filter access door. **(Fig. 7)**
6. Locate and remove screw to remove cabin filter door. **(Fig. 8) NOTE: Depending on your vehicle, screw may be in different location.**
7. Remove the two dirty cabin filters by pulling the first one out of the housing, then using the tab on the second cabin filter to pull it upwards and out of the housing. **NOTE: Remove any debris that might be present inside the cabin filter housing. (Fig 9 and Fig. 10)**
8. Install the first K&N cabin air filter and lower it down using the pull strap. Once the first filter installed, slide in the second cabin filter. **(Fig. 11 & Fig. 12)**
9. Tuck the pull straps in the housing and reverse steps 1-6 to complete the cabin filter installation. With the cabin filter installed, clean an area and apply the K&N Stop Decal. The decal with help notify others that this is a reusable cabin filter.

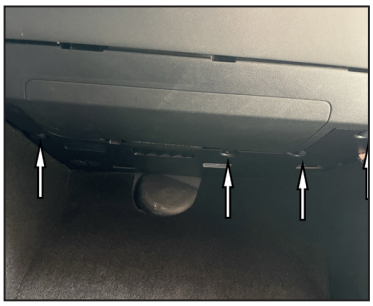

Fig. 1



Fig. 2



Fig. 3

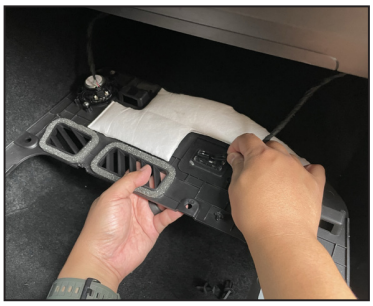

Fig. 4



Fig. 5



Fig. 6

•1455 Citrus St. P.O. Box 1329, Riverside, C.A. USA 92502 • Tech Service 800-858-3333 • Fax 951-826-4001
•Email: tech@knfilters.com®• http://www.knfilters.com®

trailfortress.com/k-n-cabin-air-filter-vf3023