TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

RIGID Industries 37201 Installation Instructions

Toyota Tundra 6 Inch SR-Series Fog Kit, Yellow

Part number: 37201

trailfortress.com/rigid-industries-2022-toyota-tundra-6-inch-sr-series-selective-yellow-fog-light-kit-37201

Scan for fitment, price and install help

INSTALLATION INSTRUCTIONS

2022 TOYOTA TUNDRA 6" SAE SR LIGHT KIT

*Also comes in Clear White or Selective Yellow Colors



PRODUCT INCLUDES:

- (2) 6" SAE SR Lights
- (4) Mount Brackets
- (2) Mount Hardware Kits
- (2) H11 Jumpers

RECOMMENDED TOOLS:

- 11MM SOCKET OR WRENCH
- PHILIPS SCREWDRIVER

THANK YOU FOR PURCHASING RIGID INDUSTRIES' PRODUCTS FOR YOUR VEHICLE.

Please read through all of these Instructions and tips before proceeding with the installation. We do our best to provide a simple installation process for all applications, however a professional installation is always recommended.

IMPORTANT


Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems.

KIT DIAGRAM:

(A) Bracket

(B) Hardware

(C) 6" SAE SR Lights

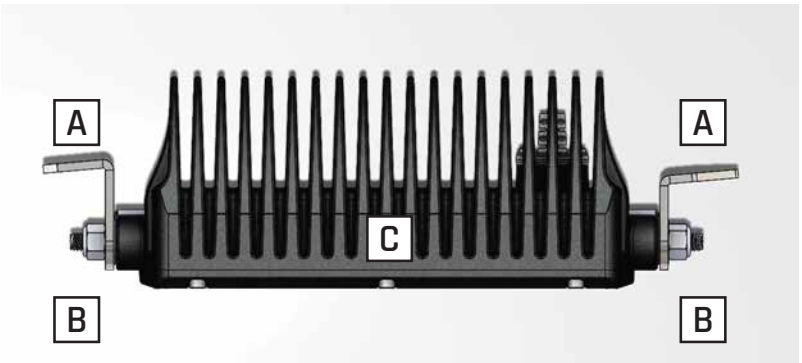

INSTALLATION INSTRUCTIONS

STEP: 1

Attach the brackets to the lights using the provided hardware, using an 11mm socket or wrench.





Place the lamps together to make sure you have the proper bracket on the proper side. Be sure the SAE certification is at the bottom left corner of each light.



PASSENGER SIDE



DRIVER SIDE

STEP: 2

Connect the H11 jumpers to the to the light.



STEP: 3

Remove the upper plastic cover on the Trucks front bumper. This will reveal the mounting points of the stock fog lights. Remove the factory hardware (Philips Screws) holding the factory fog light in its cavity. Unplug the factory wiring harness from the back of the factory fog light. Remove fog light revealing cavity shown below.



STEP: 4

Plug the new SAE Fog Light into the factory harness. Secure the extra length of ingress wire.



Next mount your new Rigid fog light on the stock location using the Phillips head screws.



STEP: 5

Before re-installing the plastic cover on the bumper be sure to aim your lights for best use and output



Your installation is now complete.
Welcome to the Rigid Nation!

WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty 779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337
www.rigidindustries.com

RIGID, SR-M Series, and Rigid Industries are registered and/or common law marks owned by JST Performance, LLC, a Delaware limited liability company d/b/a Rigid Industries.

11-14315-A