# RIGID Industries 41650 Installation Instructions

Side-by-Side Revolve A-Pillar Light Kit

Part number: 41650


trailfortress.com/rigid-industries-side-by-side-revolve-a-pillar-light-kit-41650

Scan for fitment, price and install help

# INSTALLATION INSTRUCTIONS

## UNIVERSAL A, B or C PILLAR KIT

**KIT PART #41650**

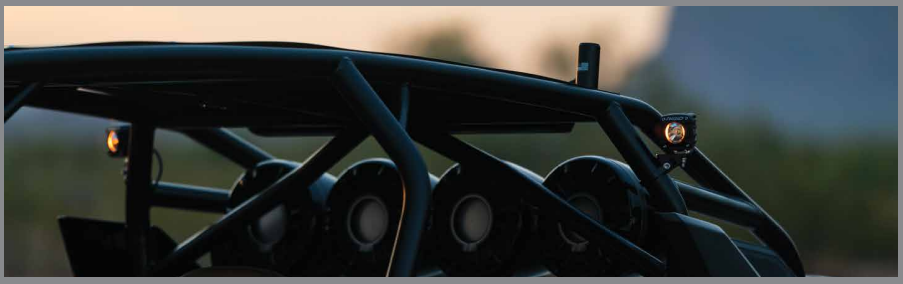

**TOOLS REQUIRED:**

- 5mm Allen tool
- 1/2" Socket

**KIT INCLUDES:**

(2) Revolve Pods
(2) Mount Brackets
(2) Mount Hardware Kits
(2) Light Pod Mounts
(2) 2" Straps
(2) 1.875" Straps
(1) Wire Harness
(2) Light Cover

### NOTE:

1. Any SXS Cage with 2" or 1.875" Tube Cage.

2. Revolve lights are designed to operate from 9V-36V only. Using Revolve products on a 32V or higher system will cause permanent damage to electrical components.

3. Back lighting and forward projecting LED's are intended for off-road use only.

### IMPORTANT

THANK YOU FOR PURCHASING RIGID INDUSTRIES' PRODUCTS FOR YOUR VEHICLE.


Please read through all of these Instructions and tips before proceeding with the installation. We do our best to provide a simple installation process for all applications however a professional installation is always recommended.

Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems.

# INSTALLATION INSTRUCTIONS

## KIT DIAGAM:

A: Rigid Revolve Pod Light
B: Mount
B: Strap

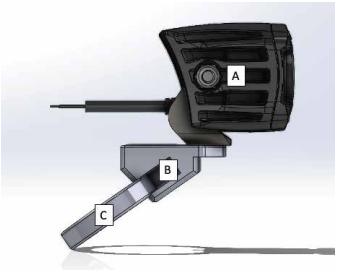



## MOUNTING INSTRUCTIONS:

### STEP: 1

Chose your appropriate tube strap size to attach to the Pod mount.



Place the tube clamp around the area on the tube you want the light to be, then, using the 5mm Allen tighten strap to mount as shown.

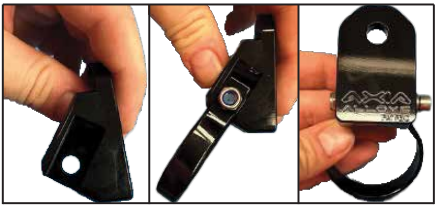


### STEP: 2

Once your Bracket is mounted to the tube and tightened down, proceed to mount your Light Pod, using the ½" Socket. Your install is now complete.



# INSTALLATION INSTRUCTIONS

## WIRING INSTRUCTIONS

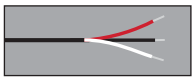

RED WIRE = PROJECTING TRIGGER
BLACK WIRE = GROUND
WHITE WIRE = BACK LIGHTING TRIGGER

IMPORTANT

Always disconnect the vehicle battery terminals before servicing the electrical system

### STEP: 1

Match the light pigtail to the harness colors: Red to Red (Forward projecting LED +12v trigger), White to White (back-lighting LED +12v trigger), and Black to Black (shared ground).

### STEP: 2

Use butt connectors with appropriate wire AWG.

### STEP: 3


Find a desired location for switches and drill a 3/4" hole for each switch.

### STEP: 4

Connect leads from wire harness to switch using the following diagrams:

**POD**


**3-POSITION SWITCH**

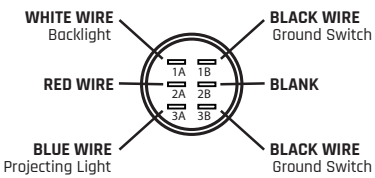


**NOTE:**
Black wires are interchangable between switch position 1B and 3B

**BAR**

**FORWARD PROJECTING LED'S**

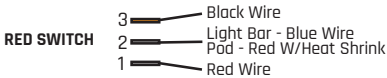


**BACK-LIGHTING LED'S**




### STEP: 5

Route main power and ground leads from the harness to the battery terminals and attach the RED lead to battery +12v and the BLACK lead directly to the battery ground.

### STEP: 6

Reconnect the negative battery terminal and turn switches on to verify lights are functional.

Wiring: Wire your lights according to the instructions included with the light. Take care to avoid any heat sources and sharp or abrasive surfaces.

Your installation is now complete.
Welcome to the Rigid Nation!


WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty 779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337
www.rigidindustries.com
RIGID, Revolve and Rigid Industries are registered and/or common law marks owned by JST Performance, LLC, a Delaware limited liability company d/b/a Rigid Industries.


11-14442-A



trailfortress.com/rigid-industries-side-by-side-revolve-a-pillar-light-kit-41650

## NOTES