RIGID Industries 46701 Installation Instructions

Toyota Tundra A-Pillar Mount (2014-2020)

Part number: 46701

trailfortress.com/rigid-industries-2014-2020-toyota-tundra-a-pillar-mount-fits-360-series-d-series-d-ss-46701

Scan for fitment, price and install help

INSTALLATION INSTRUCTIONS

2014-2020 Toyota® Tundra® A-Pillar Mount



PRODUCT INCLUDES:
(2) RIGID A-Pillar Mounting Brackets
Mounting Hardware

***THIS MOUNT FITS THE FOLLOWING LIGHTS:**
(2) 4" 360-Series®, (2) D-Series PRO®, (2) D-SS PRO®,
(2) Radiance Pods®, (2) SR-M PRO®, or (2) SR-Q PRO®

IMPORTANT

THANK YOU FOR PURCHASING RIGID INDUSTRIES' PRODUCTS FOR YOUR VEHICLE.
Please read through all of these Instructions and tips before proceeding with the installation.
We do our best to provide a simple installation process for all applications however
a professional installation is always recommended.

Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems.

trailfortress.com/rigid-industries-2014-2020-toyota-tundra-a-pillar-mount-fits-360-series-d-series-d-ss-46701

STEP 1

Open the vehicle's hood and locate the hood hinges, remove top bolt from hinge using 12 mm socket. Driver side shown.

See Figure 1

FIGURE 1



STEP 2

Under the hood, attach the A-Pillar bracket to the vehicles top bolt loosely. Slightly loosen lower bolt to create a gap.

See Figures 2.1 & 2.2

FIGURE 2.1



FIGURE 2.2



trailfortress.com/rigid-industries-2014-2020-toyota-tundra-a-pillar-mount-fits-360-series-d-series-d-ss-46701

STEP 3

Gently lower hood but do not latch. Position the light mounting bracket to allow installation of the carriage bolt, washer and nut. Use a 13mm wrench to tighten the nut to secure the light to the bracket.

See Figure 3

FIGURE 3



STEP 4

Open the hood, swing the bracket over and tighten bolts to 10 ft-lbs. Do not over tighten.

See Figures 4.1 & 4.2

FIGURE 4.1

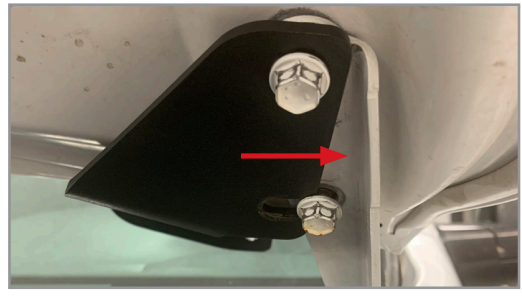


FIGURE 4.2



STEP 5

Aim lights to desired angle and repeat steps for passenger side.

See Figure 5

FIGURE 5



trailfortress.com/rigid-industries-2014-2020-toyota-tundra-a-pillar-mount-fits-360-series-d-series-d-ss-46701

Wiring: Wire your lights according to the instructions included with the light. Take care to avoid any heat sources and sharp or abrasive surfaces.

Your installation is now complete.
Welcome to the RIGID Nation!

WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty

779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337
www.rigidindustries.com

RIGID and Rigid Industries are registered and/or common law marks owned by JST Performance, LLC, a Delaware limited liability company d/b/a Rigid Industries.

11-13799-A

trailfortress.com/rigid-industries-2014-2020-toyota-tundra-a-pillar-mount-fits-360-series-d-series-d-ss-46701