# Rough Country 10205 Installation Instructions

10205

Part number: 10205

trailfortress.com/rough-country-bed-rack-molle-panel-10205

Scan for fitment, price and install help

ROUGH COUNTRY
SUSPENSION SYSTEMS®

921102050

# GM 1500 2019-23 Cargo Rack MOLLE Panel

**Thank you for choosing Rough Country for all your vehicle needs.**

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.
If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.
Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.
Periodically check all hardware for tightness.

**KIT CONTENTS:**
**Cargo Rack MOLLE Half Panel x2**
**Cargo Rack LH Bracket x2**
**Cargo Rack RH Bracket x2**
**Cargo Rack Straight Bracket x4**
**Hardware Bag x1**

**TOOLS NEEDED:**
**5mm Allen Wrench or Socket**
**Level**

**HARDWARE INCLUDED:**
**8mm Hammer Nut x8**
**8mm Flange Nut x8**
**8mm x 20mm bolt x16**
**8mm washer x16**

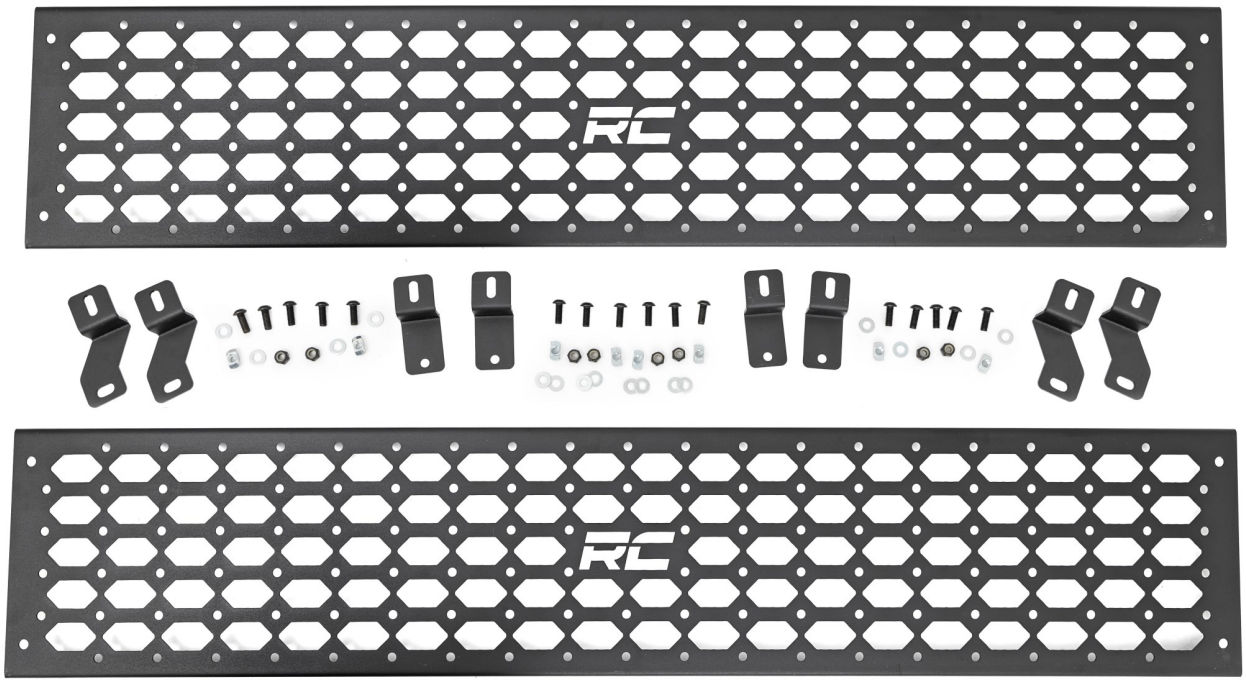

**Torque Specs:**

| Size | Grade 5 | Grade 8 | Size | Class 8.8 | Class 10.9 |
|---|---|---|---|---|---|
| 5/16” | 15 ft/lbs | 20ft/lbs | 6MM | 5ft/lbs | 9ft/lbs |
| 3/8” | 30 ft/lbs | 35ft/lbs | 8MM | 18ft/lbs | 23ft/lbs |
| 7/16” | 45 ft/lbs | 60ft/lbs | 10MM | 32ft/lbs | 45ft/lbs |
| 1/2” | 65 ft/lbs | 90ft/lbs | 12MM | 55ft/lbs | 75ft/lbs |
| 9/16” | 95 ft/lbs | 130ft/lbs | 14MM | 85ft/lbs | 120ft/lbs |
| 5/8” | 135ft/lbs | 175ft/lbs | 16MM | 130ft/lbs | 165ft/lbs |
| 3/4” | 185ft/lbs | 280ft/lbs | 18MM | 170ft/lbs | 240ft/lbs |