TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 1044 Installation Instructions

0-3.5in Front Track Bar for Jeep Wrangler (1997-2006)

Part number: 1044

trailfortress.com/0-3-5in-front-track-bar-jeep-wrangler-rough-country-1044

Scan for fitment, price and install help



92104400

TJ FORGED FRONT ADJ TRACK BAR KIT FOR 0”-3 1/2” LIFT

Thank you for choosing Rough Country for your Jeep off road needs.

Please read all the instructions before beginning the installation.

PRODUCT USE INFORMATION

We will be happy to answer any questions regarding our products by calling us @ 800-222-7023. Rough Country will not be responsible for any product that is altered. **This kit is for use with vehicles lifted 0”- 3” of lift.**

TOOLS NEEDED

DRILL MOTOR
13/32” DRILL BIT
15MM SOCKET / WRENCH
18MM SOCKET / WRENCH
19MM SOCKET / WRENCH
9/16” SOCKET / WRENCH
5/8” WRENCH
11/16” WRENCH

KIT CONTENTS

1-TRACK ROD BRACKET
1-ADJ FORGED TRACK BAR

1-POLY BAG CONTAINING:

1-10MM X 70MM BOLT
2-3/8” FLAT WASHERS
1-10MM LOCK NUT
1-1/2” X 1 3/4” BOLT
1-1/2” FLAT WASHER
1-1/2” LOCK NUT
1-12MM X 80MM BOLT
1-12MM LOCK NUT
1-3/8” X 2” BOLT
2-3/8” FLAT WASHERS
1-3/8” LOCK NUT



INSTALLATION INSTRUCTIONS

1. Remove the track rod from the axle and from the frame using a 15mm (axle) & 18mm wrench (frame).
2. Grind the back side of the mount smooth to allow the track rod bracket to be installed. **See Photo 1.**
3. Install the new track rod bracket on the frame as shown in **Photo 2** using the supplied 1/2òx 1 3/4òbolt, washer & nut in the stock mount. Tighten using a 19mm Socket & wrench. **View from the passenger side.**

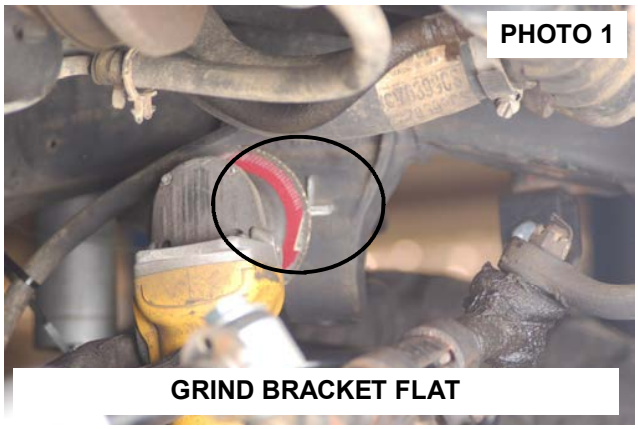


PHOTO 1

GRIND BRACKET FLAT

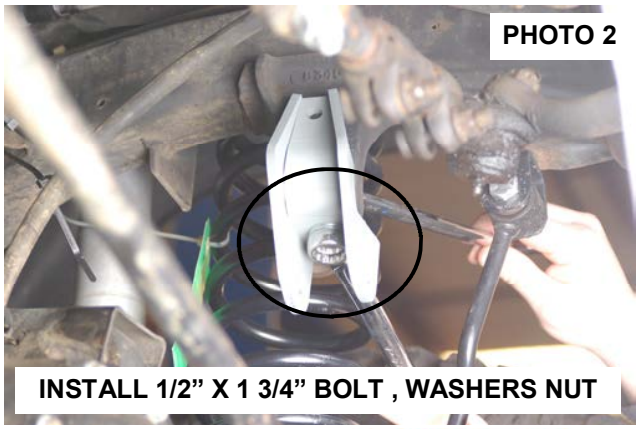


PHOTO 2

INSTALL 1/2” X 1 3/4” BOLT , WASHERS NUT