TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 10478 Installation Instructions

Cold Air Intake for Chevrolet & GMC 2500 HD/3500 HD (2017-2019)

Part number: 10478

trailfortress.com/cold-air-intake-chevrolet-gmc-2500-hd-3500-hd-rough-country-10478

Scan for fitment, price and install help



CHEVY / GMC 2017-19 2500/3500 Silverado / Sierra Cold Air Intake V8-6.6L Turbo Diesel

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.


Periodically check all hardware for tightness.

NOTICE: NOT LEGAL FOR SALE OR USE IN CALIFORNIA OR OTHER STATES ADOPTING CARB REGULATIONS

KIT CONTENTS:
- Air Filter x1
- Air Tube x1
- Edge Trim
- Heat Shield x1
- Filter Adaptor x1
- Filter Clamp x1
- Rubber Filter tube/filter coupler x2
- Filter Tube Clamps x4

TOOLS NEEDED:
- 2.5mm Allen Wrench
- 4mm Allen Wrench
- Flat Bit Driver
- 10mm Socket
- 13mm Socket
- Ratchet
- Side Cutters

HARDWARE INCLUDED:
- 4mm Button Head Bolts x2
- 6mm Button head Bolts x2
- 6mm Lock Washer x2
- 6mm Flat Washer x2

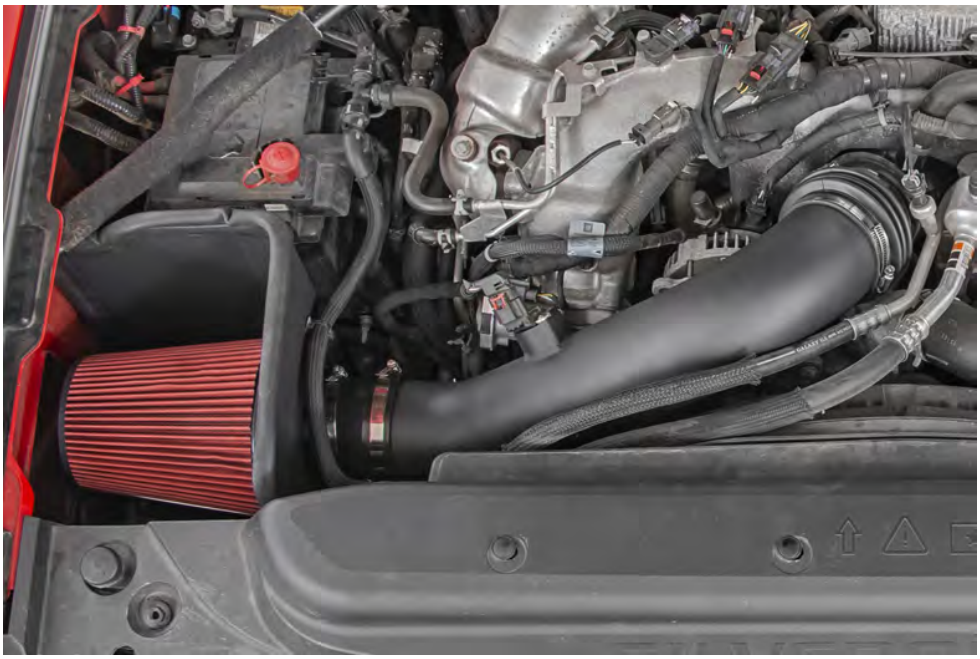

Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16”	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8”	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16”	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2”	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16”	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8”	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4”	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs