TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

# Rough Country 10531 Installation Instructions

8-Inch Front Tube Fender Flares for Jeep Wrangler (2007-2017)

Part number: 10531

trailfortress.com/8-inch-front-tube-fender-flares-jeep-wrangler-rough-country-10531

Scan for fitment, price and install help

10531

# Jeep JK Front Flat Fenders

**Thank you for choosing Rough Country**

Please read instructions before beginning installation. Check the kit hardware against the parts list and product layout. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have needed tools.

If questions exist we will be happy to answer any questions concerning the design, function, and correct use of this product.

**⚠NOTICE Painted fenders cannot be returned.**

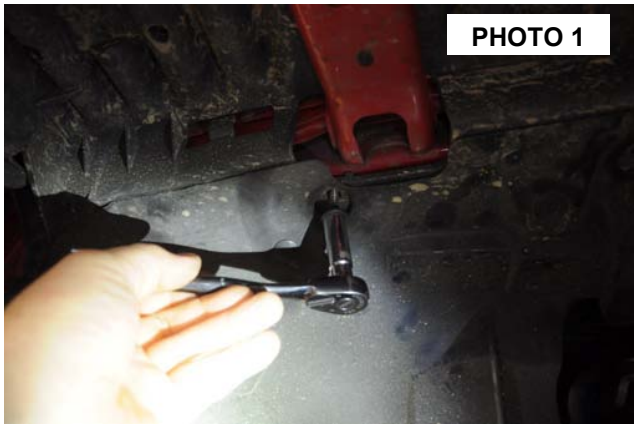
**Kit Contents:**
2– Front Fenders
18-8mmx25mm Button Head Bolts
18-8mm Flat Washers
18-8mm Flange Nuts

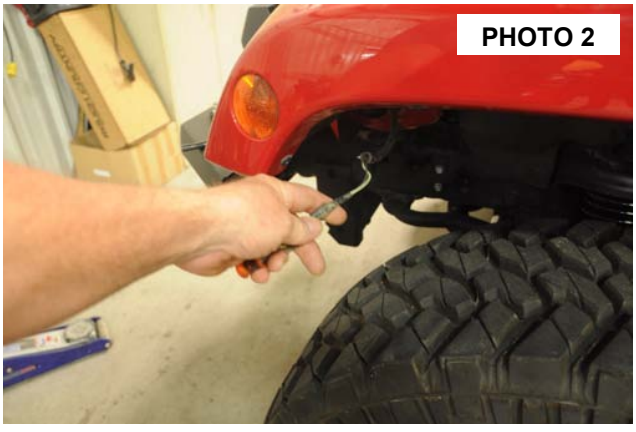


**Tools Needed:**
Pliers
Flat Screwdriver
5mm Allen
10mm Socket
13mm Wrench
5/16" Drill
Drill Motor
Ratchet
Grinder
Cutoff Wheel
Body Saw

**INSTALLATION**

1. Place vehicle on a flat surface and set emergency brake.
2. Using a flat screwdriver, remove the plastic clips from the factory fender liner.
3. Using a 10mm socket, remove the 5 bolts securing the fender liner and the fender. Retain hardware for re-use. **See Photo 1.**
4. Carefully, unplug the turn signal from the harness.


PHOTO 1


PHOTO 2