TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

Rough Country 10532 Installation Instructions

5-Inch Rear Tube Fender Flares for Jeep Wrangler (2007-2017)

Part number: 10532

trailfortress.com/5-inch-rear-tube-fender-flares-jeep-wrangler-rough-country-10532

Scan for fitment, price and install help

ROUGH COUNTRY SUSPENSION SYSTEMS®

10532

Jeep JK Rear Flat Fenders

Thank you for choosing Rough Country

Please read instructions before beginning installation. Check the kit hardware against the parts list and product layout. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have needed tools.

If questions exist we will be happy to answer any questions concerning the design, function, and correct use of this product.

⚠NOTICE Painted fenders cannot be returned.

Kit Contents:

2– Rear Fenders
- 8-6mm x 25mm Button Head Bolts
- 8-6mm Flat Washers
- 8-6mm Nutserts
- 4-8mm x 25mm Button Head Bolts
- 4-8mm Flange Nuts
- 4-8mm Flat Washers
- 1-Nutsert Installation Tool



Tools Needed:
Pliers
Flat Screwdriver
3/16” Allen
10mm Socket
13mm Wrench
5/16” Drill
Drill Motor
Ratchet
Grinder
Cutoff Wheel
Body Saw

INSTALLATION

1. Place vehicle on a flat surface and set emergency brake.
2. Using a flat screwdriver or clip removal tool, remove the 6 plastic clips from the factory fender liner. Retain for reuse. **See Photo 1.**
3. Firmly grasp the front of the factory fender and lift up to release the mounting clips, working your way to the rear of the fender. **See Photo 2.**





4. Using pliers or a removal tool, remove the factory mounting clips from the body and discard.
5. Install 4 of the supplied 6mm nutserts using the supplied nutsert installation tool. **See Photos 3 & 4.**

PHOTO 3



PHOTO 4

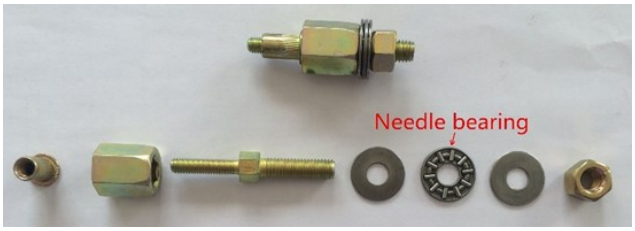

6. **Skip to step 12 if you are not going to use the factory fender liners.**
7. Insert the factory fender liner in the wheel well. Using the body as a guide mark the fender liner. **See Photos 5 & 6.**
8. Using a cutoff wheel or body saw, cut the factory fender liner on the marks made in step 7.
9. Test fit the fender liner and trim as needed to get the desired fit.
10. Install the fender liner using the factory clips.
11. Sand or file the cut edges for a cleaner finished look.

PHOTO 5



PHOTO 6



12. Install the supplied flat fender using the supplied 6mm x 25mm bolts and 6mm washers in the holes with the nutserts and the supplied 8mm x 25mm bolts and washers in the 2 upper middle holes. **See Photo 7.**
13. Tighten the 6mm hardware using a 4mm Allen and the 8mm hardware using a 5mm Allen and 13mm wrench.

PHOTO 7



POST INSTALLATION INSTRUCTIONS

1. Check and retighten hardware at 50 miles and again at 500 miles. Periodically check all hardware for tightness.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable , State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.