TRAIL FORTRESS

BUILT FOR THE TRAIL. CHECKED FOR YOUR TRUCK.

# Rough Country 1055 Installation Instructions

Bumper Stinger Bar for Jeep Cherokee XJ (1984-2001)

Part number: 1055

trailfortress.com/bumper-stinger-bar-jeep-cherokee-xj-rough-country-1055

Scan for fitment, price and install help

92105700A

ROUGH COUNTRY SUSPENSION SYSTEMS®

1057BAG4

# JEEP XJ WINCH BUMPER

**Thank you for choosing Rough Country for all your suspension needs.**

Please read instructions before beginning installation. Check the kit hardware against the parts list. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have needed tools.

**PRODUCT USE INFORMATION**

**⚠WARNING** Please read instructions before beginning installation. Check the kit hardware against the parts list and product layout. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have needed tools.

**⚠WARNING** On 84-96 models XJ's the lower part of the fender flare that is below the factory bumper line will have to be cut off and removed.

If questions exist we will be happy to answer any questions concerning the function and correct use of this product.

The installer must verify that the mounting kit does not interfere with the factory air bag sensors, which must not be relocated or modified in any way. The vehicles air bag system may not operate properly if the winch mounting kit is not mounted in compliance with the vehicle manufacturers recommendations.

**Optional Accessories are available for the Rough Country winch bumper including: See back page for info:**

**Part # 1055...Stinger**



**Kit Contents:**

1057Box1
- Bumper

1057Box2
- Winch Plate
- Frame Brackets

1057BAG1-
- 22-1/2" x 1 1/2" Bolt
- 22-1/2" Lock nuts
- 44-1/2" Flat Washers
- 4-7/16" x 4" Bolts
- 4-7/16" x 1 1/4" Bolts
- 14-7/16" Flat Washers
- 6-7/16" Lock Nuts
- 2-10mm x 35mm
- 2-10mm Flat Washers
- 2-12mm x 35mm Bolts
- 2-12mm Flange Lock nuts

1057BAG3-Accessrory Hardware Bag
- 14-1/2" X 1 1/2" Allen Head Bolts
- 14-Lock Nuts

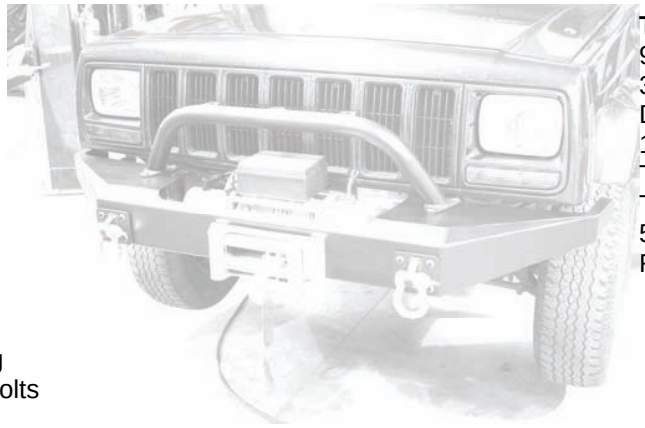

**Tools Needed:**
9/16" Socket/ Wrench
3/4" Socket / Wrench
Drill Motor
15/32" Drill Bit
T30 Torx Head Bit
T55 Torx head
5/16" Allen Head Wrench
Rachet