# Rough Country 10550A Installation Instructions

Cold Air Intake for Jeep Wrangler JK (2012-2017)

Part number: 10550A

trailfortress.com/cold-air-intake-jeep-wrangler-jk-rough-country-10550a

Scan for fitment, price and install help

921105500

ROUGH COUNTRY
SUSPENSION SYSTEMS®

# 2012-2018 JEEP JK 3.6L COLD AIR INTAKE KIT

**Thank you for choosing Rough Country for all your vehicle needs.**

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. .

**⚠NOTICE NOT FOR SALE IN CALIFORNIA.**

**KIT CONTENTS:**
- Rough Country Performance Filter
- Heat shield
- Shield gasket
- Throttle Body coupler
- Intake Tube

**TOOLS NEEDED:**
- 4mm Allen Wrench
- 8mm Wrench
- 10mm Wrench
- Flat head Screw driver

**HARDWARE INCLUDED:**
- Rubber isolator w/ Serrated nuts, washers
- 2-Hose tie downs (Over Flow Hose)
- 2-Medium Clamps (Throttle Body coupler)
- 1-Small Clamp (Crank Case Hose)
- 1-Large Clamp
- 2-6mm x 40mm Bolts
- 2-6mm Nylon Lock Nuts
- 2-6mm Flat Washers
- 2-6mm Large OD Washers
- 2-Shield Spacers
- Intake tube grommet
- 6-5mm x 10mm Allen Bolts
- 6-5mm Nuts

## INSTALLATION INSTRUCTIONS

1. Remove the engine cover by gently pulling on the cover. **See Photo 1**.
2. Unplug the Air flow sensor as shown in **Photo 2**.

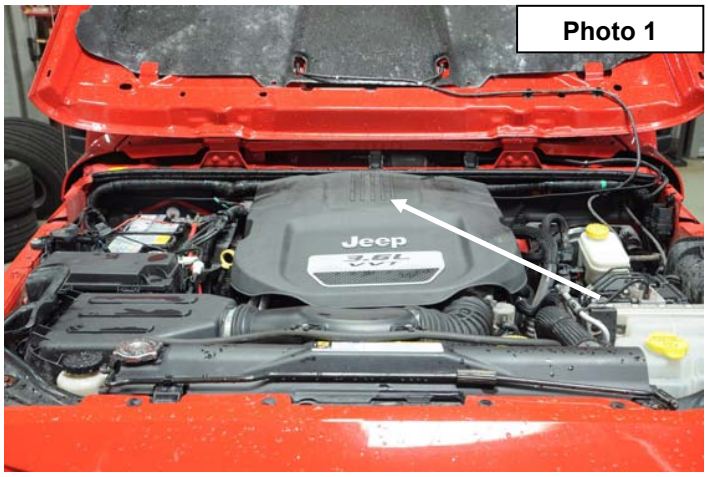


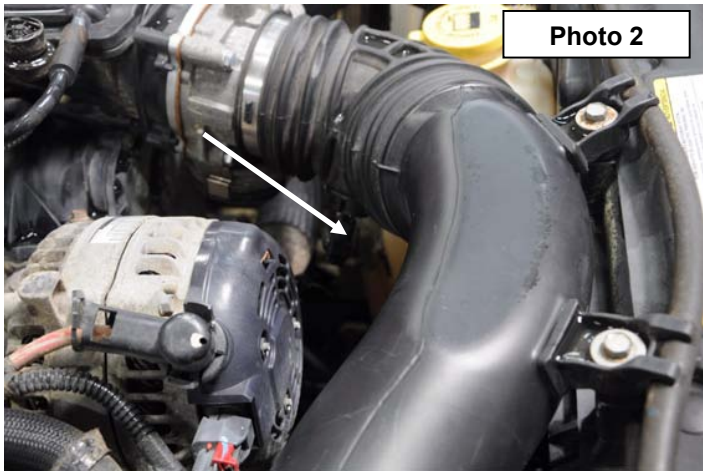


3. Loosen clamp at the throttle body. **See Photo 3**.
4. Using a 10mm socket, remove the two bolts holding the intake to the fan shroud. Retain hardware for reuse. **See Photo 4**.

